

Note:

× Functions marked with × is fully supported and already existed in former software version.

Number Index number of the special function , you can find the name from the special function table.

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(LC)	2007	D 1.5 TCI-D	ENGINE [Engine Control]	×	×	×	×	×	
Europe/General	ACCENT(LC)	2007	D 1.5 TCI-D	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	ACCENT(LC)	2007	D 1.5 TCI-D	ABS [Anti - Lock Brake]		×	×	×	×	0062
Europe/General	ACCENT(LC)	2007	D 1.5 TCI-D	AIRBAG [SRE - Smart (Dual Stage)]	×	×	×			
Europe/General	ACCENT(LC)	2007	D 1.5 TCI-D	AIRBAG [SRE - LC / HMC]	×	×	×			
Europe/General	ACCENT(LC)	2007	D 1.5 TCI-D	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2007	G 1.3 SOHC	ENGINE [Unleaded EOBD]	×	×	×	×		
Europe/General	ACCENT(LC)	2007	G 1.3 SOHC	ENGINE [Leaded All]	×	×	×	×		0070
Europe/General	ACCENT(LC)	2007	G 1.3 SOHC	ENGINE [Unleaded GEN]	×	×	×	×		
Europe/General	ACCENT(LC)	2007	G 1.3 SOHC	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	ACCENT(LC)	2007	G 1.3 SOHC	ABS [Anti - Lock Brake]		×	×	×	×	0062
Europe/General	ACCENT(LC)	2007	G 1.3 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	×	×	×			
Europe/General	ACCENT(LC)	2007	G 1.3 SOHC	AIRBAG [SRE - LC / HMC]	×	×	×			
Europe/General	ACCENT(LC)	2007	G 1.3 SOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0053, 0109
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	ENGINE [Unleaded EOBD]	×	×	×	×		
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	ENGINE [Leaded All]	×	×	×	×		0070
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	ENGINE [Unleaded GEN]	×	×	×	×		
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	ABS [Anti - Lock Brake]		×	×	×	×	0062
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	×	×	×			
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	AIRBAG [SRE - LC / HMC]	×	×	×			
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0053, 0109
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×		
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	ENGINE [Leaded All]	×	×	×	×		0070
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	ENGINE [Unleaded GEN]	×	×	×	×		
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	ABS [Anti - Lock Brake]		×	×	×	×	0062
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	AIRBAG [SRE - Smart (Dual Stage)]	×	×	×			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2006	D 1.5 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ACCENT(LC)	2006	D 1.5 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2006	D 1.5 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2006	D 1.5 TCI-D	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2006	D 1.5 TCI-D	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2006	D 1.5 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2006	G 1.3 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2006	G 1.3 SOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	ACCENT(LC)	2006	G 1.3 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2006	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2006	G 1.3 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2006	G 1.3 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2006	G 1.3 SOHC	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2006	G 1.3 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0109
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0109
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2005	D 1.5 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ACCENT(LC)	2005	D 1.5 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2005	D 1.5 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(LC)	2005	D 1.5 TCI-D	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2005	D 1.5 TCI-D	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2005	D 1.5 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2005	G 1.3 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2005	G 1.3 SOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	ACCENT(LC)	2005	G 1.3 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2005	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2005	G 1.3 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2005	G 1.3 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2005	G 1.3 SOHC	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2005	G 1.3 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0109
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0109
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2004	D 1.5 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ACCENT(LC)	2004	D 1.5 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2004	D 1.5 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2004	D 1.5 TCI-D	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2004	D 1.5 TCI-D	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2004	D 1.5 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2004	G 1.3 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2004	G 1.3 SOHC	ENGINE [Leaded All]	x	x	x	x		0070

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(LC)	2004	G 1.3 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2004	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2004	G 1.3 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2004	G 1.3 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2004	G 1.3 SOHC	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2004	G 1.3 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2003	D 1.5 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ACCENT(LC)	2003	D 1.5 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2003	D 1.5 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2003	D 1.5 TCI-D	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2003	D 1.5 TCI-D	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2003	D 1.5 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2003	G 1.3 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2003	G 1.3 SOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	ACCENT(LC)	2003	G 1.3 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2003	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2003	G 1.3 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2003	G 1.3 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2003	G 1.3 SOHC	AIRBAG [SRE - LC / HMC]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(LC)	2003	G 1.3 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x		0053
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	ENGINE [Unleaded OBD - II]	x	x	x	x		0053
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x		0053
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	AIRBAG [SRE - Smart (Dual Stage)]	x	x	x			
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	AIRBAG [SRE - LC / HMC]	x	x	x			
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2002	D 1.5 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ACCENT(LC)	2002	D 1.5 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2002	D 1.5 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2002	D 1.5 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ACCENT(LC)	2002	D 1.5 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2002	G 1.3 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2002	G 1.3 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2002	G 1.3 SOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	ACCENT(LC)	2002	G 1.3 SOHC	ENGINE [Leaded All]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(LC)	2002	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2002	G 1.3 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2002	G 1.3 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ACCENT(LC)	2002	G 1.3 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2002	G 1.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2002	G 1.5 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	ACCENT(LC)	2002	G 1.5 DOHC	ENGINE [Leaded All]	x	x	x	x		
Europe/General	ACCENT(LC)	2002	G 1.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x		0053
Europe/General	ACCENT(LC)	2002	G 1.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2002	G 1.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2002	G 1.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2002	G 1.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ACCENT(LC)	2002	G 1.5 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	ENGINE [Unleaded OBD - II]	x	x	x	x		0053
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	ENGINE [Leaded All]	x	x	x	x		
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x		
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x		0053
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2001	D 1.5 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ACCENT(LC)	2001	D 1.5 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2001	D 1.5 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2001	D 1.5 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ACCENT(LC)	2001	D 1.5 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2001	G 1.3 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(LC)	2001	G 1.3 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2001	G 1.3 SOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	ACCENT(LC)	2001	G 1.3 SOHC	ENGINE [Leaded All]	x	x	x	x		
Europe/General	ACCENT(LC)	2001	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2001	G 1.3 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2001	G 1.3 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ACCENT(LC)	2001	G 1.3 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	ENGINE [Leaded All]	x	x	x	x		
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x		0053
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2001	G 1.5 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2001	G 1.5 SOHC	ENGINE [Unleaded OBD - II]	x	x	x	x		0053
Europe/General	ACCENT(LC)	2001	G 1.5 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2001	G 1.5 SOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	ACCENT(LC)	2001	G 1.5 SOHC	ENGINE [Leaded All]	x	x	x	x		
Europe/General	ACCENT(LC)	2001	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2001	G 1.5 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2001	G 1.5 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ACCENT(LC)	2001	G 1.5 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x		
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x		0053
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2000	D 1.5 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ACCENT(LC)	2000	D 1.5 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2000	D 1.5 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(LC)	2000	D 1.5 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ACCENT(LC)	2000	D 1.5 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2000	G 1.3 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2000	G 1.3 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2000	G 1.3 SOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	ACCENT(LC)	2000	G 1.3 SOHC	ENGINE [Leaded All]	x	x	x	x		
Europe/General	ACCENT(LC)	2000	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2000	G 1.3 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2000	G 1.3 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ACCENT(LC)	2000	G 1.3 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	ENGINE [Leaded All]	x	x	x	x		
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x		0053
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2000	G 1.5 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2000	G 1.5 SOHC	ENGINE [Unleaded OBD - II]	x	x	x	x		0053
Europe/General	ACCENT(LC)	2000	G 1.5 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2000	G 1.5 SOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	ACCENT(LC)	2000	G 1.5 SOHC	ENGINE [Leaded All]	x	x	x	x		
Europe/General	ACCENT(LC)	2000	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2000	G 1.5 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2000	G 1.5 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ACCENT(LC)	2000	G 1.5 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x		
Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x		0053
Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(MC)	2011	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2011	D 1.5 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2011	D 1.5 TCI-U	ABS [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2011	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2011	D 1.5 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2011	D 1.5 TCI-U	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	ACCENT(MC)	2011	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(MC)	2011	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	ABS [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0113
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0109, 0113, 0143
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	ABS [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2010	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2010	D 1.5 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2010	D 1.5 TCI-U	ABS [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2010	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			0102

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(MC)	2010	D 1.5 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2010	D 1.5 TCI-U	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	ACCENT(MC)	2010	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(MC)	2010	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	ABS [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	EPS [Motor driven Power Steering]	x	x	x	x		
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0113
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0109, 0113, 0143
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	ABS [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	ABS [ABS (MGH - 25)]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	ABS [ABS (MGH - 40)]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	EPS [Motor Driven Power Steering]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	ABS [ABS (MGH - 25)]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	ABS [ABS (MGH - 40)]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	EPS [Motor driven Power Steering]	x	x	x	x		
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0113
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0109, 0113, 0143
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	ABS [ABS (MGH - 25)]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	ABS [ABS (MGH - 40)]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	ABS [Anti - Lock Brake (MGH - 25)]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	ABS [Anti - Lock Brake (MGH - 40)]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	EPS [Motor Driven Power Steering]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	ABS [Anti - Lock Brake (MGH - 25)]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	ABS [Anti - Lock Brake (MGH - 40)]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0113
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0109, 0113, 0143
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	ABS [Anti - Lock Brake (MGH - 25)]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	ABS [Anti - Lock Brake (MGH - 40)]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2007	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2007	D 1.5 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2007	D 1.5 TCI-U	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2007	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2007	D 1.5 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2007	D 1.5 TCI-U	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	ACCENT(MC)	2007	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(MC)	2007	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0113
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0109, 0113, 0143
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2006	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2006	D 1.5 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2006	D 1.5 TCI-U	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2006	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2006	D 1.5 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2006	D 1.5 TCI-U	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	ACCENT(MC)	2006	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0113
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0109, 0113, 0143
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x		0034, 0059, 0109, 0143
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	x	x	x	x		0029
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	EPS [Power Steering]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	EPS [Power Steering]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK -)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	AT [Continuously Variable Transmission]	x	x	x	x		0114
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	EPS [Power Steering]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK -)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	EPS [Power Steering]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	BCM [Body Control Module (SMK -)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	EPS [Power Steering]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	BCM [Body Control Module (SMK -)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	EPS [Power Steering]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #1)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	EPS [Power Steering]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK -)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	AT [Continuously Variable Transmission]	x	x	x	x		0114
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	EPS [Power Steering]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK -)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	EPS [Power Steering]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	BCM [Body Control Module (SMK -)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	EPS [Power Steering]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	BCM [Body Control Module (SMK -)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	EPS [Power Steering]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	EPS [Power Steering]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK -)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	AT [Continuously Variable Transmission]	x	x	x	x		0114
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	EPS [Power Steering]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	SMK [Smart Key Unit]	×	×	×	×	×	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK+)]	×	×	×	×	×	
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK -)]	×	×	×	×	×	
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	CODE [Transmitter Code Saving]				×		0026
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	ENGINE [Leaded All]	×	×	×	×		0040, 0069, 0070, 0109, 0143
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	ENGINE [Unleaded All]	×	×	×	×		0040, 0069, 0109, 0143
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	ABSESP [ABS / ESP]	×	×	×	×	×	0062, 0085
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	EPS [Power Steering]	×	×	×	×	×	
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	BCM [Body Control Module (SMK+)]	×	×	×	×	×	
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	BCM [Body Control Module (SMK -)]	×	×	×	×	×	
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	ENGINE [Engine Control]	×	×	×	×	×	
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	ABSESP [ABS / ESP]	×	×	×	×	×	0062, 0085
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	EPS [Power Steering (~2012.02.22)]	×	×	×	×	×	
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	EPS [Power Steering (2012.02.23~)]	×	×	×	×	×	
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	SMK [Smart Key Unit]	×	×	×	×	×	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	×			×	×	
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	×			×	×	
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				×		0026
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	ENGINE [Leaded All]	×	×	×	×		0040, 0069, 0070, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	EPS [Power Steering (~2012.02.22)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	EPS [Power Steering (2012.02.23~)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	EPS [Power Steering (~2012.02.22)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	EPS [Power Steering (2012.02.23~)]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	EPS [Power Steering]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	EPS [Power Steering]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	EPS [Power Steering]	x	x	x	x	x	
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	BCM [Body Control Module (SMK+)]	x			x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT(X3)	1999	G 1.3 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ACCENT(X3)	1999	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(X3)	1999	G 1.3 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ACCENT(X3)	1999	G 1.3 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ACCENT(X3)	1999	G 1.5 DOHC	ENGINE [Unleaded MAP]		x	x	x	x	
Europe/General	ACCENT(X3)	1999	G 1.5 DOHC	ENGINE [Unleaded IMMO]		x	x	x	x	
Europe/General	ACCENT(X3)	1999	G 1.5 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	ACCENT(X3)	1999	G 1.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ACCENT(X3)	1999	G 1.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(X3)	1999	G 1.5 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ACCENT(X3)	1999	G 1.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ACCENT(X3)	1999	G 1.5 SOHC	ENGINE [Unleaded IMMO]		x	x	x	x	
Europe/General	ACCENT(X3)	1999	G 1.5 SOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	ACCENT(X3)	1999	G 1.5 SOHC	ENGINE [Leaded]		x	x	x	x	
Europe/General	ACCENT(X3)	1999	G 1.5 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	ACCENT(X3)	1999	G 1.5 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ACCENT(X3)	1999	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(X3)	1999	G 1.5 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ACCENT(X3)	1999	G 1.5 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ACCENT(X3)	1998	G 1.3 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ACCENT(X3)	1998	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(X3)	1998	G 1.3 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ACCENT(X3)	1998	G 1.3 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ACCENT(X3)	1998	G 1.5 DOHC	ENGINE [Unleaded MAP]		x	x	x	x	
Europe/General	ACCENT(X3)	1998	G 1.5 DOHC	ENGINE [Unleaded IMMO]		x	x	x	x	
Europe/General	ACCENT(X3)	1998	G 1.5 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	ACCENT(X3)	1998	G 1.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ACCENT(X3)	1998	G 1.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(X3)	1998	G 1.5 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ACCENT(X3)	1998	G 1.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ACCENT(X3)	1998	G 1.5 SOHC	ENGINE [Unleaded IMMO]		x	x	x	x	
Europe/General	ACCENT(X3)	1998	G 1.5 SOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	ACCENT(X3)	1998	G 1.5 SOHC	ENGINE [Leaded]		x	x	x	x	
Europe/General	ACCENT(X3)	1998	G 1.5 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	ACCENT(X3)	1998	G 1.5 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(X3)	1998	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(X3)	1998	G 1.5 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ACCENT(X3)	1998	G 1.5 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ACCENT(X3)	1997	G 1.3 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ACCENT(X3)	1997	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(X3)	1997	G 1.3 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ACCENT(X3)	1997	G 1.3 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ACCENT(X3)	1997	G 1.5 DOHC	ENGINE [Unleaded MAP]		x	x	x	x	
Europe/General	ACCENT(X3)	1997	G 1.5 DOHC	ENGINE [Unleaded IMMO]		x	x	x	x	
Europe/General	ACCENT(X3)	1997	G 1.5 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	ACCENT(X3)	1997	G 1.5 DOHC	ENGINE [Unleaded MAF]		x	x	x	x	
Europe/General	ACCENT(X3)	1997	G 1.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ACCENT(X3)	1997	G 1.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(X3)	1997	G 1.5 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ACCENT(X3)	1997	G 1.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ACCENT(X3)	1997	G 1.5 SOHC	ENGINE [Unleaded IMMO]		x	x	x	x	
Europe/General	ACCENT(X3)	1997	G 1.5 SOHC	ENGINE [Leaded]		x	x	x	x	
Europe/General	ACCENT(X3)	1997	G 1.5 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	ACCENT(X3)	1997	G 1.5 SOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	ACCENT(X3)	1997	G 1.5 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ACCENT(X3)	1997	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(X3)	1997	G 1.5 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ACCENT(X3)	1997	G 1.5 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ACCENT(X3)	1996	G 1.3 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ACCENT(X3)	1996	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(X3)	1996	G 1.3 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ACCENT(X3)	1996	G 1.3 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ACCENT(X3)	1996	G 1.5 DOHC	ENGINE [Unleaded MAP]		x	x	x	x	
Europe/General	ACCENT(X3)	1996	G 1.5 DOHC	ENGINE [Unleaded IMMO]		x	x	x	x	
Europe/General	ACCENT(X3)	1996	G 1.5 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	ACCENT(X3)	1996	G 1.5 DOHC	ENGINE [Unleaded MAF]		x	x	x	x	
Europe/General	ACCENT(X3)	1996	G 1.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ACCENT(X3)	1996	G 1.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(X3)	1996	G 1.5 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ACCENT(X3)	1996	G 1.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ACCENT(X3)	1996	G 1.5 SOHC	ENGINE [Unleaded IMMO]		x	x	x	x	
Europe/General	ACCENT(X3)	1996	G 1.5 SOHC	ENGINE [Leaded]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(X3)	1996	G 1.5 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	ACCENT(X3)	1996	G 1.5 SOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	ACCENT(X3)	1996	G 1.5 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ACCENT(X3)	1996	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(X3)	1996	G 1.5 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ACCENT(X3)	1996	G 1.5 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ACCENT(X3)	1995	G 1.3 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ACCENT(X3)	1995	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(X3)	1995	G 1.3 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ACCENT(X3)	1995	G 1.3 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ACCENT(X3)	1995	G 1.5 DOHC	ENGINE [Unleaded MAP]		x	x	x	x	
Europe/General	ACCENT(X3)	1995	G 1.5 DOHC	ENGINE [Unleaded IMMO]		x	x	x	x	
Europe/General	ACCENT(X3)	1995	G 1.5 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	ACCENT(X3)	1995	G 1.5 DOHC	ENGINE [Unleaded MAF]		x	x	x	x	
Europe/General	ACCENT(X3)	1995	G 1.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ACCENT(X3)	1995	G 1.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(X3)	1995	G 1.5 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ACCENT(X3)	1995	G 1.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ACCENT(X3)	1995	G 1.5 SOHC	ENGINE [Unleaded IMMO]		x	x	x	x	
Europe/General	ACCENT(X3)	1995	G 1.5 SOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	ACCENT(X3)	1995	G 1.5 SOHC	ENGINE [Leaded]		x	x	x	x	
Europe/General	ACCENT(X3)	1995	G 1.5 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ACCENT(X3)	1995	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ACCENT(X3)	1995	G 1.5 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ACCENT(X3)	1995	G 1.5 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	BCM [Body Control Module (SMK -)]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	BCM [Body Control Module (SMK -)]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	BCM [Body Control Module (SMK -)]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.6 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.6 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.6 MPI	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.6 MPI	BCM [Body Control Module (SMK -)]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.4 MPI	ENGINE [Engine Control]	×	×	×	×		0040, 0069, 0109, 0143
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.4 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.4 MPI	ABS [Anti - Lock Brake]	×	×	×	×	×	0062, 0085
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.4 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.4 MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.4 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.4 MPI	BCM [Body Control Module (SMK+)]	×	×	×	×	×	
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.4 MPI	BCM [Body Control Module (SMK -)]	×	×	×	×	×	
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.4 MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	ENGINE [Engine Control]	×	×	×	×		0040, 0069, 0109, 0143
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	ABS [Anti - Lock Brake]	×	×	×	×	×	0062, 0085
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0027, 0042, 0043, 0056, 0118

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	BCM [Body Control Module (SMK+)]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	BCM [Body Control Module (SMK -)]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x		
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x		
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x		
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x		
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x		
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x		
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x		
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x		
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x		
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x		
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x		
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x		
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	ENGINE [B 1.1 LPG]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	ENGINE [B 1.1 LPG]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	ENGINE [B 1.1 LPG]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	ENGINE [B 1.1 LPG]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	ENGINE [B 1.1 LPG]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	ENGINE [B 1.1 LPG]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	ENGINE [Unleaded INDIA]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0113
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	ENGINE [Unleaded MEX]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	ABSESP [ESP (+)]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ENGINE [Unleaded EOBD]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ENGINE [Leaded All]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ABSESP [ESP (+)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	ABSESP [ESP (+)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ENGINE [Unleaded EOBD]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ENGINE [Leaded All]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ABSESP [ESP (+)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	ABSESP [ESP (+)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ENGINE [Unleaded EOBD]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ENGINE [Leaded All]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ABSESP [ESP (+)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	ABSESP [ESP (+)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ENGINE [Unleaded EOBD]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ENGINE [Leaded All]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ABSESP [ESP (+)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	AIRBAG [Airbag Control]		x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	ABSESP [ESP (+)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ENGINE [Unleaded EOBD]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ENGINE [Leaded All]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ABSESP [ESP (+)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	ABSESP [ESP (+)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ENGINE [Unleaded EOBD]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ENGINE [Leaded All]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ABSESP [ESP (+)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ABSESP [TCS (ITT Type)]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ABSESP [TCS (CTC Type) (2002.09~)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ABSESP [ESP (CTC Type) (2002.09~)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ABSESP [ESP (Melco Type)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ABSESP [ESP (Melco Type)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ENGINE [Unleaded EOBD]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ENGINE [Leaded All]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ABSESP [TCS (ITT Type)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ABSESP [TCS (CTC Type) (2002.09~)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ABSESP [ESP (CTC Type) (2002.09~)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ABSESP [ESP (Melco Type)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ABSESP [ESP (Melco Type)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	ABSESP [VDC (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	ABSESP [VDC (+)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ENGINE [Unleaded MPI GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ENGINE [Unleaded MPI GEN]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ENGINE [Unleaded GDI All]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ENGINE [Unleaded MPI EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ENGINE [Unleaded MPI EOBD]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ENGINE [Leaded MPI All]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ABSESP [VDC (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ABSESP [VDC (+)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	ABSESP [VDC (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	ABSESP [VDC (+)]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	ENGINE [Unleaded All]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	ABSESP [VDC (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	ABSESP [VDC (+)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	ABSESP [VDC (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	ABSESP [VDC (+)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	ENGINE [Unleaded All]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	ABSESP [TCS (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	ABSESP [VDC (+)]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	ABSESP [VDC (+)]		x	x	x	x	0062
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	ECS [Active ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	ECS [ECS]		x	x	x	x	
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	x	x	x	x		0083
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	ENGINE [Leaded All]		x	x			0015, 0070, 0109, 0113, 0143
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	ENGINE [Leaded All]		x	x			0015, 0070, 0109, 0113, 0143
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	BCM [Smart Junction Block]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	ENGINE [Leaded All]		x	x			0015, 0070, 0109, 0113, 0143
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	BCM [Body Control Module]	x			x	x	
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0109, 0113, 0143
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	BCM [Body Control Module]	x			x	x	
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0109, 0113, 0143
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	BCM [Body Control Module]	x			x	x	
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0113
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	BCM [Body Control Module]	x			x	x	
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0113
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	BCM [Body Control Module]	x			x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	BCM [Body Control Module]	x			x	x	
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0113
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(J1)	1995	G 1.5 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(J1)	1995	G 1.6 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(J1)	1995	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(J1)	1994	G 1.5 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(J1)	1994	G 1.6 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(J1)	1994	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(J1)	1993	G 1.5 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(J1)	1993	G 1.6 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(J1)	1993	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(J1)	1992	G 1.5 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(J1)	1992	G 1.6 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(J1)	1992	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	ENGINE [Leaded All]		x	x			0015, 0070, 0109, 0113, 0143
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	BCM [Cluster Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	ENGINE [Leaded All]		x	x			0015, 0070, 0109, 0113, 0143
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	ENGINE [Leaded All]		x	x			0015, 0070, 0109, 0113, 0143
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	ENGINE [Leaded All]		x	x			0015, 0070, 0109, 0113, 0143
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	ABSESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(RD)	2000	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ELANTRA(RD)	2000	G 1.5 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	2000	G 1.5 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(RD)	2000	G 1.5 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	2000	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ELANTRA(RD)	2000	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	2000	G 1.6 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(RD)	2000	G 1.6 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	2000	G 1.8 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ELANTRA(RD)	2000	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	2000	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(RD)	2000	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	2000	G 2.0 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	ELANTRA(RD)	2000	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(RD)	2000	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	2000	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(RD)	2000	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	1999	G 1.5 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(RD)	1999	G 1.5 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	1999	G 1.5 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(RD)	1999	G 1.5 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	1999	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(RD)	1999	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	1999	G 1.6 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(RD)	1999	G 1.6 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	1999	G 1.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(RD)	1999	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	1999	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(RD)	1999	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	1999	G 2.0 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	ELANTRA(RD)	1999	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(RD)	1999	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	1999	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(RD)	1999	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	1998	G 1.5 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(RD)	1998	G 1.5 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	1998	G 1.5 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(RD)	1998	G 1.5 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	1998	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(RD)	1998	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	1998	G 1.6 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(RD)	1998	G 1.6 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	1998	G 1.8 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	ELANTRA(RD)	1998	G 1.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(RD)	1998	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	1998	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(RD)	1998	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	1998	G 2.0 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	ELANTRA(RD)	1998	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(RD)	1998	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	1998	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(RD)	1998	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	1997	G 1.5 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(RD)	1997	G 1.5 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	1997	G 1.5 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(RD)	1997	G 1.5 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	1997	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(RD)	1997	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	1997	G 1.6 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(RD)	1997	G 1.6 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	1997	G 1.8 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	ELANTRA(RD)	1997	G 1.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(RD)	1997	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	1997	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(RD)	1997	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	1997	G 2.0 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	ELANTRA(RD)	1997	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(RD)	1997	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	1997	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	ELANTRA(RD)	1997	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	1996	G 1.5 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(RD)	1996	G 1.5 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	1996	G 1.5 SOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	ELANTRA(RD)	1996	G 1.5 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	1996	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(RD)	1996	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	1996	G 1.6 DOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	ELANTRA(RD)	1996	G 1.6 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	1996	G 1.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(RD)	1996	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	1996	G 1.8 DOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	ELANTRA(RD)	1996	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(RD)	1996	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(RD)	1996	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(RD)	1996	G 2.0 DOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	ELANTRA(RD)	1996	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	AIRBAG [Weight Classification]	x	x	x	x		0141
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	TMU [Telematics Unit]	x	x	x			
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	CLU [Cluster Variant Coding]	x	x	x			
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ELANTRA(XD)	2006	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2006	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2006	D 2.0 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2006	D 2.0 TCI-D	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2006	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	ELANTRA(XD)	2006	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0104
Europe/General	ELANTRA(XD)	2006	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	ENGINE [Unleaded GEN (CVVT+)]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	ENGINE [Unleaded GEN (CVVT -)]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	ENGINE [Unleaded GEN (CVVT+)]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	ENGINE [Unleaded GEN (CVVT -)]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2005	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2005	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2005	D 2.0 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2005	D 2.0 TCI-D	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2005	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	ELANTRA(XD)	2005	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0104
Europe/General	ELANTRA(XD)	2005	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2005	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2005	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	ELANTRA(XD)	2005	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2005	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ELANTRA(XD)	2005	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2005	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2005	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	ELANTRA(XD)	2005	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
Europe/General	ELANTRA(XD)	2005	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	ENGINE [Unleaded GEN (CVVT+)]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	ENGINE [Unleaded GEN (CVVT -)]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	ENGINE [Unleaded GEN (CVVT+)]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	ENGINE [Unleaded GEN (CVVT -)]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2004	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2004	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2004	D 2.0 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2004	D 2.0 TCI-D	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2004	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	ELANTRA(XD)	2004	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0104
Europe/General	ELANTRA(XD)	2004	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2004	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2004	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	ELANTRA(XD)	2004	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2004	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ELANTRA(XD)	2004	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2004	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2004	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	ELANTRA(XD)	2004	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
Europe/General	ELANTRA(XD)	2004	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	ENGINE [Unleaded GEN (CVVT+)]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	ENGINE [Unleaded GEN (CVVT -)]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	ENGINE [Unleaded GEN (CVVT+)]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	ENGINE [Unleaded GEN (CVVT -)]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2003	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2003	D 2.0 TCI-D	AT [Melco TCM]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2003	D 2.0 TCI-D	AT [Siemens PCM]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2003	D 2.0 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2003	D 2.0 TCI-D	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2003	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	ELANTRA(XD)	2003	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2003	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ELANTRA(XD)	2003	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	ELANTRA(XD)	2003	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ELANTRA(XD)	2003	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ELANTRA(XD)	2003	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2003	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2003	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	ELANTRA(XD)	2003	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	AT [Melco TCM]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	AT [Siemens PCM]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	ENGINE [Unleaded OBD - II (SULEV)]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	ENGINE [Unleaded OBD - II (Non SULEV)]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	AT [Melco TCM]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	AT [Siemens PCM]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2002	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2002	D 2.0 TCI-D	AT [Melco TCM]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2002	D 2.0 TCI-D	AT [Siemens PCM]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2002	D 2.0 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2002	D 2.0 TCI-D	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2002	D 2.0 TCI-D	AIRBAG [AIRBAG]	x	x	x	x		
Europe/General	ELANTRA(XD)	2002	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2002	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ELANTRA(XD)	2002	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	ELANTRA(XD)	2002	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ELANTRA(XD)	2002	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ELANTRA(XD)	2002	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2002	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2002	G 1.6 DOHC	AIRBAG [AIRBAG]	x	x	x	x		
Europe/General	ELANTRA(XD)	2002	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	AT [Melco TCM]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	AT [Siemens PCM]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	AIRBAG [AIRBAG]	x	x	x	x		
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	AT [Melco TCM]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	AT [Siemens PCM]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	AIRBAG [AIRBAG]	x	x	x	x		
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	AIRBAG [AIRBAG]	x	x	x			0104
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2001	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2001	D 2.0 TCI-D	AT [Melco TCM]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2001	D 2.0 TCI-D	AT [Siemens PCM]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2001	D 2.0 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2001	D 2.0 TCI-D	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2001	D 2.0 TCI-D	AIRBAG [AIRBAG]	x	x	x	x		
Europe/General	ELANTRA(XD)	2001	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2001	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	ELANTRA(XD)	2001	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	ELANTRA(XD)	2001	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	ELANTRA(XD)	2001	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	ELANTRA(XD)	2001	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2001	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2001	G 1.6 DOHC	AIRBAG [AIRBAG]	x	x	x	x		
Europe/General	ELANTRA(XD)	2001	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	AT [Melco TCM]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	AT [Siemens PCM]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	AIRBAG [AIRBAG]	x	x	x	x		
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	AT [Melco TCM]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	AT [Siemens PCM]	x	x	x	x	x	
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	AIRBAG [AIRBAG]	x	x	x	x		
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	AIRBAG [AIRBAG]	x	x	x			0104
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	EON(HA)	2015	B 0.8 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	EON(HA)	2015	B 0.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	EON(HA)	2015	B 0.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EON(HA)	2015	B 0.8 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	EON(HA)	2015	B 0.8 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	EON(HA)	2015	B 0.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	EON(HA)	2015	G 0.8 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	EON(HA)	2015	G 0.8 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	EON(HA)	2015	G 0.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	EON(HA)	2015	G 0.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EON(HA)	2015	G 0.8 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	EON(HA)	2015	G 0.8 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	EON(HA)	2015	G 0.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	EON(HA)	2015	G 1.0 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	EON(HA)	2015	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	EON(HA)	2015	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EON(HA)	2015	G 1.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	EON(HA)	2015	G 1.0 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	EON(HA)	2015	G 1.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	EON(HA)	2014	B 0.8 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	EON(HA)	2014	B 0.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EON(HA)	2014	B 0.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EON(HA)	2014	B 0.8 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	EON(HA)	2014	B 0.8 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	EON(HA)	2014	B 0.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	EON(HA)	2014	G 0.8 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	EON(HA)	2014	G 0.8 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	EON(HA)	2014	G 0.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	EON(HA)	2014	G 0.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EON(HA)	2014	G 0.8 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	EON(HA)	2014	G 0.8 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	EON(HA)	2014	G 0.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	EON(HA)	2014	G 1.0 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	EON(HA)	2014	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	EON(HA)	2014	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EON(HA)	2014	G 1.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	EON(HA)	2014	G 1.0 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	EON(HA)	2014	G 1.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	EON(HA)	2013	B 0.8 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	EON(HA)	2013	B 0.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	EON(HA)	2013	B 0.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EON(HA)	2013	B 0.8 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	EON(HA)	2013	B 0.8 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	EON(HA)	2013	B 0.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	EON(HA)	2013	G 0.8 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	EON(HA)	2013	G 0.8 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	EON(HA)	2013	G 0.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	EON(HA)	2013	G 0.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EON(HA)	2013	G 0.8 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	EON(HA)	2013	G 0.8 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	EON(HA)	2013	G 0.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	EON(HA)	2012	B 0.8 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	EON(HA)	2012	B 0.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	EON(HA)	2012	B 0.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EON(HA)	2012	B 0.8 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	EON(HA)	2012	B 0.8 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EON(HA)	2012	B 0.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	EON(HA)	2012	G 0.8 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	EON(HA)	2012	G 0.8 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	EON(HA)	2012	G 0.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	EON(HA)	2012	G 0.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EON(HA)	2012	G 0.8 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	EON(HA)	2012	G 0.8 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	EON(HA)	2012	G 0.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	ESHIFTER [E - Shifter]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	ECS [Electronic Control Suspension (Limousine)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	ECS [Electronic Control Suspension (Sedan)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	AVM [Around View Monitor System]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	DIS [Multimedia]	x			x		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	BCM [Instrument Panel Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	BCM [Steering Wheel Remote Control]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	BCM [Assist Power Seat Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	BCM [Cluster Module]	×			×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	BCM [Head Up Display]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 3.8 GDI	BCM [Power Trunk Module]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	ENGINE [Engine Control]	×	×	×	×		0040, 0069, 0109, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0085
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	EPB [Electric Parking Brake]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	ESHIFTER [E - Shifter]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	SCC [Smart Cruise Control]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	EPS [Electronic Power Steering]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	ECS [Electronic Control Suspension (Limousine)]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	ECS [Electronic Control Suspension (Sedan)]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	PSB [Pre - safe Seat Belt - Left]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	PSB [Pre - safe Seat Belt - Right]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	LDWS [Lane Departure Warning System]	×	×	×	×		0079

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	AVM [Around View Monitor System]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	DIS [Multimedia]	x			x		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	BCM [Instrument Panel Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	BCM [Steering Wheel Remote Control]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	BCM [Assist Power Seat Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	BCM [Cluster Module]	x			x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	BCM [Head Up Display]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2015	G 5.0 GDI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	ESHIFTER [E - Shifter]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	ECS [Electronic Control Suspension (Limousine)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	ECS [Electronic Control Suspension (Sedan)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	AVM [Around View Monitor System]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	DIS [Multimedia]	x			x		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	BCM [Instrument Panel Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	BCM [Steering Wheel Remote Control]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	BCM [Assist Power Seat Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	BCM [Cluster Module]	x			x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	BCM [Head Up Display]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 3.8 GDI	BCM [Power Trunk Module]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	ENGINE [Engine Control]	×	×	×	×		0040, 0069, 0109, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0085
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	EPB [Electric Parking Brake]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	ESHIFTER [E - Shifter]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	SCC [Smart Cruise Control]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	EPS [Electronic Power Steering]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	ECS [Electronic Control Suspension (Limousine)]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	ECS [Electronic Control Suspension (Sedan)]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	PSB [Pre - safe Seat Belt - Left]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	PSB [Pre - safe Seat Belt - Right]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	LDWS [Lane Departure Warning System]	×	×	×	×		0079
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	BSD [Blind Spot Detection]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083, 0124

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	AVM [Around View Monitor System]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	DIS [Multimedia]	x			x		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	BCM [Instrument Panel Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	BCM [Steering Wheel Remote Control]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	BCM [Assist Power Seat Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	BCM [Cluster Module]	x			x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	BCM [Head Up Display]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2014	G 5.0 GDI	BCM [Power Trunk Module]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	ESP [Electronic Stability Program (New - F / L)]	x	x	x	x	x	0062, 0085
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	ESP [Electronic Stability Program (Old)]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	EPB [Electric Parking Brake (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	EPB [Electric Parking Brake (Old)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #2) (New - F / L)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #1) (New - F / L)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #2) (Old)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	AIRBAG [MULTISELECTION]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #1) (Old)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	AIRCON [Air Conditioner (Old)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	AIRCON [Air Conditioner (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	ESHIFTER [E - Shifter]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	SCC [Smart Cruise Control (Old)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	SCC [Smart Cruise Control (New - F / L)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	EPS [Electric Hydraulic Power Steering (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	EPS [Electric Hydraulic Power Steering (Old)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	ECS [Electronic Control Suspension (Sedan)]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	ECS [Electronic Control Suspension (Limousine)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	PSB [Pre - safe Seat Belt - Right (New - F / L)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	PSB [Pre - safe Seat Belt - Left (Old)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	PSB [Pre - safe Seat Belt - Right (Old)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	PSB [MULTISELECTION]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	PSB [Pre - safe Seat Belt - Left (New - F / L)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	TPMS [Tire Pressure Monitoring (Old)]	x	x	x		x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	TPMS [Tire Pressure Monitoring (New - F / L)]	x	x	x		x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	LDWS [Lane Departure Warning System (Old)]	x	x	x	x		0079, 0080
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	LDWS [Lane Departure Warning System (New - F / L)]	x	x	x	x		0079
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	AHLS [Auto Headlamp Leveling System (New - F / L)]	x	x	x	x		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	AHLS [Auto Headlamp Leveling (Old)]	x	x	x	x		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	AFLS [Adaptive Front Lighting System (Old)]	x	x	x	x	x	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	AFLS [Adaptive Front Lighting System (New - F / L)]	x	x	x	x	x	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	DIS [Multimedia (New - F / L)]	x			x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	DIS [Head Unit (Old)]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	DIS [Tuner / Amplifier (Old)]	x	x	x			0033

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	DIS [MULTISELECTION]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	SMK [Smart Key Code Saving (Old)]				x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	SMK [Smart Key Code Saving (New - F / L)]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Front Back Warning System (Old)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [User Option (Old)]				x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Front Area Module (Old)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Driver Door Module (Old)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Assist Door Module (Old)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Cluster Module (Old)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Multi Function Switch (Old)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Power Seat Module (Old)]	x	x	x	x	x	0065
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Steering Column Module (Old)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Power Seat Module (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Head Up Display (New - F / L)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Cluster Module (New - F / L)]	x			x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Instrument Pannel Module (Old)]	x	x	x	x	x	0043, 0056, 0068, 0098
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Assist Power Seat Module (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Electric Control Wiper (New - F / L)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Steering Wheel Remote Control (New - F / L)]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Multi Function Switch (New - F / L)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Power Trunk Module (New - F / L)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Steering Column Module (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Power Trunk Module (Old)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Front Area Module (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Driver Door Module (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Assist Door Module (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [MULTISELECTION]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Instrument Panel Module (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Power Distribution Module (Old)]	x	x	x	x	x	0042
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Electric Control Wiper (Old)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 GDI	BCM [Smart Junction Block (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0044, 0054, 0087, 0107, 0109, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	SCC [Smart Cruise Control]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	EPS [Electronic Power Steering]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	ECS [Electronic Control Suspension]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	PSB [Pre - safe Seat Belt - Left]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	PSB [Pre - safe Seat Belt - Right]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	LDWS [Lane Departure Warning System]	×	×	×	×		0079, 0080
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	AFLS [Adaptive Front Lighting System]	×	×	×	×	×	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	IAP [Intelligent Accel Pedal]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	DIS [Tuner / Amplifier]	×	×	×			0033
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	DIS [Head Unit]	×	×	×	×	×	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	SMK [Smart Key Code Saving]				×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	BCM [Power Trunk Module]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	BCM [User Option]				×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	BCM [Front Area Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	BCM [Assist Door Module]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	BCM [Cluster Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	BCM [Multi Function Switch]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	BCM [Power Seat Module]	×	×	×	×	×	0065
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	BCM [Instrument Pannel Module]	×	×	×	×	×	0043, 0056, 0068, 0098
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	BCM [Front Back Warning System]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	BCM [Electric Control Wiper]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	BCM [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 3.8 MPI	BCM [Steering Column Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	ENGINE [Engine Control]	×	×	×	×	×	0109, 0113, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0077, 0082, 0100
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	EPB [Electric Parking Brake]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	SCC [Smart Cruise Control]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	EPS [Electronic Power Steering]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	ECS [Electronic Control Suspension]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	PSB [Pre - safe Seat Belt - Left]	×	×	×			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	PSB [Pre - safe Seat Belt - Right]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	LDWS [Lane Departure Warning System]	×	×	×	×		0079, 0080
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	AFLS [Adaptive Front Lighting]	×	×	×	×	×	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	IAP [Intelligent Accel Pedal]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	DIS [Tuner / Amplifier]	×	×	×			0033
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	DIS [Head Unit]	×	×	×	×	×	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	SMK [Smart Key Code Saving]				×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	BCM [Front Back Warning System]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	BCM [User Option]				×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	BCM [Instrument Pannel Module]	×	×	×	×	×	0043, 0056, 0068, 0098
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	BCM [Front Area Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	BCM [Cluster Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	BCM [Multi Function Switch]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	BCM [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	BCM [Steering Column Module]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	BCM [Power Trunk Module]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	BCM [Electric Control Wiper]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 4.6 MPI	BCM [Power Seat Module]	×	×	×	×	×	0065
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	ENGINE [Engine Control]	×	×	×	×		0040, 0069, 0109, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	ESP [Electronic Stability Program (New - F / L)]	×	×	×	×	×	0062, 0085
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	ESP [Electronic Stability Program (Old)]	×	×	×	×	×	0062, 0077, 0082, 0100
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	EPB [Electric Parking Brake (New - F / L)]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	EPB [Electric Parking Brake (Old)]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #2) (New - F / L)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #1) (New - F / L)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #2) (Old)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	AIRBAG [MULTISELECTION]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #1) (Old)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	AIRCON [Air Conditioner (Old)]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	AIRCON [Air Conditioner (New - F / L)]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	ESHIFTER [E - Shifter]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	SCC [Smart Cruise Control (Old)]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	SCC [Smart Cruise Control (New - F / L)]	×	×	×	×		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	EPS [Electric Hydraulic Power Steering (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	EPS [Electronic Power Steering (Old)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	ECS [Electronic Control Suspension (Sedan)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	ECS [Electronic Control Suspension (Limousine)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	PSB [Pre - safe Seat Belt - Right (New - F / L)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	PSB [MULTISELECTION]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	PSB [Pre - safe Seat Belt - Left (Old)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	PSB [Pre - safe Seat Belt - Right (Old)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	PSB [Pre - safe Seat Belt - Left (New - F / L)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	TPMS [Tire Pressure Monitoring (Old)]	x	x	x		x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	TPMS [Tire Pressure Monitoring (New - F / L)]	x	x	x		x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	LDWS [Lane Departure Warning System (Old)]	x	x	x	x		0079, 0080
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	LDWS [Lane Departure Warning System (New - F / L)]	x	x	x	x		0079
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	AHLS [Auto Headlamp Leveling System (New - F / L)]	x	x	x	x		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	AHLS [Auto Headlamp Leveling (Old)]	x	x	x	x		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	AFLS [Adaptive Front Lighting System (Old)]	x	x	x	x	x	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	AFLS [Adaptive Front Lighting System (New - F / L)]	x	x	x	x	x	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	DIS [Multimedia (New - F / L)]	x			x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	DIS [Head Unit (Old)]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	DIS [Tuner / Amplifier (Old)]	x	x	x			0033
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	DIS [MULTISELECTION]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	SMK [Smart Key Code Saving (Old)]				x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	SMK [Smart Key Code Saving (New - F / L)]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Steering Column Module (Old)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [User Option (Old)]				x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Instrument Pannel Module (Old)]	x	x	x	x	x	0043, 0056, 0068, 0098
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Front Area Module (Old)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Driver Door Module (Old)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Assist Door Module (Old)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Cluster Module (Old)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Multi Function Switch (Old)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Power Seat Module (Old)]	x	x	x	x	x	0065
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Front Area Module (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Head Up Display (New - F / L)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Cluster Module (New - F / L)]	x			x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Power Trunk Module (New - F / L)]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Electric Control Wiper (New - F / L)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Steering Wheel Remote Control (New - F / L)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Multi Function Switch (New - F / L)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Smart Junction Block (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Assist Power Seat Module (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Power Seat Module (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Front Back Warning System (Old)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Driver Door Module (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Assist Door Module (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [MULTISELECTION]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Instrument Panel Module (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Power Distribution Module (Old)]	x	x	x	x	x	0042
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Electric Control Wiper (Old)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Power Trunk Module (Old)]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2013	G 5.0 GDI	BCM [Steering Column Module (New - F / L)]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	SCC [Smart Cruise Control]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	EPS [Electronic Power Steering]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	ECS [Electronic Control Suspension]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	PSB [Pre - safe Seat Belt - Left]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	PSB [Pre - safe Seat Belt - Right]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	LDWS [Lane Departure Warning System]	×	×	×	×		0079, 0080
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	AFLS [Adaptive Front Lighting System]	×	×	×	×	×	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	IAP [Intelligent Accel Pedal]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	DIS [Tuner / Amplifier]	×	×	×			0033
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	DIS [Head Unit]	×	×	×	×	×	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	SMK [Smart Key Code Saving]				×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	BCM [Power Trunk Module]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	BCM [User Option]				×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	BCM [Front Area Module]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	BCM [Power Seat Module]	x	x	x	x	x	0065
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	BCM [Instrument Pannel Module]	x	x	x	x	x	0043, 0056, 0068, 0098
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	BCM [Front Back Warning System]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 GDI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0044, 0054, 0087, 0107, 0109, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	SCC [Smart Cruise Control]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	EPS [Electronic Power Steering]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	ECS [Electronic Control Suspension]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	PSB [Pre - safe Seat Belt - Left]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	PSB [Pre - safe Seat Belt - Right]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	LDWS [Lane Departure Warning System]	×	×	×	×		0079, 0080
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	AFLS [Adaptive Front Lighting System]	×	×	×	×	×	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	IAP [Intelligent Accel Pedal]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	DIS [Tuner / Amplifier]	×	×	×			0033
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	DIS [Head Unit]	×	×	×	×	×	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	SMK [Smart Key Code Saving]				×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	BCM [Power Trunk Module]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	BCM [User Option]				×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	BCM [Front Area Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	BCM [Cluster Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	BCM [Multi Function Switch]	×	×	×	×		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	BCM [Power Seat Module]	x	x	x	x	x	0065
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	BCM [Instrument Pannel Module]	x	x	x	x	x	0043, 0056, 0068, 0098
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	BCM [Front Back Warning System]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 3.8 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	ENGINE [Engine Control]	x	x	x	x	x	0109, 0113, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	AFLS [Adaptive Front Lighting (6 Speed)]	x	x	x	x	x	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	AFLS [Adaptive Front Lighting (8 Speed)]	x	x	x	x	x	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	BCM [Front Back Warning System]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	BCM [User Option]				x		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	BCM [Instrument Pannel Module]	x	x	x	x	x	0043, 0056, 0068, 0098
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	BCM [Power Trunk Module]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	BCM [Electric Control Wiper]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 4.6 MPI	BCM [Power Seat Module]	×	×	×	×	×	0065
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	ENGINE [Engine Control]	×	×	×	×		0040, 0069, 0109, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0077, 0082, 0100
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	EPB [Electric Parking Brake]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	SCC [Smart Cruise Control]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	EPS [Electronic Power Steering]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	ECS [Electronic Control Suspension]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	PSB [Pre - safe Seat Belt - Left]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	PSB [Pre - safe Seat Belt - Right]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	LDWS [Lane Departure Warning System]	×	×	×	×		0079, 0080
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	×	×	×	×	×	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	IAP [Intelligent Accel Pedal]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	DIS [Tuner / Amplifier]	×	×	×			0033
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	DIS [Head Unit]	×	×	×	×	×	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	SMK [Smart Key Code Saving]				×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	BCM [Front Back Warning System]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	BCM [User Option]				×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	BCM [Instrument Pannel Module]	×	×	×	×	×	0043, 0056, 0068, 0098
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	BCM [Front Area Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	BCM [Cluster Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	BCM [Multi Function Switch]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	BCM [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	BCM [Steering Column Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	BCM [Power Trunk Module]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	BCM [Electric Control Wiper]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2012	G 5.0 GDI	BCM [Power Seat Module]	×	×	×	×	×	0065
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	ENGINE [Engine Control]	×	×	×	×	×	0015, 0044, 0054, 0087, 0107, 0109, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0077, 0082, 0100

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	EPB [Electric Parking Brake]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	SCC [Smart Cruise Control]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	EPS [Electronic Power Steering]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	ECS [Electronic Control Suspension]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	PSB [Pre - safe Seat Belt - Left]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	PSB [Pre - safe Seat Belt - Right]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	LDWS [Lane Departure Warning System]	×	×	×	×		0079, 0080
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	LDWS [Lane Departure Warning System (China)]	×	×	×	×		0079, 0080
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	AFLS [Adaptive Front Lighting]	×	×	×	×	×	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	DIS [Tuner / Amplifier]	×	×	×			0033
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	DIS [Head Unit]	×	×	×	×	×	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	SMK [Smart Key Code Saving]				×		
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	BCM [Power Trunk Module]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	BCM [User Option]				×		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	BCM [Front Area Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	BCM [Cluster Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	BCM [Multi Function Switch]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	BCM [Power Seat Module]	×	×	×	×	×	0065
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	BCM [Instrument Pannel Module]	×	×	×	×	×	0043, 0056, 0068, 0098
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	BCM [Front Back Warning System]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	BCM [Electric Control Wiper]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	BCM [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 3.8 MPI	BCM [Steering Column Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	ENGINE [Engine Control]	×	×	×	×	×	0109, 0113, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0019, 0114
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0077, 0082, 0100
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	EPB [Electric Parking Brake]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	SCC [Smart Cruise Control]	×	×	×	×		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	EPS [Electronic Power Steering]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	ECS [Electronic Control Suspension]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	PSB [Pre - safe Seat Belt - Left]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	PSB [Pre - safe Seat Belt - Right]	×	×	×			
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	LDWS [Lane Departure Warning System]	×	×	×	×		0079, 0080
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	LDWS [Lane Departure Warning System (China)]	×	×	×	×		0079, 0080
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	AFLS [Adaptive Front Lighting]	×	×	×	×	×	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	DIS [Tuner / Amplifier]	×	×	×			0033
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	DIS [Head Unit]	×	×	×	×	×	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	SMK [Smart Key Code Saving]				×		
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	BCM [Front Back Warning System]	×	×	×	×		
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	BCM [User Option]				×		
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	BCM [Instrument Pannel Module]	×	×	×	×	×	0043, 0056, 0068, 0098
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	BCM [Front Area Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	BCM [Cluster Module]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2011	G 4.6 MPI	BCM [Power Seat Module]	x	x	x	x	x	0065
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0044, 0054, 0087, 0107, 0109, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	LDWS [Lane Departure Warning System (China)]	x	x	x	x		0079, 0080
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	AFLS [Adaptive Front Lighting]	x	x	x	x	x	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	BCM [User Option]				x		
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	BCM [Power Seat Module]	x	x	x	x	x	0065
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	BCM [Instrument Pannel Module]	x	x	x	x	x	0043, 0056, 0068, 0098
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	BCM [Front Back Warning System]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 3.8 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	ENGINE [Engine Control]	x	x	x	x	x	0109, 0113, 0143
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0019, 0114
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	LDWS [Lane Departure Warning System (China)]	x	x	x	x		0079, 0080
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	AFLS [Adaptive Front Lighting]	x	x	x	x	x	0021
Europe/General	EQUUS/CENTENNI AL(VI)	2010	G 4.6 MPI	DIS [Tuner / Amplifier]	x	x	x			0033

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	EQUUS/CENTENNIAL(VI)	2010	G 4.6 MPI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	EQUUS/CENTENNIAL(VI)	2010	G 4.6 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	EQUUS/CENTENNIAL(VI)	2010	G 4.6 MPI	BCM [Front Back Warning System]	x	x	x	x		
Europe/General	EQUUS/CENTENNIAL(VI)	2010	G 4.6 MPI	BCM [User Option]				x		
Europe/General	EQUUS/CENTENNIAL(VI)	2010	G 4.6 MPI	BCM [Instrument Pannel Module]	x	x	x	x	x	0043, 0056, 0068, 0098
Europe/General	EQUUS/CENTENNIAL(VI)	2010	G 4.6 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNIAL(VI)	2010	G 4.6 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNIAL(VI)	2010	G 4.6 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNIAL(VI)	2010	G 4.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNIAL(VI)	2010	G 4.6 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	EQUUS/CENTENNIAL(VI)	2010	G 4.6 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	EQUUS/CENTENNIAL(VI)	2010	G 4.6 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	EQUUS/CENTENNIAL(VI)	2010	G 4.6 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	EQUUS/CENTENNIAL(VI)	2010	G 4.6 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	EQUUS/CENTENNIAL(VI)	2010	G 4.6 MPI	BCM [Power Seat Module]	x	x	x	x	x	0065
Europe/General	GALLOPER-II(M1)-PDF	2003	D 2.5 TCI	ENGINE [Engine Control]		x	x	x	x	
Europe/General	GALLOPER-II(M1)-PDF	2003	D 2.5 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GALLOPER-II(M1)-PDF	2003	D 2.5 TCI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GALLOPER-II(M1)-PDF	2003	D 2.5 TCI	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GALLOPER-II(M1)-PDF	2003	G 3.0 SOHC	ENGINE [Leaded IMMO]	x	x	x	x	x	
Europe/General	GALLOPER-II(M1)-PDF	2003	G 3.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GALLOPER-II(M1)-PDF	2003	G 3.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GALLOPER-II(M1)-PDF	2003	G 3.0 SOHC	IMMO [Unleaded]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	2003	G 3.0 SOHC	IMMO [Leaded]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	2002	D 2.5 TCI	ENGINE [Engine Control]		x	x	x	x	
Europe/General	GALLOPER-II(M1)-PDF	2002	D 2.5 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GALLOPER-II(M1)-PDF	2002	D 2.5 TCI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GALLOPER-II(M1)-PDF	2002	D 2.5 TCI	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	2002	G 3.0 SOHC	ENGINE [Leaded IMMO]	x	x	x	x	x	
Europe/General	GALLOPER-II(M1)-PDF	2002	G 3.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GALLOPER-II(M1)-PDF	2002	G 3.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GALLOPER-II(M1)-PDF	2002	G 3.0 SOHC	IMMO [Unleaded]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	2002	G 3.0 SOHC	IMMO [Leaded]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	2001	D 2.5 TCI	ENGINE [Engine Control]		x	x	x	x	
Europe/General	GALLOPER-II(M1)-PDF	2001	D 2.5 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GALLOPER-II(M1)-PDF	2001	D 2.5 TCI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GALLOPER-II(M1)-PDF	2001	D 2.5 TCI	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	2001	G 3.0 SOHC	ENGINE [Leaded IMMO]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GALLOPER-II(M1)-PDF	2001	G 3.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GALLOPER-II(M1)-PDF	2001	G 3.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GALLOPER-II(M1)-PDF	2001	G 3.0 SOHC	IMMO [Unleaded]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	2001	G 3.0 SOHC	IMMO [Leaded]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	2000	D 2.5 TCI	ENGINE [Engine Control]		x	x	x	x	
Europe/General	GALLOPER-II(M1)-PDF	2000	D 2.5 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GALLOPER-II(M1)-PDF	2000	D 2.5 TCI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GALLOPER-II(M1)-PDF	2000	D 2.5 TCI	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	2000	G 3.0 SOHC	ENGINE [Leaded IMMO]	x	x	x	x	x	
Europe/General	GALLOPER-II(M1)-PDF	2000	G 3.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GALLOPER-II(M1)-PDF	2000	G 3.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GALLOPER-II(M1)-PDF	2000	G 3.0 SOHC	IMMO [Unleaded]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	2000	G 3.0 SOHC	IMMO [Leaded]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	1999	D 2.5 TCI	ENGINE [Engine Control]		x	x	x	x	
Europe/General	GALLOPER-II(M1)-PDF	1999	D 2.5 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GALLOPER-II(M1)-PDF	1999	D 2.5 TCI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GALLOPER-II(M1)-PDF	1999	D 2.5 TCI	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	1999	G 3.0 SOHC	ENGINE [Leaded IMMO]	x	x	x	x	x	
Europe/General	GALLOPER-II(M1)-PDF	1999	G 3.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GALLOPER-II(M1)-PDF	1999	G 3.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GALLOPER-II(M1)-PDF	1999	G 3.0 SOHC	IMMO [Unleaded]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	1999	G 3.0 SOHC	IMMO [Leaded]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	1998	D 2.5 TCI	ENGINE [Engine Control]		x	x	x	x	
Europe/General	GALLOPER-II(M1)-PDF	1998	D 2.5 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GALLOPER-II(M1)-PDF	1998	D 2.5 TCI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GALLOPER-II(M1)-PDF	1998	D 2.5 TCI	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	1998	G 3.0 SOHC	ENGINE [Leaded IMMO]	x	x	x	x	x	
Europe/General	GALLOPER-II(M1)-PDF	1998	G 3.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GALLOPER-II(M1)-PDF	1998	G 3.0 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GALLOPER-II(M1)-PDF	1998	G 3.0 SOHC	IMMO [Unleaded]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	1998	G 3.0 SOHC	IMMO [Leaded]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	1997	D 2.5 TCI	ENGINE [Engine Control]		x	x	x	x	
Europe/General	GALLOPER-II(M1)-PDF	1997	D 2.5 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GALLOPER-II(M1)-PDF	1997	D 2.5 TCI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GALLOPER-II(M1)-PDF	1997	D 2.5 TCI	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	1997	G 3.0 SOHC	ENGINE [Leaded IMMO]	x	x	x	x	x	
Europe/General	GALLOPER-II(M1)-PDF	1997	G 3.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GALLOPER-II(M1)-PDF	1997	G 3.0 SOHC	AIRBAG [Airbag Control]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GALLOPER-II(M1)-PDF	1997	G 3.0 SOHC	IMMO [Unleaded]		×	×	×		0071, 0090, 0091, 0094
Europe/General	GALLOPER-II(M1)-PDF	1997	G 3.0 SOHC	IMMO [Leaded]		×	×	×		0071, 0090, 0091, 0094
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	ENGINE [Engine Control]	×	×	×	×		0015, 0109, 0113, 0143
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	ESC [Electronic Stability Control]	×	×	×	×	×	0062
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	TPMS [Tire Pressure Monitoring System]	×	×	×		×	
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	AHLS [Automatic Headlamp Leveling System]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	TMU [Telematics Unit]	×	×	×			
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	SMK [Power Distribution Module]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	SMK [Smart Key Unit]	×	×	×	×	×	0056, 0098, 0118, 0133
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	SJB [Smart Junction Block]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	CLU [Cluster Module]	×			×	×	
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 2.0 T-MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	ENGINE [Engine Control]	×	×	×	×		0053, 0109, 0143
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	ESC [Electronic Stability Control]	×	×	×	×	×	0062
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	×	×	×		×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	AHLS [Automatic Headlamp Leveling System]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	TMU [Telematics Unit]	×	×	×			
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	SMK [Power Distribution Module]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	SMK [Smart Key Unit]	×	×	×	×	×	0056, 0098, 0118, 0133
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	SJB [Smart Junction Block]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	CLU [Cluster Module]	×			×	×	
Europe/General	GENESIS COUPE(BK US)-U.S.	2013	G 3.8 GDI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	ENGINE [Engine Control]	×	×	×	×		0015, 0109, 0113, 0143
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0085
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	×	×	×			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	SMK [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	BCM [Smart Junction Block]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	BCM [Cluster Module]	×			×	×	
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	ENGINE [Engine Control]	×	×	×	×		0053, 0109, 0143
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0085
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	SMK [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	BCM [Smart Junction Block]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	BCM [Cluster Module]	×			×	×	
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	ENGINE [Engine Control]	×	×	×	×		0053, 0109, 0143
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0085
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	SMK [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	BCM [Smart Junction Block]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	BCM [Cluster Module]	×			×	×	
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	ENGINE [Engine Control]	×	×	×	×		0015, 0109, 0113, 0143
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0085
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	SMK [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	BCM [Smart Junction Block]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	BCM [Cluster Module]	×			×	×	
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	ENGINE [Engine Control]	×	×	×	×		0053, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0085
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	SMK [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	BCM [Smart Junction Block]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	BCM [Cluster Module]	×			×	×	
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	ENGINE [Engine Control]	×	×	×	×		0053, 0109, 0143
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0085
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	SMK [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	BCM [Smart Junction Block]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	BCM [Cluster Module]	×			×	×	
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	ENGINE [Engine Control]	×	×	×	×		0015, 0109, 0113, 0143
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	SMK [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	BCM [Smart Junction Block]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	BCM [Cluster Module]	×			×	×	
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	ENGINE [Engine Control]	×	×	×	×		0053, 0109, 0143
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	ESP [Electronic Stability Program]	×	×	×	×	×	0062
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	SMK [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	BCM [Smart Junction Block]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	BCM [Cluster Module]	×			×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	ENGINE [Engine Control]	×	×	×	×		0053, 0109, 0143
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	SMK [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	BCM [Smart Junction Block]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	BCM [Cluster Module]	×			×	×	
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	ENGINE [Engine Control]	×	×	×	×		0015, 0109, 0113, 0143
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AT [Automatic Transaxle]	×	×	×	×		0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	SMK [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	BCM [Smart Junction Block]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	BCM [Cluster Module]	×			×	×	
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	ENGINE [Engine Control]	×	×	×	×		0053, 0109, 0143
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	ESP [Electronic Stability Program]	×	×	×	×	×	0062
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	AIRCON [Air Conditioner]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	BCM [Cluster Module]	x			x	x	
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	ENGINE [Engine Control]	x	x	x	x		0053, 0109, 0143
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	SMK [Smart Key Code Saving]				x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	SMK [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	BCM [Smart Junction Block]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	BCM [Cluster Module]	×			×	×	
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0109, 0113, 0143
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0109, 0113, 0143
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0132
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	ESP [ESP (MGH - 60) (2010. 9.15~)]	×	×	×	×	×	0062
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	ESP [ESP (MGH - 40) (~2010. 9.14)]	×	×	×	×	×	0062
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	SMK [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	BCM [Body Control Module]	×			×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0109, 0143
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070, 0109, 0143
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0109, 0143
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0019, 0114
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	ESP [ESP (MGH - 40) (~2010. 9.14)]	×	×	×	×	×	0062
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	ESP [ESP (MGH - 60) (2010. 9.15~)]	×	×	×	×	×	0062
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	SMK [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	BCM [Body Control Module]	×			×	×	
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0109, 0113, 0143
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0109, 0113, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0132
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	BCM [Body Control Module]	x			x	x	
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0143
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0019, 0114
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	SMK [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	BCM [Body Control Module]	×			×	×	
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0109, 0113, 0143
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0109, 0113, 0143
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0132
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	SMK [Smart Key Code Saving]				×		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	SMK [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	BCM [Body Control Module]	×			×	×	
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0109, 0143
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0109, 0143
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0019, 0114
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	SMK [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	BCM [Body Control Module]	×			×	×	
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	ENGINE [Engine Control]	×	×	×	×	×	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	AT [Automatic Transaxle]	×	×	×	×		0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	ESC [Electronic Stability Control]	×	×	×	×	×	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	EPB [Electric Parking Brake]	×	×	×	×	×	
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	SCC [Smart Cruise Control]	×	×	×	×		
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	EPS [Electric Hydraulic Power Steering]	×	×	×	×	×	
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left]	×	×	×			
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right]	×	×	×			
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	×	×	×		×	
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	LDWS [Lane Departure Warning System]	×	×	×	×		0079, 0080
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083, 0124
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	AFLS [AFLS (LED)]	×	×	×	×	×	0004, 0021
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	AFLS [AFLS (HID)]	×	×	×	×	×	0021
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	DIS [Multimedia]	×	×		×		
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	TMU [Telematics Unit]	×	×	×			
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	SMK [Smart Key Code Saving]	×	×	×	×	×	0027, 0056, 0118
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	SMK [Smart Key Code Saving]				×		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	BCM [Instrument Panel Module (W / PIC)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	BCM [Front Back Warning System]	x	x	x	x		
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	BCM [User Option]				x		
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	BCM [Instrument Panel Module (W / O PIC)]	x	x	x		x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 3.8 GDI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	ENGINE [Engine Control]	x	x	x	x	x	0109, 0113, 0143
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	AFLS [AFLS (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	AFLS [AFLS (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	DIS [Multimedia]	x	x		x		
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	TMU [Telematics Unit]	x	x	x			
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0056, 0118
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	BCM [Instrument Panel Module (W / PIC)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	BCM [Driver Door Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	BCM [Cluster Module]	×	×	×	×	×	
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	BCM [Multi Function Switch]	×	×	×	×		
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	BCM [Power Seat Module]	×	×	×	×	×	
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	BCM [Front Back Warning System]	×	×	×	×		
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	BCM [Electric Control Wiper]	×	×	×	×		
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	BCM [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	BCM [User Option]				×		
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	BCM [Steering Column Module]	×	×	×	×	×	
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	BCM [Instrument Panel Module (W / O PIC)]	×	×	×		×	
Europe/General	GENESIS(BH US)-U.S.	2013	G 4.6 MPI	CODE [Transmitter Code Saving]				×		
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	ENGINE [Engine Control]	×	×	×	×		0040, 0069, 0109, 0143
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	ESC [Electronic Stability Control]	×	×	×	×	×	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	EPB [Electric Parking Brake]	×	×	×	×	×	
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	SCC [Smart Cruise Control]	×	×	×	×		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	AFLS [AFLS (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	AFLS [AFLS (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	DIS [Multimedia]	x	x		x		
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	TMU [Telematics Unit]	x	x	x			
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0056, 0118
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	BCM [Instrument Panel Module (W / PIC)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	BCM [Multi Function Switch]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	BCM [Front Back Warning System]	x	x	x	x		
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	BCM [User Option]				x		
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	BCM [Instrument Panel Module (W / O PIC)]	x	x	x		x	
Europe/General	GENESIS(BH US)-U.S.	2013	G 5.0 GDI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	AFLS [Adaptive Front Lighting (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	DIS [Multimedia]	x	x		x		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	SMK [Smart Key Code Saving]	×	×	×	×	×	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	BCM [Instrument Panel Module (PIC+)]	×	×	×		×	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	BCM [Front Area Module]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	BCM [Cluster Module]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	BCM [Multi Function Switch]	×	×	×	×		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	BCM [Power Seat Module]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	BCM [Front Back Warning]	×	×	×	×		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	BCM [Power Trunk Module]	×	×	×	×		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	BCM [Electric Control Wiper]	×	×	×	×		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	BCM [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	BCM [User Option]				×		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	BCM [Steering Column Module]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	BCM [Instrument Panel Module (PIC -)]	×	×	×		×	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	CODE [Transmitter Code Saving]				×		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	ENGINE [Engine Control]	×	×	×	×	×	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	EPB [Electric Parking Brake]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	SCC [Smart Cruise Control]	×	×	×	×		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	EPS [Electronic Power Steering]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	ECS [Electronic Control Suspension]	×	×	×	×		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	PSB [Pre - safe Seat Belt - Left]	×	×	×			
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	PSB [Pre - safe Seat Belt - Right]	×	×	×			
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	LDWS [Lane Departure Warning System]	×	×	×	×		0079, 0080
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	AFLS [Adaptive Front Lighting (LED)]	×	×	×	×	×	0004, 0021

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	DIS [Multimedia]	x	x		x		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	PSB [Pre - safe Seat Belt - Right]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	AFLS [Adaptive Front Lighting (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	DIS [Multimedia]	x	x		x		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	SCC [Smart Cruise Control]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	AFLS [Adaptive Front Lighting (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	DIS [Multimedia]	x	x		x		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	ENGINE [Engine Control]	x	x	x	x	x	0109, 0113, 0143
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	AFLS [Adaptive Front Lighting (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	DIS [Multimedia]	x	x		x		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	BCM [Steering Column Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	AFLS [Adaptive Front Lighting (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	DIS [Multimedia]	x	x		x		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	BCM [Power Trunk Module]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	AFLS [Adaptive Front Lighting (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	DIS [Multimedia]	x	x		x		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	BCM [Cluster Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	AFLS [Adaptive Front Lighting (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	DIS [Multimedia]	x	x		x		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	AFLS [Adaptive Front Lighting (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	DIS [Multimedia]	x	x		x		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	SMK [Smart Key Code Saving]	×	×	×	×	×	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	SMK [Smart Key Code Saving]				×		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	BCM [Instrument Panel Module (PIC+)]	×	×	×		×	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	BCM [Front Area Module]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	BCM [Cluster Module]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	BCM [Multi Function Switch]	×	×	×	×		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	BCM [Power Seat Module]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	BCM [Front Back Warning]	×	×	×	×		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	BCM [Power Trunk Module]	×	×	×	×		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	BCM [Electric Control Wiper]	×	×	×	×		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	BCM [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	BCM [User Option]				×		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	BCM [Steering Column Module]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	BCM [Instrument Panel Module (PIC -)]	×	×	×		×	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	CODE [Transmitter Code Saving]				×		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	ENGINE [Engine Control]	×	×	×	×	×	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	AT [Automatic Transaxle]	×	×	×	×		0114
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	EPB [Electric Parking Brake]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	SCC [Smart Cruise Control]	×	×	×	×		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	EPS [Electronic Power Steering]	×	×	×	×	×	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	ECS [Electronic Control Suspension]	×	×	×	×		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	PSB [Pre - safe Seat Belt - Left]	×	×	×			
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	PSB [Pre - safe Seat Belt - Right]	×	×	×			
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	LDWS [Lane Departure Warning System]	×	×	×	×		0079, 0080
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083, 0124
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	AFLS [Adaptive Front Lighting (LED)]	×	×	×	×	×	0004, 0021

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	DIS [Multimedia]	x	x		x		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	ENGINE [Engine Control]	x	x	x	x	x	0109, 0113, 0143
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	PSB [Pre - safe Seat Belt - Right]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	AFLS [Adaptive Front Lighting (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	DIS [Multimedia]	x	x		x		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	AFLS [Adaptive Front Lighting (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	DIS [Multimedia]	x	x		x		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	AFLS [Adaptive Front Lighting (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	BCM [Cluster Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	AFLS [Adaptive Front Lighting (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	BCM [Electric Control Wiper]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	AFLS [Adaptive Front Lighting (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	BCM [Multi Function Switch]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	AFLS [Adaptive Front Lighting (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	BCM [Power Seat Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	ENGINE [Engine Control]	x	x	x	x	x	0109, 0113, 0143
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	AFLS [Adaptive Front Lighting (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	PSB [Pre - safe Seat Belt - Right]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	PSB [Pre - safe Seat Belt - Left]	x	x	x			
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	AFLS [Adaptive Front Lighting (LED)]	x	x	x	x	x	0004, 0021
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	AFLS [Adaptive Front Lighting (HID)]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	IAP [Intelligent Accel Pedal]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	AFLS [Adaptive Front Lighting]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	AFLS [Adaptive Front Lighting]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0109, 0113, 0143
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0019, 0114
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	AFLS [Adaptive Front Lighting]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	AFLS [Adaptive Front Lighting]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	CODE [Transmitter Code Saving]				x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	AFLS [Adaptive Front Lighting]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0109, 0113, 0143
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0019, 0114
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	AFLS [Adaptive Front Lighting]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	BCM [Multi Function Switch]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	AFLS [Adaptive Front Lighting]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	BCM [Multi Function Switch]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	AFLS [Adaptive Front Lighting]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0109, 0113, 0143
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0019, 0114
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	EPS [Electronic Power Steering]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	AFLS [Adaptive Front Lighting]	x	x	x	x	x	0021
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	DIS [Tuner / Amplifier]	x	x	x			0033
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	DIS [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	BCM [Instrument Panel Module (PIC+)]	x	x	x		x	0043, 0056, 0068, 0098
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	BCM [Front Area Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	BCM [Multi Function Switch]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	BCM [Power Seat Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	BCM [Front Back Warning]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	BCM [Electric Control Wiper]	x	x	x	x		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	BCM [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	BCM [User Option]				x		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	BCM [Instrument Panel Module (PIC -)]	x	x	x		x	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	BCM [Steering Column Module]	x	x	x	x	x	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	CODE [Transmitter Code Saving]				x		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	ENGINE [Engine Control]	x	x	x	x		0053, 0109, 0143
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0076, 0085
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	4WD [4WD Control]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	PSB [Pre - safe Seat Belt]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AVM [Around View Monitor System]	x	x	x	x	x	0008
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	PGS [Parking Guide System]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AHS [Active Hood System]	x	x	x		x	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AVN [Audio Video Navigation (Premium)]	x			x		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AVN [Audio Video Navigation (Standard)]	x			x		0116
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	CGW [Central Gateway]	x	x	x			0051
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	DDM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	ADM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	HUD [Head Up Display]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	DSS [Driver Seat Switch]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	SLB [Seat Lumbar Bolster]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	PTM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	MFSW [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	SWRC [Steering Wheel Remote Control]	x	x	x			
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	HSWS [Haptic Steering Warning System]	x	x	x			
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	ENGINE [Engine Control]	x	x	x	x		0053, 0109, 0143
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0076, 0085
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	4WD [4WD Control]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	PSB [Pre - safe Seat Belt]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AVM [Around View Monitor System]	x	x	x	x	x	0008

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	PGS [Parking Guide System]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AHS [Active Hood System]	x	x	x		x	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AVN [Audio Video Navigation (Premium)]	x			x		
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AVN [Audio Video Navigation (Standard)]	x			x		0116
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	CGW [Central Gateway]	x	x	x			0051
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	DDM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	ADM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	HUD [Head Up Display]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	DSS [Driver Seat Switch]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	SLB [Seat Lumbar Bolster]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	PTM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	MFSW [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	x	x	x			
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	HSWS [Haptic Steering Warning System]	x	x	x			
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	ENGINE [Engine Control]	x	x	x	x		0053, 0109, 0143
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0076, 0085
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	4WD [4WD Control]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	PSB [Pre - safe Seat Belt]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AVM [Around View Monitor System]	x	x	x	x	x	0008
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	PGS [Parking Guide System]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AHS [Active Hood System]	x	x	x		x	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AVN [Audio Video Navigation (Premium)]	x			x		
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AVN [Audio Video Navigation (Standard)]	x			x		0116
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	CGW [Central Gateway]	x	x	x			0051
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	DDM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	ADM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	HUD [Head Up Display]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	DSS [Driver Seat Switch]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	SLB [Seat Lumbar Bolster]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	PTM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	MFSW [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	x	x	x			
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	HSWS [Haptic Steering Warning System]	x	x	x			
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0076, 0085
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	4WD [4WD Control]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	PSB [Pre - safe Seat Belt]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AVM [Around View Monitor System]	x	x	x	x	x	0008
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	PGS [Parking Guide System]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AHS [Active Hood System]	x	x	x		x	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AVN [Audio Video Navigation (Premium)]	x			x		
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AVN [Audio Video Navigation (Standard)]	x			x		0116
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	CGW [Central Gateway]	x	x	x			0051
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	DDM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	ADM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	HUD [Head Up Display]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	DSS [Driver Seat Switch]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	SLB [Seat Lumbar Bolster]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	PTM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	MFSW [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	HSWS [Haptic Steering Warning System]	x	x	x			
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	ENGINE [Engine Control]	x	x	x	x		0053, 0109, 0143
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0076, 0085
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	4WD [4WD Control]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	PSB [Pre - safe Seat Belt]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AVM [Around View Monitor System]	x	x	x	x	x	0008
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	PGS [Parking Guide System]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AHS [Active Hood System]	x	x	x		x	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AVN [Audio Video Navigation (Premium)]	x			x		
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AVN [Audio Video Navigation (Standard)]	x			x		0116
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	CGW [Central Gateway]	x	x	x			0051
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	DDM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	ADM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	HUD [Head Up Display]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	DSS [Driver Seat Switch]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	SLB [Seat Lumbar Bolster]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	PTM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	MFSW [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	SWRC [Steering Wheel Remote Control]	x	x	x			
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	HSWS [Haptic Steering Warning System]	x	x	x			
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	ENGINE [Engine Control]	x	x	x	x		0053, 0109, 0143
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0076, 0085
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	4WD [4WD Control]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	PSB [Pre - safe Seat Belt]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AVM [Around View Monitor System]	x	x	x	x	x	0008
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	PGS [Parking Guide System]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AHS [Active Hood System]	x	x	x		x	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AVN [Audio Video Navigation (Premium)]	x			x		
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AVN [Audio Video Navigation (Standard)]	x			x		0116
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	CGW [Central Gateway]	x	x	x			0051

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	DDM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	ADM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	HUD [Head Up Display]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	DSS [Driver Seat Switch]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	SLB [Seat Lumbar Bolster]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	PTM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	MFSW [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	x	x	x			
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	HSWS [Haptic Steering Warning System]	x	x	x			
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	ENGINE [Engine Control]	x	x	x	x		0053, 0109, 0143
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0076, 0085
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	4WD [4WD Control]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	PSB [Pre - safe Seat Belt]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AVM [Around View Monitor System]	x	x	x	x	x	0008
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	PGS [Parking Guide System]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AHS [Active Hood System]	x	x	x		x	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AVN [Audio Video Navigation (Premium)]	x			x		
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AVN [Audio Video Navigation (Standard)]	x			x		0116
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	CGW [Central Gateway]	x	x	x			0051
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	DDM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	ADM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	HUD [Head Up Display]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	DSS [Driver Seat Switch]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	SLB [Seat Lumbar Bolster]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	PTM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	MFSW [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	x	x	x			
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	HSWS [Haptic Steering Warning System]	x	x	x			
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0076, 0085
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	4WD [4WD Control]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	PSB [Pre - safe Seat Belt]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AVM [Around View Monitor System]	x	x	x	x	x	0008
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	PGS [Parking Guide System]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AHS [Active Hood System]	x	x	x		x	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AVN [Audio Video Navigation (Premium)]	x			x		
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AVN [Audio Video Navigation (Standard)]	x			x		0116
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	CGW [Central Gateway]	x	x	x			0051
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	DDM [Driver Door Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	ADM [Assist Door Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	HUD [Head Up Display]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	DSS [Driver Seat Switch]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	SLB [Seat Lumbar Bolster]	x	x	x	x	x	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	PTM [Power Trunk Module]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	MFSW [Multi Function Switch]	x	x	x	x		
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	x	x	x			
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	HSWS [Haptic Steering Warning System]	x	x	x			
Europe/General	GETZ(TB)	2011	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	GETZ(TB)	2011	D 1.5 TCI-U	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2011	D 1.5 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2011	D 1.5 TCI-U	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2011	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GETZ(TB)	2011	D 1.5 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2011	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2010	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	GETZ(TB)	2010	D 1.5 TCI-U	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2010	D 1.5 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2010	D 1.5 TCI-U	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2010	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2010	D 1.5 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2010	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2009	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	GETZ(TB)	2009	D 1.5 TCI-U	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2009	D 1.5 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2009	D 1.5 TCI-U	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2009	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2009	D 1.5 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2009	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2009	G 1.3 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2009	G 1.3 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2009	G 1.3 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GETZ(TB)	2009	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2009	G 1.3 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2009	G 1.3 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2009	G 1.3 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2009	G 1.3 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2009	G 1.3 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2008	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	GETZ(TB)	2008	D 1.5 TCI-U	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2008	D 1.5 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2008	D 1.5 TCI-U	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2008	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2008	D 1.5 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2008	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2007	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	GETZ(TB)	2007	D 1.5 TCI-U	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2007	D 1.5 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2007	D 1.5 TCI-U	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2007	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2007	D 1.5 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2007	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	AIRBAG [Airbag Control]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2006	D 1.5 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	GETZ(TB)	2006	D 1.5 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2006	D 1.5 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2006	D 1.5 TCI-D	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2006	D 1.5 TCI-D	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2006	D 1.5 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2006	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	GETZ(TB)	2006	D 1.5 TCI-U	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2006	D 1.5 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2006	D 1.5 TCI-U	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2006	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2006	D 1.5 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2006	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	x	x	x			
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2005	D 1.5 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	GETZ(TB)	2005	D 1.5 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2005	D 1.5 TCI-D	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2005	D 1.5 TCI-D	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2005	D 1.5 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2005	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	GETZ(TB)	2005	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x		0070

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GETZ(TB)	2005	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	GETZ(TB)	2005	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2005	G 1.1 SOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2005	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2005	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2005	G 1.3 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	GETZ(TB)	2005	G 1.3 SOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	GETZ(TB)	2005	G 1.3 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	GETZ(TB)	2005	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2005	G 1.3 SOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2005	G 1.3 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2005	G 1.3 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2005	G 1.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GETZ(TB)	2005	G 1.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GETZ(TB)	2005	G 1.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GETZ(TB)	2005	G 1.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2005	G 1.4 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2005	G 1.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GETZ(TB)	2005	G 1.4 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2005	G 1.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2005	G 1.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	GETZ(TB)	2005	G 1.5 DOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	GETZ(TB)	2005	G 1.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	GETZ(TB)	2005	G 1.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2005	G 1.5 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2005	G 1.5 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2005	G 1.5 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2005	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	GETZ(TB)	2005	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	GETZ(TB)	2005	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	GETZ(TB)	2005	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2005	G 1.6 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2005	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2005	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2004	D 1.5 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	GETZ(TB)	2004	D 1.5 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2004	D 1.5 TCI-D	ABS [Anti - Lock Brake]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GETZ(TB)	2004	D 1.5 TCI-D	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2004	D 1.5 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2004	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	GETZ(TB)	2004	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	GETZ(TB)	2004	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	GETZ(TB)	2004	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2004	G 1.1 SOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2004	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2004	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2004	G 1.3 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	GETZ(TB)	2004	G 1.3 SOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	GETZ(TB)	2004	G 1.3 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	GETZ(TB)	2004	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2004	G 1.3 SOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2004	G 1.3 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2004	G 1.3 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2004	G 1.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	GETZ(TB)	2004	G 1.5 DOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	GETZ(TB)	2004	G 1.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	GETZ(TB)	2004	G 1.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2004	G 1.5 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2004	G 1.5 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2004	G 1.5 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2004	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	GETZ(TB)	2004	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	GETZ(TB)	2004	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	GETZ(TB)	2004	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2004	G 1.6 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2004	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2004	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2003	D 1.5 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	GETZ(TB)	2003	D 1.5 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2003	D 1.5 TCI-D	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2003	D 1.5 TCI-D	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2003	D 1.5 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2003	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	GETZ(TB)	2003	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x		0070

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GETZ(TB)	2003	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	GETZ(TB)	2003	G 1.1 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2003	G 1.1 SOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2003	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2003	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2003	G 1.3 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	GETZ(TB)	2003	G 1.3 SOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	GETZ(TB)	2003	G 1.3 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	GETZ(TB)	2003	G 1.3 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2003	G 1.3 SOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2003	G 1.3 SOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2003	G 1.3 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2003	G 1.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	GETZ(TB)	2003	G 1.5 DOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	GETZ(TB)	2003	G 1.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	GETZ(TB)	2003	G 1.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2003	G 1.5 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2003	G 1.5 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2003	G 1.5 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GETZ(TB)	2003	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	GETZ(TB)	2003	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x		0070
Europe/General	GETZ(TB)	2003	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	GETZ(TB)	2003	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GETZ(TB)	2003	G 1.6 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	GETZ(TB)	2003	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0039
Europe/General	GETZ(TB)	2003	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	EPS [Electronic Power Steering]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	CODE [Transmitter Code Saving]				x		0026
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	EPS [Electronic Power Steering]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	CODE [Transmitter Code Saving]				x		0026
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	ABSESP [ABS / ESP]	×	×	×	×	×	0062, 0077, 0082, 0100
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	EPS [Electronic Power Steering]	×	×	×	×		
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	SMK [Smart Key Unit]	×	×	×	×	×	0027, 0042, 0043, 0056, 0118
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	SJB [Smart Junction Block]	×	×	×	×	×	
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	CLU [Cluster Module]	×	×	×	×	×	
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				×		0026
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	ENGINE [Engine Control]	×	×	×	×		0040, 0069, 0109, 0143
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	ABSESP [ABS / ESP]	×	×	×	×	×	0062, 0077, 0082, 0100
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	EPS [Electronic Power Steering]	×	×	×	×		
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0027, 0042, 0043, 0056, 0118
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	SJB [Smart Junction Block]	×	×	×	×	×	
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	CLU [Cluster Module]	×	×	×	×	×	
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	ENGINE [Engine Control]	×	×	×	×		0040, 0069, 0109, 0143
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	ABSESP [ABS / ESP]	×	×	×	×	×	0062, 0077, 0082, 0100
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	EPS [Electronic Power Steering]	×	×	×	×		
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0027, 0042, 0043, 0056, 0118
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	SJB [Smart Junction Block]	×	×	×	×	×	
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	CLU [Cluster Module]	×	×	×	×	×	
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	ENGINE [Engine Control]	×	×	×	×	×	0034, 0059

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	AHS [Active Hood System]	x	x	x		x	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	BCM [Body Control Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	BCM [Cluster Module]	×	×	×	×	×	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	BCM [Power Trunk Module]	×	×	×	×		
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	BCM [Power Seat Module]	×	×	×	×	×	0122
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	CODE [Transmitter Code Saving]				×		0026
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	ENGINE [Leaded All]	×	×	×	×		0053, 0070, 0109, 0143
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	ENGINE [Unleaded All]	×	×	×	×		0053, 0109, 0143
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	ABSESP [ABS / ESP]	×	×	×	×	×	0062, 0085
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	EPB [Electric Parking Brake]	×	×	×	×	×	0037
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	EPS [Motor Driven Power Steering]	×	×	×	×		0086
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	4WD [4WD Control]	×	×	×	×	×	0023, 0024
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	SPAS [Smart Parking Assist System]	×	×	×	×	×	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	LDWS [Lane Departure Warning System]	×	×	×	×		0079
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	AHS [Active Hood System]	x	x	x		x	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	ENGINE [Engine Control]	x	x	x	x	x	0034, 0059
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	AHS [Active Hood System]	x	x	x		x	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	BCM [Power Trunk Module]	x	x	x	x		
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	ENGINE [Leaded All]	x	x	x	x		0053, 0070, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	ENGINE [Unleaded All]	×	×	×	×		0053, 0109, 0143
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	ABSESP [ABS / ESP]	×	×	×	×	×	0062, 0085
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	EPB [Electric Parking Brake]	×	×	×	×	×	0037
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	EPS [Motor Driven Power Steering]	×	×	×	×		0086
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	4WD [4WD Control]	×	×	×	×	×	0023, 0024
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	SPAS [Smart Parking Assist System]	×	×	×	×	×	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	LDWS [Lane Departure Warning System]	×	×	×	×		0079
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	×	×	×	×	×	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	×	×	×	×	×	0021
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	AHS [Active Hood System]	×	×	×		×	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	IMMO [Immobilizer]		×	×	×		0035, 0084, 0105, 0135
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0027, 0042, 0043, 0056, 0118
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	BCM [Power Seat Module]	×	×	×	×	×	0122
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	BCM [Cluster Module]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	BCM [Power Trunk Module]	×	×	×	×		
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	BCM [Smart Junction Block]	×	×	×	×	×	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GRANDEUR(LX)	1998	G 2.0 DOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1998	G 2.4 SOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1998	G 2.5 DOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1998	G 3.0 DOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1998	G 3.0 SOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1998	G 3.5 SOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1997	G 2.0 DOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1997	G 2.4 SOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1997	G 2.5 DOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1997	G 3.0 DOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1997	G 3.0 SOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1997	G 3.5 SOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1996	G 2.0 DOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1996	G 2.4 SOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1996	G 2.5 DOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1996	G 3.0 DOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1996	G 3.0 SOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1996	G 3.5 SOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1995	G 2.0 DOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1995	G 2.4 SOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1995	G 2.5 DOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1995	G 3.0 DOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1995	G 3.0 SOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1995	G 3.5 SOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1994	G 2.0 DOHC	AIRBAG [Airbag Control]		×	×	×		
Europe/General	GRANDEUR(LX)	1994	G 2.4 SOHC	AIRBAG [Airbag Control]		×	×	×		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR(LX)	1994	G 2.5 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	GRANDEUR(LX)	1994	G 3.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	GRANDEUR(LX)	1994	G 3.0 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	GRANDEUR(LX)	1994	G 3.5 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	0015, 0109, 0113
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	ENGINE [Leaded All]		x	x	x	x	0015, 0070, 0113
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ENGINE [Leaded All]		x	x	x	x	0015, 0070, 0113
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ENGINE [Unleaded GEN (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ENGINE [Leaded All (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ENGINE [Unleaded IMMO (ZIO2)]	x	x	x	x	x	0015, 0109, 0113
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ENGINE [Unleaded IMMO (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	0015, 0109, 0113
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	ENGINE [Leaded All]		x	x	x	x	0015, 0070, 0113
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ENGINE [Unleaded GEN (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ENGINE [Unleaded IMMO (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ENGINE [Leaded All]		x	x	x	x	0015, 0070, 0113
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ENGINE [Unleaded IMMO (ZiO2)]	x	x	x	x	x	0015, 0109, 0113
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ENGINE [Leaded (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	ENGINE [Unleaded IMMO (ZiO2)]	x	x	x	x	x	0015, 0109, 0113
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	ENGINE [Leaded All]		x	x	x	x	0015, 0070, 0113
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	ENGINE [Unleaded IMMO (TiO2)]	x	x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	ENGINE [Unleaded IMMO (TiO2)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ENGINE [Unleaded GEN (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ENGINE [Unleaded IMMO (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ENGINE [Leaded All]		x	x	x	x	0015, 0070, 0113
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ENGINE [Unleaded IMMO (ZiO2)]	x	x	x	x	x	0015, 0109, 0113

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ENGINE [Leaded (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	ENGINE [Leaded All]		x	x	x	x	0015, 0070, 0113
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Unleaded IMMO (TiO2)]	x	x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Unleaded IMMO (TiO2)]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Unleaded GEN (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Unleaded IMMO (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Leaded All]		x	x	x	x	0015, 0070, 0113
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Leaded (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	ENGINE [Leaded All]		x	x	x	x	0015, 0070, 0113
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Unleaded IMMO (TiO2)]	x	x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Unleaded IMMO (TiO2)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Unleaded GEN (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Unleaded IMMO (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Leaded All]		x	x	x	x	0015, 0070, 0113
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Leaded (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	ENGINE [Leaded All]		x	x	x	x	0015, 0070, 0113
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Unleaded IMMO (TiO2)]	x	x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Unleaded IMMO (TiO2)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Unleaded GEN (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Unleaded IMMO (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Leaded All]		x	x	x	x	0015, 0070, 0113
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Leaded (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	ENGINE [Leaded All]		x	x	x	x	0015, 0070, 0113
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Unleaded IMMO (TiO2)]	x	x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Unleaded IMMO (TiO2)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Unleaded GEN (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Unleaded IMMO (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Unleaded GEN]		x	x	x	x	0015, 0113
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Leaded All]		x	x	x	x	0015, 0070, 0113
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Leaded (EST+)]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ECS [Electronic Control Suspension]		x	x	x	x	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	AHLS [AHLS]	x	x	x	x		0083
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	ENGINE [Engine Control (2014.08.11~)]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	ENGINE [Unleaded All (~2014.08.10)]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	ENGINE [Leaded All (~2014.08.10)]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0013, 0037, 0060, 0095, 0096

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #1) (2014.08.11~)]	×	×	×			
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #2) (~2014.08.10)]	×	×	×			
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #1) (~2014.08.10)]	×	×	×			
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #2) (2014.08.11~)]	×	×	×			
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	AIRCON [Air Conditioner (~2014.08.10)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	AIRCON [Air Conditioner (2014.08.11~)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	SCC [Smart Cruise Control (~2014.08.10)]	×	×	×	×		
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	SCC [Smart Cruise Control (2014.08.11~)]	×	×	×	×		
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	LDWS [Lane Departure Warning System]	×	×	×	×		
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	BSD [Blind Spot Detection]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	IMMO [Immobilizer]		×	×	×		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	SMK [Smart Key Unit (2014.08.11~)]	×	×	×	×	×	0042, 0043, 0056, 0118
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	SMK [Smart Key Unit (~2014.08.10)]	×	×	×	×	×	0042, 0043, 0056, 0118
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	BCM [Body Control Module (~2014.08.10)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	BCM [Body Control Module (2014.08.11~)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	BCM [Cluster Module (2014.08.11~)]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	BCM [Cluster Module (~2014.08.10)]	×	×	×			
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	BCM [Steering Wheel Remote Control]	×	×	×	×		
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	BCM [Steering Column Module]	×	×	×	×	×	0131
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	BCM [Multi Function Switch]	×	×	×	×		
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	BCM [Power Seat Module]	×	×	×	×	×	0122
Europe/General	GRANDEUR/AZER A(HG)	2015	G 2.4 MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	ENGINE [Engine Control]	×	×	×	×		0040, 0069, 0109, 0143
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0085
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	EPB [Electric Parking Brake]	×	×	×	×	×	0013, 0037, 0060, 0095, 0096
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	AIRBAG [Airbag (Event #1) (2014.08.11~)]	×	×	×			
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	AIRBAG [Airbag (Event #2) (~2014.08.10)]	×	×	×			
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	AIRBAG [Airbag (Event #1) (~2014.08.10)]	×	×	×			
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	AIRBAG [Airbag (Event #2) (2014.08.11~)]	×	×	×			
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	AIRCON [Air Conditioner (~2014.08.10)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	AIRCON [Air Conditioner (2014.08.11~)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	SCC [Smart Cruise Control (2014.08.11~)]	×	×	×	×		
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	SCC [Smart Cruise Control (~2014.08.10)]	×	×	×	×		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	LDWS [Lane Departure Warning System]	×	×	×	×		
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	BSD [Blind Spot Detection]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	IMMO [Immobilizer]		×	×	×		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	SMK [Smart Key Unit (~2014.08.10)]	×	×	×	×	×	0042, 0043, 0056, 0118
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	SMK [Smart Key Unit (2014.08.11~)]	×	×	×	×	×	0042, 0043, 0056, 0118
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	BCM [Body Control Module (2014.08.11~)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	BCM [Body Control Module (~2014.08.10)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	BCM [Cluster Module (2014.08.11~)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	BCM [Cluster Module (~2014.08.10)]	×	×	×			
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	BCM [Steering Wheel Remote Control]	×	×	×	×		
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	BCM [Multi Function Switch]	×	×	×	×		
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	BCM [Power Seat Module]	×	×	×	×	×	0122
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	BCM [Steering Column Module]	×	×	×	×	×	0131
Europe/General	GRANDEUR/AZER A(HG)	2015	G 3.0 MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	ENGINE [Leaded All]	×	×	×	×		0015, 0070, 0109, 0113, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0013, 0037, 0060, 0095, 0096
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	BCM [Steering Wheel Remote Control]	x	x	x	x		
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	BCM [Cluster Module]	x	x	x			
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	BCM [Steering Column Module]	x	x	x	x	x	0131
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	BCM [Assist Door Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2014	G 2.4 MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	ENGINE [Engine Control]	×	×	×	×		0040, 0069, 0109, 0143
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0085
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	EPB [Electric Parking Brake]	×	×	×	×	×	0013, 0037, 0060, 0095, 0096
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	SCC [Smart Cruise Control]	×	×	×	×		
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	IMMO [Immobilizer]		×	×	×		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0042, 0043, 0056, 0118
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	BCM [Cluster Module]	×	×	×			
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	BCM [Steering Column Module]	×	×	×	×	×	0131

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	BCM [Steering Wheel Remote Control]	x	x	x	x		
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	GRANDEUR/AZER A(HG)	2014	G 3.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0013, 0037, 0060, 0095, 0096
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	BCM [Steering Wheel Remote Control]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	BCM [Power Seat Module]	×	×	×	×	×	0122
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	BCM [Cluster Module]	×	×	×			
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	BCM [Steering Column Module]	×	×	×	×	×	0131
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2013	G 2.4 MPI	CODE [Transmitter Code Saving]				×		0026
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	ENGINE [Engine Control]	×	×	×	×		0040, 0069, 0109, 0143
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	ESP [Electronic Stability Program]	×	×	×	×	×	0062, 0085
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	EPB [Electric Parking Brake]	×	×	×	×	×	0013, 0037, 0060, 0095, 0096
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	SCC [Smart Cruise Control]	×	×	×	×		
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	IMMO [Immobilizer]		×	×	×		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0042, 0043, 0056, 0118

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	BCM [Cluster Module]	x	x	x			
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	BCM [Steering Column Module]	x	x	x	x	x	0131
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	BCM [Steering Wheel Remote Control]	x	x	x	x		
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	GRANDEUR/AZER A(HG)	2013	G 3.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0013, 0037, 0060, 0095, 0096
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	BCM [Steering Wheel Remote Control]	x	x	x	x		
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	BCM [Cluster Module]	x	x	x			
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	BCM [Steering Column Module]	x	x	x	x	x	0131
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(HG)	2012	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0013, 0037, 0060, 0095, 0096
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	BCM [Cluster Module]	x	x	x			
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	BCM [Steering Column Module]	x	x	x	x	x	0131
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	BCM [Steering Wheel Remote Control]	x	x	x	x		
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	BCM [Multi Function Switch]	x	x	x	x		
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	GRANDEUR/AZER A(HG)	2012	G 3.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	AIRBAG [Airbag (GEN)]	x	x	x			0102
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	AIRBAG [Airbag (NAS)]	x	x	x			0099, 0102

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	EPS [Electronic Power Steering]		x	x	x		
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	SMK [Smart Key Unit]	x	x	x	x	x	0125
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	SMK [Interface Unit]	x	x	x		x	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	SMK [Smart Key Code Saving]				x		0126
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	BCM [Body Control Module]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	BCM [Integrated Memory System]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	BCM [User Option]				x		
Europe/General	GRANDEUR/AZER A(TG)	2011	D 2.2 TCI-D	CODE [Transmitter Code Saving]				x		
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	SMK [Smart Key Code Saving]				x		0126
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0125
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	SMK [Interface Unit]	x	x	x		x	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	BCM [Integrated Memory System]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	BCM [Assist Door Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	BCM [Body Control Module]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	BCM [User Option]				×		
Europe/General	GRANDEUR/AZER A(TG)	2011	G 2.7 DOHC	CODE [Transmitter Code Saving]				×		
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0015
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	AIRBAG [Airbag Control]	×	×	×			0102
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	EPS [Electronic Power Steering]		×	×	×		
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	SMK [Smart Key Code Saving]				×		0126
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	SMK [Smart Key Unit]	×	×	×	×	×	0125
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	SMK [Interface Unit]	×	×	×		×	0031, 0067

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	BCM [Integrated Memory System]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	BCM [Body Control Module]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	BCM [User Option]				x		
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	SMK [Smart Key Code Saving]				x		0126
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0125
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	SMK [Interface Unit]	x	x	x		x	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	BCM [Integrated Memory System]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	BCM [User Option]				x		
Europe/General	GRANDEUR/AZER A(TG)	2011	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	AIRBAG [Airbag (GEN)]	x	x	x			0102
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	AIRBAG [Airbag (NAS)]	x	x	x			0099, 0102
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	EPS [Electronic Power Steering]		x	x	x		
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	SMK [Smart Key Unit]	×	×	×	×	×	0125
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	SMK [Interface Unit]	×	×	×		×	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	SMK [Smart Key Code Saving]				×		0126
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	BCM [Body Control Module]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	BCM [Integrated Memory System]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	BCM [Tilt / Telescope]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	BCM [User Option]				×		
Europe/General	GRANDEUR/AZER A(TG)	2010	D 2.2 TCI-D	CODE [Transmitter Code Saving]				×		
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0053
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0070

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	AIRBAG [Airbag Control]	×	×	×			0102
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	EPS [Electronic Power Steering]		×	×	×		
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	SMK [Smart Key Code Saving]				×		0126
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	SMK [Smart Key Unit]	×	×	×	×	×	0125
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	SMK [Interface Unit]	×	×	×		×	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	BCM [Tilt / Telescope]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	BCM [Integrated Memory System]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	BCM [Body Control Module]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	BCM [User Option]				×		
Europe/General	GRANDEUR/AZER A(TG)	2010	G 2.7 DOHC	CODE [Transmitter Code Saving]				×		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	SMK [Smart Key Code Saving]				x		0126

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0125
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	SMK [Interface Unit]	x	x	x		x	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	BCM [Integrated Memory System]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	BCM [Body Control Module]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	BCM [User Option]				x		
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	AIRBAG [Airbag Control]	×	×	×			0102
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	EPS [Electronic Power Steering]		×	×	×		
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	SMK [Smart Key Code Saving]				×		0126
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	SMK [Smart Key Unit]	×	×	×	×	×	0125
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	SMK [Interface Unit]	×	×	×		×	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	BCM [Tilt / Telescope]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	BCM [Integrated Memory System]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	BCM [Body Control Module]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	BCM [User Option]				×		
Europe/General	GRANDEUR/AZER A(TG)	2010	G 3.8 DOHC	CODE [Transmitter Code Saving]				×		
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	ENGINE [EMS ECU]	×	×	×	×	×	0015

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	ENGINE [EMS ECU]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	ENGINE [IFB ECU]		x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	SMK [Smart Key Code Saving]				x		
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	BCM [Body Control Module]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	BCM [User Option]				x		
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	BCM [Integrated Memory System]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2010	L 2.7 DOHC	CODE [Transmitter Code Saving]				×		
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	ENGINE [Engine Control]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	AIRBAG [Airbag Control (General)]	×	×	×			0102
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	AIRBAG [Airbag Control (NAS)]	×	×	×			0099, 0102
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	EPS [Electronic Power Steering]		×	×	×		
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	SMK [Smart Key Unit]	×	×	×	×	×	0125
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	SMK [Interface Unit]	×	×	×		×	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	SMK [Smart Key Code Saving]				×		0126
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	BCM [Body Control Module]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	BCM [Integrated Memory System]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	BCM [Tilt / Telescope]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	BCM [User Option]				×		
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	CODE [Transmitter Code Saving (2009.01.05~)]				×		
Europe/General	GRANDEUR/AZER A(TG)	2009	D 2.2 TCI-D	CODE [Transmitter Code Saving (~2009.01.04)]				×		
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0053
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0070
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	AIRBAG [Airbag Control]	×	×	×			0102
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	EPS [Electronic Power Steering]		×	×	×		
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	SMK [Interface Unit]	×	×	×		×	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	SMK [Smart Key Unit]	×	×	×	×	×	0125
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	SMK [Smart Key Code Saving]				×		0126
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	BCM [Body Control Module]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	BCM [User Option]				×		
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	BCM [Tilt / Telescope]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	BCM [Integrated Memory System]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	CODE [Transmitter Code Saving (2009.01.05~)]				×		
Europe/General	GRANDEUR/AZER A(TG)	2009	G 2.7 DOHC	CODE [Transmitter Code Saving (~2009.01.04)]				×		
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0053
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0070

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	SMK [Interface Unit]	x	x	x		x	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0125
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	SMK [Smart Key Code Saving]				x		0126
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	BCM [Body Control Module]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	BCM [User Option]				x		
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	BCM [Integrated Memory System]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	BCM [Assist Door Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	CODE [Transmitter Code Saving (2009.01.05~)]				×		
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.3 DOHC	CODE [Transmitter Code Saving (~2009.01.04)]				×		
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0053
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0070
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	AIRBAG [Airbag Control]	×	×	×			0102
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	EPS [Electronic Power Steering]		×	×	×		
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	SMK [Interface Unit]	×	×	×		×	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	SMK [Smart Key Unit]	×	×	×	×	×	0125
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	SMK [Smart Key Code Saving]				×		0126
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	BCM [Body Control Module]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	BCM [User Option]				×		
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	BCM [Tilt / Telescope]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	BCM [Integrated Memory System]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	CODE [Transmitter Code Saving (2009.01.05~)]				×		
Europe/General	GRANDEUR/AZER A(TG)	2009	G 3.8 DOHC	CODE [Transmitter Code Saving (~2009.01.04)]				×		
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	ENGINE [IFB ECU]		×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	ENGINE [EMS ECU]	×	×	×	×	×	0015
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	ENGINE [EMS ECU]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	AIRBAG [Airbag Control]	×	×	×			0102

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	EPS [Electronic Power Steering]		×	×	×		
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	SMK [Smart Key Code Saving (Button)]				×		
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	SMK [Smart Key Unit (Button)]	×	×	×	×	×	0056, 0098, 0118
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	SMK [Interface Unit (Key)]	×	×	×		×	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	SMK [Power Distribution Module (Button)]	×	×	×	×	×	0042
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	SMK [MULTISELECTION]	×	×	×	×	×	0125
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	SMK [Smart Key Unit (Key)]	×	×	×	×	×	0125
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	SMK [Smart Key Code Saving (Key)]				×		0126
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	BCM [Body Control Module (~2009.01.05)]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	BCM [Driver Door Module (~2009.01.05)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	BCM [Assist Door Module (~2009.01.05)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	BCM [Integrated Memory System (~2009.01.05)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	BCM [Tilt / Telescope (~2009.01.05)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	BCM [MULTISELECTION]				×		
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	BCM [User Option (~2009.01.05)]				×		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	BCM [Integrated Memory System (2009.01.05~)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	BCM [Tilt / Telescope (2009.01.05~)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	BCM [User Option (2009.01.05~)]				×		
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	BCM [Body Control Module (2009.01.05~)]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	BCM [Driver Door Module (2009.01.05~)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	BCM [Assist Door Module (2009.01.05~)]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	CODE [Transmitter Code Saving (2009.01.05~)]				×		
Europe/General	GRANDEUR/AZER A(TG)	2009	L 2.7 DOHC	CODE [Transmitter Code Saving (~2009.01.05)]				×		
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	ENGINE [Engine Control]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	AIRBAG [Airbag Control (General)]	×	×	×			0102
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	AIRBAG [Airbag Control (NAS)]	×	×	×			0099, 0102
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	EPS [Electronic Power Steering]		×	×	×		
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	SMK [Smart Key Unit]	×	×	×	×	×	0125

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	SMK [Interface Unit]	x	x	x		x	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	SMK [Smart Key Code Saving]				x		0126
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	BCM [Body Control Module]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	BCM [Integrated Memory System]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	BCM [User Option]				x		
Europe/General	GRANDEUR/AZER A(TG)	2008	D 2.2 TCI-D	CODE [Transmitter Code Saving]				x		
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	SMK [Smart Key Code Saving]				x		0126
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0125
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	SMK [Interface Unit]	x	x	x		x	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	BCM [Integrated Memory System]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	BCM [Body Control Module]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	BCM [User Option]				x		
Europe/General	GRANDEUR/AZER A(TG)	2008	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	SMK [Smart Key Code Saving]				x		0126
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0125
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	SMK [Interface Unit]	x	x	x		x	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	BCM [Integrated Memory System]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	BCM [Body Control Module]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	BCM [User Option]				x		
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	EPS [Electronic Power Steering]		×	×	×		
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	SMK [Smart Key Code Saving]				×		0126
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	SMK [Smart Key Unit]	×	×	×	×	×	0125
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	SMK [Interface Unit]	×	×	×		×	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	BCM [Tilt / Telescope]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	BCM [Integrated Memory System]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	BCM [Body Control Module]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	BCM [User Option]				×		
Europe/General	GRANDEUR/AZER A(TG)	2008	G 3.8 DOHC	CODE [Transmitter Code Saving]				×		
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	ENGINE [IFB ECU]		×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	ENGINE [EMS ECU]	×	×	×	×	×	0015
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	ENGINE [EMS ECU]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	BCM [User Option]				x		
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	BCM [Integrated Memory System]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	BCM [Body Control Module]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(TG)	2008	L 2.7 DOHC	CODE [Transmitter Code Saving]				x		
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	AIRBAG [Airbag Control (General)]	x	x	x			0102
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	AIRBAG [Airbag Control (NAS)]	x	x	x			0099, 0102
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	EPS [Electronic Power Steering]		x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	SMK [Smart Key Unit]	x	x	x	x	x	0125
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	SMK [Interface Unit]	x	x	x		x	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	SMK [Smart Key Code Saving]				x		0126
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	BCM [Body Control Module]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	BCM [Integrated Memory System]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	BCM [User Option]				x		
Europe/General	GRANDEUR/AZER A(TG)	2007	D 2.2 TCI-D	CODE [Transmitter Code Saving]				x		
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	SMK [Smart Key Code Saving]				x		0126
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0125
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	SMK [Interface Unit]	x	x	x		x	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	BCM [Integrated Memory System]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	BCM [Body Control Module]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	BCM [User Option]				×		
Europe/General	GRANDEUR/AZER A(TG)	2007	G 2.7 DOHC	CODE [Transmitter Code Saving]				×		
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0053
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0070
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	AIRBAG [Airbag Control]	×	×	×			0102
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	EPS [Electronic Power Steering]		×	×	×		
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	SMK [Smart Key Code Saving]				×		0126
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	SMK [Smart Key Unit]	×	×	×	×	×	0125
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	SMK [Interface Unit]	×	×	×		×	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	BCM [Tilt / Telescope]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	BCM [Integrated Memory System]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	BCM [Body Control Module]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	BCM [User Option]				×		
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.3 DOHC	CODE [Transmitter Code Saving]				×		
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0015, 0053
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0053
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0070
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	AIRBAG [Airbag Control]	×	×	×			0102
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	EPS [Electronic Power Steering]		×	×	×		
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	SMK [Smart Key Code Saving]				×		0126
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	SMK [Smart Key Unit]	×	×	×	×	×	0125
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	SMK [Interface Unit]	×	×	×		×	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	BCM [Tilt / Telescope]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	BCM [Integrated Memory System]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	BCM [Body Control Module]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	BCM [User Option]				×		
Europe/General	GRANDEUR/AZER A(TG)	2007	G 3.8 DOHC	CODE [Transmitter Code Saving]				×		
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	ENGINE [IFB ECU]		×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	ENGINE [EMS ECU]	x	x	x	x	x	0015
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	ENGINE [EMS ECU]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	BCM [User Option]				x		
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	BCM [Integrated Memory System]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	BCM [Body Control Module]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(TG)	2007	L 2.7 DOHC	CODE [Transmitter Code Saving]				x		
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	SMK [Interface Unit]	x	x	x		x	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0125
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	SMK [Smart Key Code Saving]				x		0126
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	BCM [Body Control Module]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	BCM [Integrated Memory System]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	BCM [User Option]				x		
Europe/General	GRANDEUR/AZER A(TG)	2006	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	SMK [Interface Unit]	x	x	x		x	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0125
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	SMK [Smart Key Code Saving]				x		0126
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	BCM [Body Control Module]	x	x	x		x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	BCM [Integrated Memory System]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	BCM [User Option]				x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.3 DOHC	CODE [Transmitter Code Saving]				×		
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0070
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0053
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	AIRBAG [Airbag Control]	×	×	×			0102
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	EPS [Electronic Power Steering]		×	×	×		
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	SMK [Interface Unit]	×	×	×		×	0031, 0067
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	SMK [Smart Key Unit]	×	×	×	×	×	0125
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	SMK [Smart Key Code Saving]				×		0126
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	BCM [Body Control Module]	×	×	×		×	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	BCM [Integrated Memory System]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	BCM [Tilt / Telescope]	×	×	×	×	×	
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	BCM [User Option]				×		
Europe/General	GRANDEUR/AZER A(TG)	2006	G 3.8 DOHC	CODE [Transmitter Code Saving]				×		
Europe/General	H-1 TRUCK(SR)	2009	D 2.5 TCI	ENGINE [Engine Control]		×	×	×	×	
Europe/General	H-1 TRUCK(SR)	2009	D 2.5 TCI	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	H-1 TRUCK(SR)	2009	D 2.5 TCI	ABS [Anti - Lock Brake]		×	×	×	×	0062
Europe/General	H-1 TRUCK(SR)	2009	D 2.5 TCI	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1 TRUCK(SR)	2008	D 2.5 TCI	ENGINE [Engine Control]		×	×	×	×	
Europe/General	H-1 TRUCK(SR)	2008	D 2.5 TCI	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	H-1 TRUCK(SR)	2008	D 2.5 TCI	ABS [Anti - Lock Brake]		×	×	×	×	0062
Europe/General	H-1 TRUCK(SR)	2008	D 2.5 TCI	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1 TRUCK(SR)	2007	D 2.5 TCI	ENGINE [Engine Control]		×	×	×	×	
Europe/General	H-1 TRUCK(SR)	2007	D 2.5 TCI	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	H-1 TRUCK(SR)	2007	D 2.5 TCI	ABS [Anti - Lock Brake]		×	×	×	×	0062
Europe/General	H-1 TRUCK(SR)	2007	D 2.5 TCI	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1 TRUCK(SR)	2006	D 2.5 TCI	ENGINE [Engine Control]		×	×	×	×	
Europe/General	H-1 TRUCK(SR)	2006	D 2.5 TCI	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	H-1 TRUCK(SR)	2006	D 2.5 TCI	ABS [Anti - Lock Brake]		×	×	×	×	0062
Europe/General	H-1 TRUCK(SR)	2006	D 2.5 TCI	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1 TRUCK(SR)	2005	D 2.5 TCI	ENGINE [Engine Control]		×	×	×	×	
Europe/General	H-1 TRUCK(SR)	2005	D 2.5 TCI	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	H-1 TRUCK(SR)	2005	D 2.5 TCI	ABS [Anti - Lock Brake]		×	×	×	×	0062
Europe/General	H-1 TRUCK(SR)	2005	D 2.5 TCI	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1 TRUCK(SR)	2004	D 2.5 TCI	ENGINE [Engine Control]		×	×	×	×	
Europe/General	H-1 TRUCK(SR)	2004	D 2.5 TCI	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	H-1 TRUCK(SR)	2004	D 2.5 TCI	ABS [Anti - Lock Brake]		×	×	×	×	0062
Europe/General	H-1 TRUCK(SR)	2004	D 2.5 TCI	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1 TRUCK(SR)	2003	D 2.5 TCI	ENGINE [Engine Control]		×	×	×	×	
Europe/General	H-1 TRUCK(SR)	2003	D 2.5 TCI	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	H-1 TRUCK(SR)	2003	D 2.5 TCI	ABS [Anti - Lock Brake]		×	×	×	×	0062
Europe/General	H-1 TRUCK(SR)	2003	D 2.5 TCI	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1 TRUCK(SR)	2002	D 2.5 TCI	ENGINE [Engine Control]		×	×	×	×	
Europe/General	H-1 TRUCK(SR)	2002	D 2.5 TCI	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	H-1 TRUCK(SR)	2002	D 2.5 TCI	ABS [Anti - Lock Brake]		×	×	×	×	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1 TRUCK(SR)	2002	D 2.5 TCI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1 TRUCK(SR)	2001	D 2.5 TCI	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-1 TRUCK(SR)	2001	D 2.5 TCI	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1 TRUCK(SR)	2001	D 2.5 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	H-1 TRUCK(SR)	2001	D 2.5 TCI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2009	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-1(A1)	2009	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2009	D 2.5 TCI-4D56	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2009	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2009	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2009	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2009	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2009	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2009	D 2.5 TCI-4D56	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	H-1(A1)	2009	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	H-1(A1)	2009	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	H-1(A1)	2009	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	H-1(A1)	2009	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2009	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2009	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2009	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2009	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2009	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2009	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2009	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2008	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-1(A1)	2008	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1(A1)	2008	D 2.5 TCI-4D56	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2008	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2008	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2008	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2008	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2008	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2008	D 2.5 TCI-4D56	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2008	D 2.5 TCI-A	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	H-1(A1)	2008	D 2.5 TCI-A	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2008	D 2.5 TCI-A	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2008	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2008	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2008	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2008	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2008	D 2.5 TCI-A	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2008	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	H-1(A1)	2008	D 2.5 TCI-A	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	H-1(A1)	2008	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	H-1(A1)	2008	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	H-1(A1)	2008	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	H-1(A1)	2008	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2008	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2008	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2008	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2008	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2008	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2008	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2008	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2007	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-1(A1)	2007	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2007	D 2.5 TCI-4D56	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2007	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2007	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2007	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2007	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2007	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2007	D 2.5 TCI-4D56	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	H-1(A1)	2007	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	H-1(A1)	2007	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	H-1(A1)	2007	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	H-1(A1)	2007	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2007	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2007	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2007	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2007	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2007	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2007	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2007	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2006	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-1(A1)	2006	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2006	D 2.5 TCI-4D56	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2006	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2006	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2006	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2006	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2006	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2006	D 2.5 TCI-4D56	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2006	D 2.5 TCI-A	ENGINE [Engine Control (VGT)]	x	x	x	x	x	
Europe/General	H-1(A1)	2006	D 2.5 TCI-A	ENGINE [Engine Control (WGT)]	x	x	x	x	x	
Europe/General	H-1(A1)	2006	D 2.5 TCI-A	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2006	D 2.5 TCI-A	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2006	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2006	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2006	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1(A1)	2006	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2006	D 2.5 TCI-A	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2006	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	H-1(A1)	2006	D 2.5 TCI-A	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	H-1(A1)	2006	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	H-1(A1)	2006	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	H-1(A1)	2006	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	H-1(A1)	2006	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2006	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2006	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2006	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2006	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2006	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2006	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2006	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2005	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-1(A1)	2005	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2005	D 2.5 TCI-4D56	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2005	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2005	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2005	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2005	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2005	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2005	D 2.5 TCI-4D56	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	ENGINE [Engine Control (VGT)]	x	x	x	x	x	
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	ENGINE [Engine Control (WGT)]	x	x	x	x	x	
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	H-1(A1)	2005	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	H-1(A1)	2005	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1(A1)	2005	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	H-1(A1)	2005	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2005	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2005	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2005	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2005	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2005	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2005	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2005	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2004	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-1(A1)	2004	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2004	D 2.5 TCI-4D56	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2004	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2004	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2004	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2004	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2004	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2004	D 2.5 TCI-4D56	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	ENGINE [Engine Control (VGT)]	x	x	x	x	x	
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	ENGINE [Engine Control (WGT)]	x	x	x	x	x	
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	H-1(A1)	2004	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	H-1(A1)	2004	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	H-1(A1)	2004	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	H-1(A1)	2004	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2004	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2004	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]	x	x	x	x	x	0062
Europe/General	H-1(A1)	2004	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2004	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1(A1)	2004	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2004	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2004	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2003	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-1(A1)	2003	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2003	D 2.5 TCI-4D56	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2003	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2003	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2003	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2003	D 2.5 TCI-4D56	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	ENGINE [Engine Control (VGT)]	x	x	x	x	x	
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	ENGINE [Engine Control (WGT)]	x	x	x	x	x	
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	H-1(A1)	2003	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	H-1(A1)	2003	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	H-1(A1)	2003	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	H-1(A1)	2003	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2003	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2003	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2003	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2003	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2003	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2002	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-1(A1)	2002	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2002	D 2.5 TCI-4D56	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2002	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2002	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2002	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2002	D 2.5 TCI-4D56	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2002	D 2.5 TCI-A	ENGINE [Engine Control (VGT)]	x	x	x	x	x	
Europe/General	H-1(A1)	2002	D 2.5 TCI-A	ENGINE [Engine Control (WGT)]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1(A1)	2002	D 2.5 TCI-A	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2002	D 2.5 TCI-A	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2002	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2002	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2002	D 2.5 TCI-A	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2002	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	H-1(A1)	2002	D 2.5 TCI-A	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	H-1(A1)	2002	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	H-1(A1)	2002	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	H-1(A1)	2002	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	H-1(A1)	2002	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2002	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2002	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2002	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2002	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2002	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2001	D 2.5 TCI-4D56	ENGINE [Engine Control (TCI)]		x	x	x	x	
Europe/General	H-1(A1)	2001	D 2.5 TCI-4D56	ENGINE [Engine Control (T / C)]		x	x	x	x	
Europe/General	H-1(A1)	2001	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2001	D 2.5 TCI-4D56	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2001	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2001	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2001	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2001	D 2.5 TCI-4D56	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2001	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2001	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2001	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2001	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2001	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2001	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2001	G 2.4 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2001	G 2.4 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2001	G 2.4 SOHC	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2001	G 2.4 SOHC	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2001	G 2.4 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2001	G 2.4 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2000	D 2.5 TCI-4D56	ENGINE [Engine Control (TCI)]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1(A1)	2000	D 2.5 TCI-4D56	ENGINE [Engine Control (T / C)]		x	x	x	x	
Europe/General	H-1(A1)	2000	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2000	D 2.5 TCI-4D56	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2000	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2000	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2000	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2000	D 2.5 TCI-4D56	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	2000	G 2.4 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	2000	G 2.4 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	2000	G 2.4 SOHC	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2000	G 2.4 SOHC	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	2000	G 2.4 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	2000	G 2.4 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	1999	D 2.5 TCI-4D56	ENGINE [Engine Control (TCI)]		x	x	x	x	
Europe/General	H-1(A1)	1999	D 2.5 TCI-4D56	ENGINE [Engine Control (T / C)]		x	x	x	x	
Europe/General	H-1(A1)	1999	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	1999	D 2.5 TCI-4D56	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	1999	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	1999	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	1999	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	1999	D 2.5 TCI-4D56	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	1999	G 2.4 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	1999	G 2.4 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	1999	G 2.4 SOHC	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	1999	G 2.4 SOHC	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	1999	G 2.4 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	1999	G 2.4 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	1998	D 2.5 TCI-4D56	ENGINE [Engine Control (TCI)]		x	x	x	x	
Europe/General	H-1(A1)	1998	D 2.5 TCI-4D56	ENGINE [Engine Control (T / C)]		x	x	x	x	
Europe/General	H-1(A1)	1998	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	1998	D 2.5 TCI-4D56	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	1998	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	1998	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	1998	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	1998	D 2.5 TCI-4D56	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	1998	G 2.4 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	1998	G 2.4 SOHC	AT [Automatic Transaxle]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1(A1)	1998	G 2.4 SOHC	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	1998	G 2.4 SOHC	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	1998	G 2.4 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	1998	G 2.4 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	1997	D 2.5 TCI-4D56	ENGINE [Engine Control (TCI)]		x	x	x	x	
Europe/General	H-1(A1)	1997	D 2.5 TCI-4D56	ENGINE [Engine Control (T / C)]		x	x	x	x	
Europe/General	H-1(A1)	1997	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	1997	D 2.5 TCI-4D56	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	1997	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	1997	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	1997	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	1997	D 2.5 TCI-4D56	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1(A1)	1997	G 2.4 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-1(A1)	1997	G 2.4 SOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1(A1)	1997	G 2.4 SOHC	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	1997	G 2.4 SOHC	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
Europe/General	H-1(A1)	1997	G 2.4 SOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1(A1)	1997	G 2.4 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	BCM [Body Control Module]	x			x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	ENGINE [Engine Control]	×	×	×	×	×	0058
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0132
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	ABSESP [ABS / ESP]	×	×	×	×	×	0062, 0085
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	BHEATER [Fuel Fired Heater]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	ENGINE [Leaded All]	×	×	×	×		0015, 0070, 0109, 0113, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	ENGINE [Unleaded GEN]	×	×	×	×		0015, 0109, 0113, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×		0015, 0109, 0113, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	ABSESP [ABS / ESP]	×	×	×	×	×	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	ENGINE [Engine Control]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	IMMO [Immobilizer]		×	×	×		0035, 0084, 0105, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	ENGINE [Engine Control]	×	×	×	×	×	0058
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0132
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	ABSESP [ABS / ESP]	×	×	×	×	×	0062, 0085

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	BHEATER [Fuel Fired Heater]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	ENGINE [Leaded All]	×	×	×	×		0015, 0070, 0109, 0113, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	ENGINE [Unleaded GEN]	×	×	×	×		0015, 0109, 0113, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×		0015, 0109, 0113, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	CODE [Transmitter Code Saving]				×		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	ENGINE [Engine Control]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	IMMO [Immobilizer]		×	×	×		0035, 0084, 0105, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	ENGINE [Engine Control]	×	×	×	×	×	0058
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0132
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	ABSESP [ABS / ESP]	×	×	×	×	×	0062, 0085
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	BHEATER [Fuel Fired Heater]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	CODE [Transmitter Code Saving]				×		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	ENGINE [Leaded All]	×	×	×	×		0015, 0070, 0109, 0113, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	ENGINE [Unleaded GEN]	×	×	×	×		0015, 0109, 0113, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×		0015, 0109, 0113, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	ENGINE [Engine Control]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	BCM [Body Control Module]	x			x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				x		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0132
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	BCM [Body Control Module]	x			x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	CODE [Transmitter Code Saving]				x		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0132
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	BHEATER [Fuel Fired Heater]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	BCM [Body Control Module]	x			x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	CODE [Transmitter Code Saving]				x		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	IMMO [Immobilizer]		×	×	×		0035, 0084, 0105, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	ENGINE [Engine Control]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0132
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	ENGINE [Engine Control]	×	×	×	×	×	0058
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0132
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	ABSESP [ABS / ESP]	×	×	×	×	×	0062, 0085

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	BHEATER [Fuel Fired Heater]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	ENGINE [Engine Control]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	×	×	×	×	×	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	IMMO [Immobilizer]		×	×	×		0035, 0084, 0105, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	ENGINE [Engine Control]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0132
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	x	x	x			
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	BCM [Body Control Module]	x			x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				x		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0132
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	AIRBAG [Airbag Control]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	ENGINE [Engine Control]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	×	×	×			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	IMMO [Immobilizer]		×	×	×		0035, 0084, 0105, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	ENGINE [Engine Control]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0132
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0113
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	ABSESP [ABS / ESP]	×	×	×	×	×	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	AIRBAG [Airbag Control]	×	×	×			
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	BCM [Body Control Module]	×			×	×	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	CODE [Transmitter Code Saving]				×		0026
Europe/General	H-100 TRUCK(AU)	2003	D 2.5 TC/TCI	ENGINE [Engine Control]		×	×	×	×	
Europe/General	H-100 TRUCK(AU)	2002	D 2.5 TC/TCI	ENGINE [Engine Control]		×	×	×	×	
Europe/General	H-100 TRUCK(AU)	2001	D 2.5 TC/TCI	ENGINE [Engine Control]		×	×	×	×	
Europe/General	H-100 TRUCK(AU)	2000	D 2.5 TC/TCI	ENGINE [Engine Control]		×	×	×	×	
Europe/General	H-100 TRUCK(AU)	1999	D 2.5 TC/TCI	ENGINE [Engine Control]		×	×	×	×	
Europe/General	H-100 TRUCK(AU)	1998	D 2.5 TC/TCI	ENGINE [Engine Control]		×	×	×	×	
Europe/General	H-100 TRUCK(AU)	1997	D 2.5 TC/TCI	ENGINE [Engine Control]		×	×	×	×	
Europe/General	H-100 TRUCK(AU)	1996	D 2.5 TC/TCI	ENGINE [Engine Control]		×	×	×	×	
Europe/General	H-100 TRUCK(HR)	2015	D 2.5 TCI-A2	ENGINE [Engine Control]	×	×	×	×	×	0058
Europe/General	H-100 TRUCK(HR)	2015	D 2.5 TCI-A2	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0132
Europe/General	H-100 TRUCK(HR)	2015	D 2.5 TCI-A2	ABS [Anti - Lock Brake]	×	×	×	×	×	0062, 0085
Europe/General	H-100 TRUCK(HR)	2015	D 2.5 TCI-A2	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	H-100 TRUCK(HR)	2015	D 2.5 TCI-A2	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	H-100 TRUCK(HR)	2015	D 2.5 TCI-A2	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	H-100 TRUCK(HR)	2014	D 2.5 TCI-A2	ENGINE [Engine Control]	×	×	×	×	×	0058
Europe/General	H-100 TRUCK(HR)	2014	D 2.5 TCI-A2	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0132
Europe/General	H-100 TRUCK(HR)	2014	D 2.5 TCI-A2	ABS [Anti - Lock Brake]	×	×	×	×	×	0062
Europe/General	H-100 TRUCK(HR)	2014	D 2.5 TCI-A2	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	H-100 TRUCK(HR)	2014	D 2.5 TCI-A2	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	H-100 TRUCK(HR)	2014	D 2.5 TCI-A2	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	H-100 TRUCK(HR)	2013	D 2.5 TCI-A2	ENGINE [Engine Control]	×	×	×	×	×	0058
Europe/General	H-100 TRUCK(HR)	2013	D 2.5 TCI-A2	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0132
Europe/General	H-100 TRUCK(HR)	2013	D 2.5 TCI-A2	ABS [Anti - Lock Brake]	×	×	×	×	×	0062
Europe/General	H-100 TRUCK(HR)	2013	D 2.5 TCI-A2	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	H-100 TRUCK(HR)	2013	D 2.5 TCI-A2	AIRBAG [Airbag (Event #1)]	×	×	×			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-100 TRUCK(HR)	2013	D 2.5 TCI-A2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	H-100 TRUCK(HR)	2012	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2012	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2012	D 2.5 TCI-4D56	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	H-100 TRUCK(HR)	2012	D 2.5 TCI-A	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2012	D 2.5 TCI-A	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2012	D 2.5 TCI-A	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	H-100 TRUCK(HR)	2011	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2011	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2011	D 2.5 TCI-4D56	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	H-100 TRUCK(HR)	2011	D 2.5 TCI-A	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2011	D 2.5 TCI-A	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2011	D 2.5 TCI-A	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	H-100 TRUCK(HR)	2010	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2010	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2010	D 2.5 TCI-4D56	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	H-100 TRUCK(HR)	2010	D 2.5 TCI-A	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2010	D 2.5 TCI-A	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2010	D 2.5 TCI-A	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	H-100 TRUCK(HR)	2009	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2009	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2009	D 2.5 TCI-4D56	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	H-100 TRUCK(HR)	2009	D 2.5 TCI-A	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2009	D 2.5 TCI-A	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2009	D 2.5 TCI-A	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	H-100 TRUCK(HR)	2008	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2008	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2008	D 2.5 TCI-4D56	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	H-100 TRUCK(HR)	2008	D 2.5 TCI-A	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2008	D 2.5 TCI-A	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2008	D 2.5 TCI-A	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	H-100 TRUCK(HR)	2007	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2007	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2007	D 2.5 TCI-4D56	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	H-100 TRUCK(HR)	2006	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2006	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	H-100 TRUCK(HR)	2006	D 2.5 TCI-4D56	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	H-100 TRUCK(HR)	2005	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2005	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2005	D 2.5 TCI-4D56	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	H-100 TRUCK(HR)	2004	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2004	D 2.5 TCI-4D56	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2004	D 2.5 TCI-4D56	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	H-100 TRUCK(HR)	2003	D 2.5 TCI	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2003	D 2.5 TCI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	H-100 TRUCK(HR)	2003	D 2.5 TCI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	H-100(AH)	2001	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100(AH)	2001	G 2.4 SOHC	ENGINE [Leaded]		x	x	x	x	
Europe/General	H-100(AH)	2001	G 2.4 SOHC	ENGINE [Unleaded]		x	x	x	x	
Europe/General	H-100(AH)	2000	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100(AH)	2000	G 2.4 SOHC	ENGINE [Leaded]		x	x	x	x	
Europe/General	H-100(AH)	2000	G 2.4 SOHC	ENGINE [Unleaded]		x	x	x	x	
Europe/General	H-100(AH)	1999	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100(AH)	1999	G 2.4 SOHC	ENGINE [Leaded]		x	x	x	x	
Europe/General	H-100(AH)	1999	G 2.4 SOHC	ENGINE [Unleaded]		x	x	x	x	
Europe/General	H-100(AH)	1998	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100(AH)	1998	G 2.4 SOHC	ENGINE [Leaded]		x	x	x	x	
Europe/General	H-100(AH)	1998	G 2.4 SOHC	ENGINE [Unleaded]		x	x	x	x	
Europe/General	H-100(AH)	1997	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100(AH)	1997	G 2.4 SOHC	ENGINE [Leaded]		x	x	x	x	
Europe/General	H-100(AH)	1997	G 2.4 SOHC	ENGINE [Unleaded]		x	x	x	x	
Europe/General	H-100(AH)	1996	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100(AH)	1995	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100(AH)	1994	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	H-100(AH)	1993	D 2.5 TCI-4D56	ENGINE [Engine Control]		x	x	x	x	
Europe/General	HB20(HB)	2015	F 1.0 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	HB20(HB)	2015	F 1.0 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	HB20(HB)	2015	F 1.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	HB20(HB)	2015	F 1.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	HB20(HB)	2015	F 1.0 MPI	TMU [Telematics Unit]	x	x	x			
Europe/General	HB20(HB)	2015	F 1.0 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	HB20(HB)	2015	F 1.0 MPI	BCM [Body Control Module]	x	x	x	x	x	0138
Europe/General	HB20(HB)	2015	F 1.0 MPI	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	HB20(HB)	2015	F 1.6 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	HB20(HB)	2015	F 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	HB20(HB)	2015	F 1.6 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	HB20(HB)	2015	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	HB20(HB)	2015	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	HB20(HB)	2015	F 1.6 MPI	TMU [Telematics Unit]	x	x	x			
Europe/General	HB20(HB)	2015	F 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	HB20(HB)	2015	F 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	0138
Europe/General	HB20(HB)	2015	F 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	HB20(HB)	2014	F 1.0 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	HB20(HB)	2014	F 1.0 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	HB20(HB)	2014	F 1.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	HB20(HB)	2014	F 1.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	HB20(HB)	2014	F 1.0 MPI	TMU [Telematics Unit]	x	x	x			
Europe/General	HB20(HB)	2014	F 1.0 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	HB20(HB)	2014	F 1.0 MPI	BCM [Body Control Module]	x	x	x	x	x	0138
Europe/General	HB20(HB)	2014	F 1.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	HB20(HB)	2014	F 1.6 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	HB20(HB)	2014	F 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	HB20(HB)	2014	F 1.6 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	HB20(HB)	2014	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	HB20(HB)	2014	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	HB20(HB)	2014	F 1.6 MPI	TMU [Telematics Unit]	x	x	x			
Europe/General	HB20(HB)	2014	F 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	HB20(HB)	2014	F 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	0138
Europe/General	HB20(HB)	2014	F 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	HB20(HB)	2013	F 1.0 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	HB20(HB)	2013	F 1.0 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	HB20(HB)	2013	F 1.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	HB20(HB)	2013	F 1.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	HB20(HB)	2013	F 1.0 MPI	TMU [Telematics Unit]	x	x	x			
Europe/General	HB20(HB)	2013	F 1.0 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	HB20(HB)	2013	F 1.0 MPI	BCM [Body Control Module]	x	x	x	x	x	0138
Europe/General	HB20(HB)	2013	F 1.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	HB20(HB)	2013	F 1.6 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	HB20(HB)	2013	F 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	HB20(HB)	2013	F 1.6 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	HB20(HB)	2013	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	HB20(HB)	2013	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	HB20(HB)	2013	F 1.6 MPI	TMU [Telematics Unit]	x	x	x			
Europe/General	HB20(HB)	2013	F 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	HB20(HB)	2013	F 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	0138
Europe/General	HB20(HB)	2013	F 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	ABSESP [ABS / ESP]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0113
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	ABSESP [ABS / ESP]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	0015, 0053, 0109, 0110, 0113

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	ABSESP [ABS / ESP]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	IMMO [Immobilizer]		x		x		0094
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	ABSESP [ABS / ESP]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0113
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	ABSESP [ABS / ESP]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	0015, 0053, 0109, 0110, 0113
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	ABSESP [ABS / ESP]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	IMMO [Immobilizer]		x		x		0094
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	ABSESP [ABS / ESP]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	ABSESP [ABS / ESP]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	0015, 0053, 0109, 0110, 0113
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	ABSESP [ABS / ESP]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	IMMO [Immobilizer]		x		x		0094
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	ABSESP [ABS / ESP]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	ABSESP [ABS / ESP]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	0015, 0053, 0109, 0110, 0113
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	ABSESP [ABS / ESP]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	IMMO [Immobilizer]		x		x		0094
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0113
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	0015, 0053, 0110, 0113
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	IMMO [Immobilizer]		x		x		0094
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	ENGINE [Unleaded (+CVVT) OBD - II]	x	x	x	x	x	0015, 0053, 0113
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	ENGINE [Unleaded (+CVVT) EOBD]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	ENGINE [Unleaded (+CVVT) GEN]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	ENGINE [Unleaded (- CVVT) GEN]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	ENGINE [Unleaded (- CVVT) EOBD]	x	x	x	x	x	0015, 0113

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	ENGINE [Unleaded (- CVVT) OBD - II]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	ENGINE [Unleaded (Zr O2S) EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	ENGINE [Unleaded (Zr O2S) OBD - II]		x	x	x	x	0015, 0053, 0110, 0113
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	ENGINE [Unleaded (Ti O2S) EOBD]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	ENGINE [Unleaded (Ti O2S) OBD - II]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	IMMO [Immobilizer]		x		x		0094
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	BCM [Body Control Module]				x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	IMMO [Immobilizer]		x		x		0094
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	BCM [Body Control Module]				x	x	
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	HD COUPE(RC)	2001	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	HD COUPE(RC)	2001	G 1.6 DOHC	ENGINE [Unleaded EOBD]		x	x	x		
Europe/General	HD COUPE(RC)	2001	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(RC)	2001	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(RC)	2001	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(RC)	2001	G 1.6 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	HD COUPE(RC)	2001	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	HD COUPE(RC)	2001	G 1.8 DOHC	ENGINE [Unleaded EOBD]		x	x	x		
Europe/General	HD COUPE(RC)	2001	G 1.8 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(RC)	2001	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	HD COUPE(RC)	2001	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(RC)	2001	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	HD COUPE(RC)	2001	G 2.0 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	HD COUPE(RC)	2001	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	HD COUPE(RC)	2001	G 2.0 DOHC	ENGINE [Unleaded EOBD]		x	x	x		
Europe/General	HD COUPE(RC)	2001	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(RC)	2001	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(RC)	2001	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(RC)	2001	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	HD COUPE(RC)	2000	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(RC)	2000	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(RC)	2000	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(RC)	2000	G 1.6 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	HD COUPE(RC)	2000	G 1.8 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(RC)	2000	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(RC)	2000	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(RC)	2000	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	HD COUPE(RC)	2000	G 2.0 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	HD COUPE(RC)	2000	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	HD COUPE(RC)	2000	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(RC)	2000	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	HD COUPE(RC)	2000	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	HD COUPE(RC)	1999	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(RC)	1999	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(RC)	1999	G 1.6 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	HD COUPE(RC)	1999	G 1.6 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	HD COUPE(RC)	1999	G 1.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(RC)	1999	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(RC)	1999	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	HD COUPE(RC)	1999	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	HD COUPE(RC)	1999	G 2.0 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	HD COUPE(RC)	1999	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(RC)	1999	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(RC)	1999	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	HD COUPE(RC)	1999	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	HD COUPE(RC)	1998	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(RC)	1998	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	HD COUPE(RC)	1998	G 1.6 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	HD COUPE(RC)	1998	G 1.6 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	HD COUPE(RC)	1998	G 1.8 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	HD COUPE(RC)	1998	G 1.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(RC)	1998	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(RC)	1998	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	HD COUPE(RC)	1998	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	HD COUPE(RC)	1998	G 2.0 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	HD COUPE(RC)	1998	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(RC)	1998	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(RC)	1998	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	HD COUPE(RC)	1998	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	HD COUPE(RC)	1997	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(RC)	1997	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(RC)	1997	G 1.6 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	HD COUPE(RC)	1997	G 1.6 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	HD COUPE(RC)	1997	G 1.8 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	HD COUPE(RC)	1997	G 1.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(RC)	1997	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(RC)	1997	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	HD COUPE(RC)	1997	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	HD COUPE(RC)	1997	G 2.0 DOHC	ENGINE [Unleaded OBD - II]		x	x	x		
Europe/General	HD COUPE(RC)	1997	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	HD COUPE(RC)	1997	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	HD COUPE(RC)	1997	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	HD COUPE(RC)	1997	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	i10(IA)	2015	B 1.0 LPGI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i10(IA)	2015	B 1.0 LPGI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	i10(IA)	2015	B 1.0 LPGI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i10(IA)	2015	B 1.0 LPGI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i10(IA)	2015	B 1.0 LPGI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i10(IA)	2015	B 1.0 LPGI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(IA)	2015	B 1.0 LPGI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	i10(IA)	2015	B 1.0 LPGI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(IA)	2015	B 1.0 LPGI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i10(IA)	2015	B 1.0 LPGI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i10(IA)	2015	B 1.0 LPGI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	i10(IA)	2015	B 1.0 LPGI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	i10(IA)	2015	B 1.0 LPGI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i10(IA)	2015	G 1.0 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i10(IA)	2015	G 1.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(IA)	2015	G 1.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	i10(IA)	2015	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i10(IA)	2015	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i10(IA)	2015	G 1.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i10(IA)	2015	G 1.0 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(IA)	2015	G 1.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	i10(IA)	2015	G 1.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(IA)	2015	G 1.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i10(IA)	2015	G 1.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i10(IA)	2015	G 1.0 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	i10(IA)	2015	G 1.0 MPI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	i10(IA)	2015	G 1.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i10(IA)	2015	G 1.2 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i10(IA)	2015	G 1.2 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(IA)	2015	G 1.2 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	i10(IA)	2015	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i10(IA)	2015	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i10(IA)	2015	G 1.2 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i10(IA)	2015	G 1.2 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(IA)	2015	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	i10(IA)	2015	G 1.2 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(IA)	2015	G 1.2 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i10(IA)	2015	G 1.2 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i10(IA)	2015	G 1.2 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	i10(IA)	2015	G 1.2 MPI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	i10(IA)	2015	G 1.2 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i10(IA)	2014	B 1.0 LPGI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i10(IA)	2014	B 1.0 LPGI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	i10(IA)	2014	B 1.0 LPGI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i10(IA)	2014	B 1.0 LPGI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i10(IA)	2014	B 1.0 LPGI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i10(IA)	2014	B 1.0 LPGI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(IA)	2014	B 1.0 LPGI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	i10(IA)	2014	B 1.0 LPGI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(IA)	2014	B 1.0 LPGI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i10(IA)	2014	B 1.0 LPGI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i10(IA)	2014	B 1.0 LPGI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	i10(IA)	2014	B 1.0 LPGI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	i10(IA)	2014	B 1.0 LPGI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i10(IA)	2014	G 1.0 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i10(IA)	2014	G 1.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(IA)	2014	G 1.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	i10(IA)	2014	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i10(IA)	2014	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i10(IA)	2014	G 1.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i10(IA)	2014	G 1.0 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(IA)	2014	G 1.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	i10(IA)	2014	G 1.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(IA)	2014	G 1.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i10(IA)	2014	G 1.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i10(IA)	2014	G 1.0 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	i10(IA)	2014	G 1.0 MPI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	i10(IA)	2014	G 1.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i10(IA)	2014	G 1.2 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i10(IA)	2014	G 1.2 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(IA)	2014	G 1.2 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0077, 0082, 0100
Europe/General	i10(IA)	2014	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i10(IA)	2014	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i10(IA)	2014	G 1.2 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i10(IA)	2014	G 1.2 MPI	EPS [Electronic Power Steering]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i10(IA)	2014	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	i10(IA)	2014	G 1.2 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(IA)	2014	G 1.2 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i10(IA)	2014	G 1.2 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i10(IA)	2014	G 1.2 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	i10(IA)	2014	G 1.2 MPI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	i10(IA)	2014	G 1.2 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i10(PA)	2015	B 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x		0069, 0070, 0109, 0143
Europe/General	i10(PA)	2015	B 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	i10(PA)	2015	B 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2015	B 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	i10(PA)	2015	B 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2015	B 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	i10(PA)	2015	B 1.1 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2015	B 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2015	B 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2015	B 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2015	B 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2015	G 1.0 DOHC	ENGINE [Engine Control]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2015	G 1.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2015	G 1.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2015	G 1.0 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2015	G 1.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2015	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x		0069, 0070, 0109, 0143
Europe/General	i10(PA)	2015	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	i10(PA)	2015	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2015	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	i10(PA)	2015	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2015	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	i10(PA)	2015	G 1.1 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2015	G 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2015	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2015	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i10(PA)	2015	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2015	G 1.2 DOHC	ENGINE [Leaded All]	x	x	x	x		0069, 0070, 0109, 0143
Europe/General	i10(PA)	2015	G 1.2 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i10(PA)	2015	G 1.2 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2015	G 1.2 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i10(PA)	2015	G 1.2 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2015	G 1.2 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i10(PA)	2015	G 1.2 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2015	G 1.2 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2015	G 1.2 DOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2015	G 1.2 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2015	G 1.2 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2014	B 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x		0069, 0070, 0109, 0143
Europe/General	i10(PA)	2014	B 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	i10(PA)	2014	B 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2014	B 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	i10(PA)	2014	B 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2014	B 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	i10(PA)	2014	B 1.1 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2014	B 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2014	B 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2014	B 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2014	B 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2014	G 1.0 DOHC	ENGINE [Engine Control]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2014	G 1.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2014	G 1.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2014	G 1.0 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2014	G 1.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2014	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x		0069, 0070, 0109, 0143
Europe/General	i10(PA)	2014	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	i10(PA)	2014	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2014	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	i10(PA)	2014	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		0069, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i10(PA)	2014	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	i10(PA)	2014	G 1.1 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2014	G 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2014	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2014	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2014	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2014	G 1.2 DOHC	ENGINE [Leaded All]	x	x	x	x		0069, 0070, 0109, 0143
Europe/General	i10(PA)	2014	G 1.2 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i10(PA)	2014	G 1.2 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2014	G 1.2 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i10(PA)	2014	G 1.2 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2014	G 1.2 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i10(PA)	2014	G 1.2 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2014	G 1.2 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2014	G 1.2 DOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2014	G 1.2 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2014	G 1.2 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2013	B 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x		0069, 0070, 0109, 0143
Europe/General	i10(PA)	2013	B 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	i10(PA)	2013	B 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2013	B 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	i10(PA)	2013	B 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2013	B 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	i10(PA)	2013	B 1.1 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2013	B 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2013	B 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2013	B 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2013	B 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2013	G 1.0 DOHC	ENGINE [Engine Control]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2013	G 1.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2013	G 1.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2013	G 1.0 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2013	G 1.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i10(PA)	2013	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x		0069, 0070, 0109, 0143
Europe/General	i10(PA)	2013	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	i10(PA)	2013	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2013	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	i10(PA)	2013	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2013	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	i10(PA)	2013	G 1.1 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2013	G 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2013	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2013	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2013	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2013	G 1.2 DOHC	ENGINE [Leaded All]	x	x	x	x		0069, 0070, 0109, 0143
Europe/General	i10(PA)	2013	G 1.2 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i10(PA)	2013	G 1.2 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2013	G 1.2 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i10(PA)	2013	G 1.2 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2013	G 1.2 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i10(PA)	2013	G 1.2 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2013	G 1.2 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2013	G 1.2 DOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2013	G 1.2 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2013	G 1.2 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2012	B 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x		0069, 0070, 0109, 0143
Europe/General	i10(PA)	2012	B 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	i10(PA)	2012	B 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2012	B 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	i10(PA)	2012	B 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2012	B 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	i10(PA)	2012	B 1.1 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2012	B 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2012	B 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2012	B 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2012	B 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2012	G 1.0 DOHC	ENGINE [Engine Control]	x	x	x	x		0069, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i10(PA)	2012	G 1.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2012	G 1.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2012	G 1.0 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2012	G 1.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2012	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x		0069, 0070, 0109, 0143
Europe/General	i10(PA)	2012	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	i10(PA)	2012	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2012	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	i10(PA)	2012	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2012	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	i10(PA)	2012	G 1.1 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2012	G 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2012	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2012	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2012	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2012	G 1.2 DOHC	ENGINE [Leaded All]	x	x	x	x		0069, 0070, 0109, 0143
Europe/General	i10(PA)	2012	G 1.2 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i10(PA)	2012	G 1.2 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2012	G 1.2 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i10(PA)	2012	G 1.2 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2012	G 1.2 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i10(PA)	2012	G 1.2 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2012	G 1.2 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2012	G 1.2 DOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2012	G 1.2 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2012	G 1.2 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2011	G 1.0 DOHC	ENGINE [Engine Control]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2011	G 1.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2011	G 1.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2011	G 1.0 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2011	G 1.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2011	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x		0069, 0070, 0109, 0143
Europe/General	i10(PA)	2011	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i10(PA)	2011	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2011	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	i10(PA)	2011	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2011	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	i10(PA)	2011	G 1.1 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2011	G 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2011	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2011	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2011	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2011	G 1.2 DOHC	ENGINE [Leaded All]	x	x	x	x		0069, 0070, 0109, 0143
Europe/General	i10(PA)	2011	G 1.2 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i10(PA)	2011	G 1.2 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2011	G 1.2 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i10(PA)	2011	G 1.2 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		0069, 0109, 0143
Europe/General	i10(PA)	2011	G 1.2 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i10(PA)	2011	G 1.2 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2011	G 1.2 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2011	G 1.2 DOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2011	G 1.2 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2011	G 1.2 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2010	D 1.1 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i10(PA)	2010	D 1.1 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2010	D 1.1 TCI-U	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2010	D 1.1 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2010	D 1.1 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2010	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	i10(PA)	2010	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	i10(PA)	2010	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	i10(PA)	2010	G 1.1 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2010	G 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2010	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2010	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2010	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i10(PA)	2010	G 1.2 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i10(PA)	2010	G 1.2 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i10(PA)	2010	G 1.2 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i10(PA)	2010	G 1.2 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2010	G 1.2 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2010	G 1.2 DOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2010	G 1.2 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2010	G 1.2 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2009	D 1.1 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i10(PA)	2009	D 1.1 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2009	D 1.1 TCI-U	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2009	D 1.1 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2009	D 1.1 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2009	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	i10(PA)	2009	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	i10(PA)	2009	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	i10(PA)	2009	G 1.1 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2009	G 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2009	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2009	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2009	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2009	G 1.2 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i10(PA)	2009	G 1.2 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i10(PA)	2009	G 1.2 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i10(PA)	2009	G 1.2 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2009	G 1.2 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2009	G 1.2 DOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2009	G 1.2 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2009	G 1.2 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2008	D 1.1 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i10(PA)	2008	D 1.1 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2008	D 1.1 TCI-U	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2008	D 1.1 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i10(PA)	2008	D 1.1 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i10(PA)	2008	G 1.1 SOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	i10(PA)	2008	G 1.1 SOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	i10(PA)	2008	G 1.1 SOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	i10(PA)	2008	G 1.1 SOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i10(PA)	2008	G 1.1 SOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i10(PA)	2008	G 1.1 SOHC	AIRBAG [Airbag Control]	x	x	x			0103
Europe/General	i10(PA)	2008	G 1.1 SOHC	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i10(PA)	2008	G 1.1 SOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	ENGINE [Engine Control]	x	x	x	x		0020, 0058, 0109
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	PGS [Parking Guide System]	x	x	x	x		
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x		0034, 0059, 0109, 0143
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	LDWS [Lane Departure Warning System]	x	x	x	x		0079

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	PGS [Parking Guide System]	x	x	x	x		
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(GB)	2015	G 1.2 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i20(GB)	2015	G 1.2 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i20(GB)	2015	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i20(GB)	2015	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i20(GB)	2015	G 1.2 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(GB)	2015	G 1.2 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	i20(GB)	2015	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	i20(GB)	2015	G 1.2 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	i20(GB)	2015	G 1.2 MPI	PGS [Parking Guide System]	x	x	x	x		
Europe/General	i20(GB)	2015	G 1.2 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(GB)	2015	G 1.2 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(GB)	2015	G 1.2 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(GB)	2015	G 1.2 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	i20(GB)	2015	G 1.2 MPI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	i20(GB)	2015	G 1.2 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(GB)	2015	G 1.4 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i20(GB)	2015	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(GB)	2015	G 1.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i20(GB)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i20(GB)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i20(GB)	2015	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(GB)	2015	G 1.4 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	i20(GB)	2015	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	i20(GB)	2015	G 1.4 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	i20(GB)	2015	G 1.4 MPI	PGS [Parking Guide System]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i20(GB)	2015	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(GB)	2015	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(GB)	2015	G 1.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(GB)	2015	G 1.4 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	i20(GB)	2015	G 1.4 MPI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	i20(GB)	2015	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	i20(IB)	2015	G 1.2 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i20(IB)	2015	G 1.2 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	i20(IB)	2015	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i20(IB)	2015	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i20(IB)	2015	G 1.2 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(IB)	2015	G 1.2 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	i20(IB)	2015	G 1.2 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(IB)	2015	G 1.2 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(IB)	2015	G 1.2 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(IB)	2015	G 1.2 MPI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	i20(IB)	2015	G 1.2 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(IB)	2015	G 1.4 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i20(IB)	2015	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(IB)	2015	G 1.4 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	i20(IB)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i20(IB)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i20(IB)	2015	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(IB)	2015	G 1.4 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		
Europe/General	i20(IB)	2015	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(IB)	2015	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(IB)	2015	G 1.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(IB)	2015	G 1.4 MPI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	i20(IB)	2015	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	SMK [Smart Key Unit (W / ESCL)]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	SMK [Smart Key Unit (WO / ESCL)]	x	x	x	x	x	0027, 0056, 0118
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	SMK [Smart Key Unit (W / ESCL)]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	SMK [Smart Key Unit (WO / ESCL)]	x	x	x	x	x	0027, 0056, 0118
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2015	G 1.2 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i20(PB)	2015	G 1.2 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i20(PB)	2015	G 1.2 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2015	G 1.2 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2015	G 1.2 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2015	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2015	G 1.2 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2015	G 1.2 MPI	SMK [Smart Key Unit (W / ESCL)]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(PB)	2015	G 1.2 MPI	SMK [Smart Key Unit (WO / ESCL)]	x	x	x	x	x	0027, 0056, 0118
Europe/General	i20(PB)	2015	G 1.2 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(PB)	2015	G 1.2 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2015	G 1.4 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i20(PB)	2015	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2015	G 1.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2015	G 1.4 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2015	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2015	G 1.4 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2015	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2015	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2015	G 1.4 MPI	SMK [Smart Key Unit (W / ESCL)]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(PB)	2015	G 1.4 MPI	SMK [Smart Key Unit (WO / ESCL)]	x	x	x	x	x	0027, 0056, 0118
Europe/General	i20(PB)	2015	G 1.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(PB)	2015	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	SMK [Smart Key Unit (W / ESCL)]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	SMK [Smart Key Unit (WO / ESCL)]	x	x	x	x	x	0027, 0056, 0118
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	SMK [Smart Key Unit (W / ESCL)]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	SMK [Smart Key Unit (WO / ESCL)]	x	x	x	x	x	0027, 0056, 0118
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2014	G 1.2 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i20(PB)	2014	G 1.2 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2014	G 1.2 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2014	G 1.2 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2014	G 1.2 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2014	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2014	G 1.2 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2014	G 1.2 MPI	SMK [Smart Key Unit (W / ESCL)]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(PB)	2014	G 1.2 MPI	SMK [Smart Key Unit (WO / ESCL)]	x	x	x	x	x	0027, 0056, 0118
Europe/General	i20(PB)	2014	G 1.2 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(PB)	2014	G 1.2 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2014	G 1.4 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i20(PB)	2014	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2014	G 1.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2014	G 1.4 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2014	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2014	G 1.4 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2014	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2014	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2014	G 1.4 MPI	SMK [Smart Key Unit (W / ESCL)]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(PB)	2014	G 1.4 MPI	SMK [Smart Key Unit (WO / ESCL)]	x	x	x	x	x	0027, 0056, 0118

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i20(PB)	2014	G 1.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(PB)	2014	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	SMK [Smart Key Unit (W / ESCL)]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	SMK [Smart Key Unit (WO / ESCL)]	x	x	x	x	x	0027, 0056, 0118
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	SMK [Smart Key Unit (W / ESCL)]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	SMK [Smart Key Unit (WO / ESCL)]	x	x	x	x	x	0027, 0056, 0118
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2013	G 1.2 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i20(PB)	2013	G 1.2 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2013	G 1.2 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2013	G 1.2 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2013	G 1.2 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2013	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2013	G 1.2 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2013	G 1.2 MPI	SMK [Smart Key Unit (W / ESCL)]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i20(PB)	2013	G 1.2 MPI	SMK [Smart Key Unit (WO / ESCL)]	x	x	x	x	x	0027, 0056, 0118
Europe/General	i20(PB)	2013	G 1.2 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(PB)	2013	G 1.2 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2013	G 1.4 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i20(PB)	2013	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2013	G 1.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2013	G 1.4 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2013	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2013	G 1.4 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2013	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2013	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2013	G 1.4 MPI	SMK [Smart Key Unit (W / ESCL)]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i20(PB)	2013	G 1.4 MPI	SMK [Smart Key Unit (WO / ESCL)]	x	x	x	x	x	0027, 0056, 0118
Europe/General	i20(PB)	2013	G 1.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i20(PB)	2013	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2012	D 1.4 TCI-U	AIRCON [Air Conditioner (India)]	x	x	x	x	x	
Europe/General	i20(PB)	2012	D 1.4 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2012	D 1.4 TCI-U	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2012	D 1.4 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2012	D 1.4 TCI-U	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2012	D 1.4 TCI-U	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2012	D 1.4 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i20(PB)	2012	D 1.4 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2012	D 1.4 TCI-U	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2012	D 1.4 TCI-U	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2012	D 1.4 TCI-U	AIRCON [Air Conditioner (Turkey)]	x	x	x	x	x	
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	AIRCON [Air Conditioner (Turkey)]	x	x	x	x	x	
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	AIRCON [Air Conditioner (India)]	x	x	x	x	x	
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	AIRCON [Air Conditioner (Turkey)]	x	x	x	x	x	
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	AIRCON [Air Conditioner (India)]	x	x	x	x	x	
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2012	G 1.2 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2012	G 1.2 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i20(PB)	2012	G 1.2 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2012	G 1.2 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2012	G 1.2 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2012	G 1.2 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2012	G 1.2 MPI	AIRCON [Air Conditioner (Turkey)]	x	x	x	x	x	
Europe/General	i20(PB)	2012	G 1.2 MPI	AIRCON [Air Conditioner (India)]	x	x	x	x	x	
Europe/General	i20(PB)	2012	G 1.2 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2012	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2012	G 1.2 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2012	G 1.2 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2012	G 1.2 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2012	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2012	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i20(PB)	2012	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2012	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2012	G 1.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2012	G 1.4 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2012	G 1.4 MPI	AIRCON [Air Conditioner (Turkey)]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i20(PB)	2012	G 1.4 MPI	AIRCON [Air Conditioner (India)]	x	x	x	x	x	
Europe/General	i20(PB)	2012	G 1.4 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2012	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2012	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2012	G 1.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2012	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2012	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2012	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i20(PB)	2012	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2012	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2012	G 1.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2012	G 1.6 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2012	G 1.6 MPI	AIRCON [Air Conditioner (Turkey)]	x	x	x	x	x	
Europe/General	i20(PB)	2012	G 1.6 MPI	AIRCON [Air Conditioner (India)]	x	x	x	x	x	
Europe/General	i20(PB)	2012	G 1.6 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2012	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2012	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2012	G 1.6 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2011	D 1.4 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i20(PB)	2011	D 1.4 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2011	D 1.4 TCI-U	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2011	D 1.4 TCI-U	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2011	D 1.4 TCI-U	AIRCON [Air Conditioner (Turkey)]	x	x	x	x	x	
Europe/General	i20(PB)	2011	D 1.4 TCI-U	AIRCON [Air Conditioner (India)]	x	x	x	x	x	
Europe/General	i20(PB)	2011	D 1.4 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2011	D 1.4 TCI-U	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2011	D 1.4 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2011	D 1.4 TCI-U	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2011	D 1.4 TCI-U	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	AIRBAG [Airbag Control]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	AIRCON [Air Conditioner (Turkey)]	x	x	x	x	x	
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	AIRCON [Air Conditioner (India)]	x	x	x	x	x	
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	AIRCON [Air Conditioner (Turkey)]	x	x	x	x	x	
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	AIRCON [Air Conditioner (India)]	x	x	x	x	x	
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2011	G 1.2 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2011	G 1.2 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i20(PB)	2011	G 1.2 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2011	G 1.2 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2011	G 1.2 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2011	G 1.2 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2011	G 1.2 MPI	AIRCON [Air Conditioner (Turkey)]	x	x	x	x	x	
Europe/General	i20(PB)	2011	G 1.2 MPI	AIRCON [Air Conditioner (India)]	x	x	x	x	x	
Europe/General	i20(PB)	2011	G 1.2 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2011	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2011	G 1.2 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2011	G 1.2 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2011	G 1.2 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2011	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2011	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i20(PB)	2011	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i20(PB)	2011	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2011	G 1.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2011	G 1.4 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2011	G 1.4 MPI	AIRCON [Air Conditioner (Turkey)]	x	x	x	x	x	
Europe/General	i20(PB)	2011	G 1.4 MPI	AIRCON [Air Conditioner (India)]	x	x	x	x	x	
Europe/General	i20(PB)	2011	G 1.4 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2011	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2011	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2011	G 1.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2011	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2011	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2011	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i20(PB)	2011	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2011	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2011	G 1.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i20(PB)	2011	G 1.6 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2011	G 1.6 MPI	AIRCON [Air Conditioner (Turkey)]	x	x	x	x	x	
Europe/General	i20(PB)	2011	G 1.6 MPI	AIRCON [Air Conditioner (India)]	x	x	x	x	x	
Europe/General	i20(PB)	2011	G 1.6 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2011	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2011	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2011	G 1.6 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2011	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2010	D 1.4 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i20(PB)	2010	D 1.4 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2010	D 1.4 TCI-U	ESP [Electronic Stability Program]	x	x	x	x	x	0010
Europe/General	i20(PB)	2010	D 1.4 TCI-U	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2010	D 1.4 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2010	D 1.4 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2010	D 1.4 TCI-U	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2010	D 1.4 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2010	D 1.4 TCI-U	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2010	D 1.4 TCI-U	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0010
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0010
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2010	G 1.2 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2010	G 1.2 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i20(PB)	2010	G 1.2 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2010	G 1.2 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2010	G 1.2 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0010
Europe/General	i20(PB)	2010	G 1.2 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2010	G 1.2 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2010	G 1.2 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2010	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2010	G 1.2 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2010	G 1.2 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2010	G 1.2 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2010	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2010	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i20(PB)	2010	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i20(PB)	2010	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2010	G 1.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0010
Europe/General	i20(PB)	2010	G 1.4 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2010	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2010	G 1.4 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2010	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2010	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2010	G 1.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2010	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2010	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2010	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i20(PB)	2010	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2010	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2010	G 1.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0010
Europe/General	i20(PB)	2010	G 1.6 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2010	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2010	G 1.6 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2010	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2010	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2010	G 1.6 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2010	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2009	D 1.4 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i20(PB)	2009	D 1.4 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2009	D 1.4 TCI-U	ESP [Electronic Stability Program]	x	x	x	x	x	0010
Europe/General	i20(PB)	2009	D 1.4 TCI-U	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2009	D 1.4 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2009	D 1.4 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2009	D 1.4 TCI-U	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2009	D 1.4 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2009	D 1.4 TCI-U	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2009	D 1.4 TCI-U	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0010

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2009	G 1.2 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2009	G 1.2 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i20(PB)	2009	G 1.2 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2009	G 1.2 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2009	G 1.2 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0010
Europe/General	i20(PB)	2009	G 1.2 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2009	G 1.2 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2009	G 1.2 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2009	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2009	G 1.2 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2009	G 1.2 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2009	G 1.2 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2009	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2009	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i20(PB)	2009	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2009	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2009	G 1.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0010
Europe/General	i20(PB)	2009	G 1.4 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2009	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2009	G 1.4 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2009	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2009	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2009	G 1.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2009	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i20(PB)	2009	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i20(PB)	2009	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i20(PB)	2009	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i20(PB)	2009	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i20(PB)	2009	G 1.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0010
Europe/General	i20(PB)	2009	G 1.6 MPI	AIRBAG [Airbag Control]	x	x	x			
Europe/General	i20(PB)	2009	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i20(PB)	2009	G 1.6 MPI	EPS [Electronic Power Steering]	x	x	x	x		
Europe/General	i20(PB)	2009	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i20(PB)	2009	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i20(PB)	2009	G 1.6 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i20(PB)	2009	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	ENGINE [Engine Control (ISG+ / CPF -)]	x	x	x	x	x	
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	ENGINE [Engine Control (ISG+ / CPF+)]	x	x	x	x	x	
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	ENGINE [Engine Control (ISG - / CPF+)]	x	x	x	x	x	
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	ENGINE [Engine Control (ISG - / CPF -)]	x	x	x	x	x	
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring System]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2012	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i30(FDe)	2012	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30(FDe)	2012	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(FDe)	2012	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2012	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(FDe)	2012	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2012	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2012	G 1.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2012	G 1.4 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2012	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2012	G 1.4 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2012	G 1.4 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2012	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2012	G 1.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2012	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2012	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i30(FDe)	2012	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30(FDe)	2012	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(FDe)	2012	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2012	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(FDe)	2012	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2012	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2012	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2012	G 1.6 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2012	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2012	G 1.6 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2012	G 1.6 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2012	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(FDe)	2012	G 1.6 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2012	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2012	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30(FDe)	2012	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2012	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2012	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2012	G 2.0 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2012	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2012	G 2.0 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2012	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2012	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2012	G 2.0 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2012	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	ENGINE [Engine Control (ISG+ / CPF -)]	x	x	x	x	x	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	ENGINE [Engine Control (ISG+ / CPF+)]	x	x	x	x	x	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	ENGINE [Engine Control (ISG - / CPF+)]	x	x	x	x	x	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	ENGINE [Engine Control (ISG - / CPF -)]	x	x	x	x	x	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2011	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i30(FDe)	2011	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30(FDe)	2011	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(FDe)	2011	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2011	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(FDe)	2011	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2011	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2011	G 1.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2011	G 1.4 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2011	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2011	G 1.4 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2011	G 1.4 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2011	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(FDe)	2011	G 1.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2011	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2011	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i30(FDe)	2011	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30(FDe)	2011	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(FDe)	2011	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2011	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(FDe)	2011	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2011	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2011	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2011	G 1.6 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2011	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2011	G 1.6 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2011	G 1.6 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2011	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2011	G 1.6 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2011	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2011	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2011	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30(FDe)	2011	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2011	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2011	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2011	G 2.0 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2011	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2011	G 2.0 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2011	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2011	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2011	G 2.0 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2011	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	ENGINE [Engine Control (ISG+ / CPF -)]	x	x	x	x	x	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	ENGINE [Engine Control (ISG+ / CPF+)]	x	x	x	x	x	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	ENGINE [Engine Control (ISG - / CPF+)]	x	x	x	x	x	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	ENGINE [Engine Control (ISG - / CPF -)]	x	x	x	x	x	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2010	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30(FDe)	2010	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2010	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2010	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2010	G 1.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2010	G 1.4 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2010	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2010	G 1.4 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2010	G 1.4 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2010	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2010	G 1.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2010	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2010	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30(FDe)	2010	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2010	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2010	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2010	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2010	G 1.6 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2010	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2010	G 1.6 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2010	G 1.6 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2010	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2010	G 1.6 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2010	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2010	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2010	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30(FDe)	2010	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2010	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2010	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2010	G 2.0 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2010	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(FDe)	2010	G 2.0 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2010	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2010	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2010	G 2.0 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2010	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2009	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30(FDe)	2009	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2009	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2009	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2009	G 1.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2009	G 1.4 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2009	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2009	G 1.4 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2009	G 1.4 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2009	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2009	G 1.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2009	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2009	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30(FDe)	2009	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2009	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30(FDe)	2009	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2009	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2009	G 1.6 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2009	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2009	G 1.6 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2009	G 1.6 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2009	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2009	G 1.6 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2009	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(FDe)	2009	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	i30(FDe)	2009	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	i30(FDe)	2009	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0113

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(FDe)	2009	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(FDe)	2009	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30(FDe)	2009	G 2.0 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30(FDe)	2009	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(FDe)	2009	G 2.0 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30(FDe)	2009	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30(FDe)	2009	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30(FDe)	2009	G 2.0 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30(FDe)	2009	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GD)	2015	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GD)	2015	F 1.6 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GD)	2015	F 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GD)	2015	F 1.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GD)	2015	F 1.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GD)	2015	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GD)	2015	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GD)	2015	F 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(GD)	2015	F 1.6 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GD)	2015	F 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GD)	2015	F 1.6 MPI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
Europe/General	i30(GD)	2015	F 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GD)	2015	F 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GD)	2015	F 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GD)	2015	F 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GD)	2015	F 1.6 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GD)	2015	F 1.6 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GD)	2015	F 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GD)	2015	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GD)	2015	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i30(GD)	2015	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GD)	2015	G 1.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GD)	2015	G 1.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GD)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GD)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GD)	2015	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GD)	2015	G 1.6 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GD)	2015	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GD)	2015	G 1.6 MPI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
Europe/General	i30(GD)	2015	G 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GD)	2015	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GD)	2015	G 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GD)	2015	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GD)	2015	G 1.6 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GD)	2015	G 1.6 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GD)	2015	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GD)	2015	G 1.8 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	i30(GD)	2015	G 1.8 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	i30(GD)	2015	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GD)	2015	G 1.8 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(GD)	2015	G 1.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GD)	2015	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GD)	2015	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GD)	2015	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GD)	2015	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
Europe/General	i30(GD)	2015	G 1.8 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GD)	2015	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GD)	2015	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GD)	2015	G 1.8 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GD)	2015	G 1.8 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GD)	2015	G 1.8 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GD)	2015	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GD)	2015	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GD)	2015	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GD)	2015	G 2.0 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GD)	2015	G 2.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GD)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GD)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GD)	2015	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GD)	2015	G 2.0 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GD)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GD)	2015	G 2.0 GDI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
Europe/General	i30(GD)	2015	G 2.0 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GD)	2015	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GD)	2015	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GD)	2015	G 2.0 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GD)	2015	G 2.0 GDI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GD)	2015	G 2.0 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GD)	2015	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GD)	2014	F 1.6 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GD)	2014	F 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GD)	2014	F 1.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GD)	2014	F 1.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GD)	2014	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GD)	2014	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GD)	2014	F 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GD)	2014	F 1.6 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GD)	2014	F 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GD)	2014	F 1.6 MPI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
Europe/General	i30(GD)	2014	F 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GD)	2014	F 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GD)	2014	F 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GD)	2014	F 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GD)	2014	F 1.6 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GD)	2014	F 1.6 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GD)	2014	F 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GD)	2014	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(GD)	2014	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i30(GD)	2014	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GD)	2014	G 1.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GD)	2014	G 1.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GD)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GD)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GD)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GD)	2014	G 1.6 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GD)	2014	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GD)	2014	G 1.6 MPI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
Europe/General	i30(GD)	2014	G 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GD)	2014	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GD)	2014	G 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GD)	2014	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GD)	2014	G 1.6 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GD)	2014	G 1.6 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GD)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GD)	2014	G 1.8 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	i30(GD)	2014	G 1.8 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	i30(GD)	2014	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GD)	2014	G 1.8 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GD)	2014	G 1.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GD)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GD)	2014	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GD)	2014	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GD)	2014	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
Europe/General	i30(GD)	2014	G 1.8 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GD)	2014	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GD)	2014	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GD)	2014	G 1.8 MPI	BCM [Cluster Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(GD)	2014	G 1.8 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GD)	2014	G 1.8 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GD)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GD)	2014	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GD)	2014	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GD)	2014	G 2.0 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GD)	2014	G 2.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GD)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GD)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GD)	2014	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GD)	2014	G 2.0 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GD)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GD)	2014	G 2.0 GDI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
Europe/General	i30(GD)	2014	G 2.0 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GD)	2014	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GD)	2014	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GD)	2014	G 2.0 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GD)	2014	G 2.0 GDI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GD)	2014	G 2.0 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GD)	2014	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GD)	2013	F 1.6 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GD)	2013	F 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GD)	2013	F 1.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GD)	2013	F 1.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GD)	2013	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GD)	2013	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GD)	2013	F 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GD)	2013	F 1.6 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GD)	2013	F 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GD)	2013	F 1.6 MPI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
Europe/General	i30(GD)	2013	F 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GD)	2013	F 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GD)	2013	F 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GD)	2013	F 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GD)	2013	F 1.6 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GD)	2013	F 1.6 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GD)	2013	F 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GD)	2013	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GD)	2013	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i30(GD)	2013	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GD)	2013	G 1.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GD)	2013	G 1.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GD)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GD)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GD)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GD)	2013	G 1.6 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GD)	2013	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GD)	2013	G 1.6 MPI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
Europe/General	i30(GD)	2013	G 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(GD)	2013	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GD)	2013	G 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GD)	2013	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GD)	2013	G 1.6 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GD)	2013	G 1.6 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GD)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GD)	2013	G 1.8 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	i30(GD)	2013	G 1.8 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	i30(GD)	2013	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GD)	2013	G 1.8 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GD)	2013	G 1.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GD)	2013	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GD)	2013	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GD)	2013	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GD)	2013	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
Europe/General	i30(GD)	2013	G 1.8 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GD)	2013	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GD)	2013	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GD)	2013	G 1.8 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GD)	2013	G 1.8 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GD)	2013	G 1.8 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GD)	2013	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GD)	2013	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GD)	2013	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GD)	2013	G 2.0 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GD)	2013	G 2.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GD)	2013	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GD)	2013	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GD)	2013	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GD)	2013	G 2.0 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GD)	2013	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(GD)	2013	G 2.0 GDI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
Europe/General	i30(GD)	2013	G 2.0 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GD)	2013	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GD)	2013	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GD)	2013	G 2.0 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GD)	2013	G 2.0 GDI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GD)	2013	G 2.0 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GD)	2013	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GDe)	2015	G 1.4 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GDe)	2015	G 1.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GDe)	2015	G 1.4 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GDe)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GDe)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GDe)	2015	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	G 1.4 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GDe)	2015	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GDe)	2015	G 1.4 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i30(GDe)	2015	G 1.4 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GDe)	2015	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GDe)	2015	G 1.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	G 1.4 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	G 1.4 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GDe)	2015	G 1.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GDe)	2015	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GDe)	2015	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GDe)	2015	G 1.6 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GDe)	2015	G 1.6 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GDe)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GDe)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GDe)	2015	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	G 1.6 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GDe)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(GDe)	2015	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i30(GDe)	2015	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GDe)	2015	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GDe)	2015	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	G 1.6 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	G 1.6 GDI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GDe)	2015	G 1.6 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GDe)	2015	G 1.6 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GDe)	2015	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GDe)	2015	G 1.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GDe)	2015	G 1.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GDe)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GDe)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GDe)	2015	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	G 1.6 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GDe)	2015	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GDe)	2015	G 1.6 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i30(GDe)	2015	G 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GDe)	2015	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GDe)	2015	G 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	G 1.6 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GDe)	2015	G 1.6 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GDe)	2015	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GDe)	2014	G 1.4 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GDe)	2014	G 1.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GDe)	2014	G 1.4 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GDe)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GDe)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GDe)	2014	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	G 1.4 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GDe)	2014	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(GDe)	2014	G 1.4 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i30(GDe)	2014	G 1.4 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GDe)	2014	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GDe)	2014	G 1.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	G 1.4 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	G 1.4 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GDe)	2014	G 1.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GDe)	2014	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GDe)	2014	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GDe)	2014	G 1.6 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GDe)	2014	G 1.6 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GDe)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GDe)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GDe)	2014	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	G 1.6 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GDe)	2014	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GDe)	2014	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i30(GDe)	2014	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GDe)	2014	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GDe)	2014	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	G 1.6 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	G 1.6 GDI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GDe)	2014	G 1.6 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GDe)	2014	G 1.6 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GDe)	2014	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GDe)	2014	G 1.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GDe)	2014	G 1.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GDe)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GDe)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GDe)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	G 1.6 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(GDe)	2014	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GDe)	2014	G 1.6 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i30(GDe)	2014	G 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GDe)	2014	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GDe)	2014	G 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	G 1.6 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GDe)	2014	G 1.6 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GDe)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	x	x	x	x		0086

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GDe)	2013	G 1.4 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GDe)	2013	G 1.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GDe)	2013	G 1.4 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GDe)	2013	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GDe)	2013	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GDe)	2013	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	G 1.4 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GDe)	2013	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GDe)	2013	G 1.4 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i30(GDe)	2013	G 1.4 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GDe)	2013	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GDe)	2013	G 1.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	G 1.4 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	G 1.4 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GDe)	2013	G 1.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GDe)	2013	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GDe)	2013	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GDe)	2013	G 1.6 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GDe)	2013	G 1.6 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GDe)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GDe)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GDe)	2013	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	G 1.6 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30(GDe)	2013	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GDe)	2013	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i30(GDe)	2013	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GDe)	2013	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GDe)	2013	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	G 1.6 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	G 1.6 GDI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GDe)	2013	G 1.6 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30(GDe)	2013	G 1.6 MPI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30(GDe)	2013	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30(GDe)	2013	G 1.6 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	i30(GDe)	2013	G 1.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037, 0060, 0101
Europe/General	i30(GDe)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i30(GDe)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i30(GDe)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	G 1.6 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	i30(GDe)	2013	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i30(GDe)	2013	G 1.6 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i30(GDe)	2013	G 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i30(GDe)	2013	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i30(GDe)	2013	G 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	G 1.6 MPI	BCM [Cluster Variant Coding]	x	x	x			
Europe/General	i30(GDe)	2013	G 1.6 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i30(GDe)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	ENGINE [Engine (CPF+)]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	ENGINE [Engine (CPF -)]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	AIRBAG [Airbag Control]	×	×	×			0102
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	EPS [Electronic Power Steering]	×	×	×	×		0086
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	TPMS [Tire Pressure Monitoring System]	×	×	×		×	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	BCM [Body Control Module]	×			×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	CODE [Transmitter Code Saving]				×		0026
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	ENGINE [ISG (+) / CPF (-)]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	ENGINE [ISG (+) / CPF (+)]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	ENGINE [ISG (-) / CPF (+)]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	ENGINE [ISG (-) / CPF (-)]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	AIRBAG [Airbag Control]	×	×	×			0102
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	EPS [Electronic Power Steering]	×	×	×	×		0086
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring System]	×	×	×		×	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	BCM [Body Control Module]	×			×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	ENGINE [Engine (CPF+)]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	ENGINE [Engine (CPF -)]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	AIRBAG [Airbag Control]	×	×	×			0102
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	EPS [Electronic Power Steering]	×	×	×	×		0086
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	TPMS [Tire Pressure Monitoring System]	×	×	×		×	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	BCM [Body Control Module]	×			×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	CODE [Transmitter Code Saving]				×		0026
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	ENGINE [ISG (+) / CPF (-)]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	ENGINE [ISG (+) / CPF (+)]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	ENGINE [ISG (-) / CPF (+)]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	ENGINE [ISG (-) / CPF (-)]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	AIRBAG [Airbag Control]	×	×	×			0102
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	EPS [Electronic Power Steering]	×	×	×	×		0086
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring System]	×	×	×		×	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	BCM [Body Control Module]	×			×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	AIRBAG [Airbag Control]	×	×	×			0102
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	EPS [Electronic Power Steering]	×	×	×	×		0086
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	TPMS [Tire Pressure Monitoring System]	×	×	×		×	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	BCM [Body Control Module]	×			×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	CODE [Transmitter Code Saving]				×		0026
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	ENGINE [ISG (+) / CPF (-)]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	ENGINE [ISG (+) / CPF (+)]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	ENGINE [ISG (-) / CPF (+)]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	ENGINE [ISG (-) / CPF (-)]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	ABSESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	AIRBAG [Airbag Control]	×	×	×			0102
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	EPS [Electronic Power Steering]	×	×	×	×		0086
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring System]	×	×	×		×	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	BCM [Body Control Module]	×			×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	BCM [Body Control Module]	x			x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring System]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	BCM [Body Control Module]	x			x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	ENGINE [Engine (CPF+)]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	ENGINE [Engine (CPF -)]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	TPMS [TPMS]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	TPMS [TPMS]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	TPMS [TPMS]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	TPMS [TPMS]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	EPS [Electronic Power Steering]	x	x	x	x		0086
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	TPMS [TPMS]	x	x	x		x	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	BCM [Body Control Module]	x			x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	ENGINE [Engine Control (Low power)]	x	x	x	x	x	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	ENGINE [Engine Control (High power)]	x	x	x	x	x	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	EPB [Electric Parking Brake]	x	x	x	x	x	0095, 0096
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	AAF [Active Air Flap]	x	x	x	x	x	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	EPS [Motor Driven Power Steering]	x	x	x	x		0086, 0137
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i40(VF)	2015	G 1.6 GDI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i40(VF)	2015	G 1.6 GDI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i40(VF)	2015	G 1.6 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	i40(VF)	2015	G 1.6 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0095, 0096
Europe/General	i40(VF)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i40(VF)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i40(VF)	2015	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i40(VF)	2015	G 1.6 GDI	AAF [Active Air Flap]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 1.6 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086, 0137
Europe/General	i40(VF)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i40(VF)	2015	G 1.6 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 1.6 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	i40(VF)	2015	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i40(VF)	2015	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i40(VF)	2015	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i40(VF)	2015	G 1.6 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 1.6 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 1.6 GDI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	i40(VF)	2015	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i40(VF)	2015	G 2.0 GDI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i40(VF)	2015	G 2.0 GDI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i40(VF)	2015	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i40(VF)	2015	G 2.0 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	i40(VF)	2015	G 2.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0095, 0096
Europe/General	i40(VF)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i40(VF)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i40(VF)	2015	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 2.0 GDI	AAF [Active Air Flap]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 2.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086, 0137
Europe/General	i40(VF)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i40(VF)	2015	G 2.0 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 2.0 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	i40(VF)	2015	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 2.0 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i40(VF)	2015	G 2.0 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i40(VF)	2015	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i40(VF)	2015	G 2.0 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 2.0 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 2.0 GDI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	i40(VF)	2015	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i40(VF)	2015	G 2.0 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	i40(VF)	2015	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	i40(VF)	2015	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i40(VF)	2015	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	i40(VF)	2015	G 2.0 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0095, 0096
Europe/General	i40(VF)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i40(VF)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i40(VF)	2015	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 2.0 MPI	AAF [Active Air Flap]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086, 0137
Europe/General	i40(VF)	2015	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i40(VF)	2015	G 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 2.0 MPI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	i40(VF)	2015	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i40(VF)	2015	G 2.0 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i40(VF)	2015	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i40(VF)	2015	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 2.0 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i40(VF)	2015	G 2.0 MPI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	i40(VF)	2015	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	ENGINE [Engine Control (Low power)]	x	x	x	x	x	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	ENGINE [Engine Control (High power)]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	EPB [Electric Parking Brake]	x	x	x	x	x	0095, 0096
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	AAF [Active Air Flap]	x	x	x	x	x	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	EPS [Motor Driven Power Steering]	x	x	x	x		0086, 0137
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i40(VF)	2014	G 1.6 GDI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i40(VF)	2014	G 1.6 GDI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i40(VF)	2014	G 1.6 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	i40(VF)	2014	G 1.6 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0095, 0096
Europe/General	i40(VF)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i40(VF)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i40(VF)	2014	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 1.6 GDI	AAF [Active Air Flap]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 1.6 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086, 0137
Europe/General	i40(VF)	2014	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i40(VF)	2014	G 1.6 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 1.6 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i40(VF)	2014	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i40(VF)	2014	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i40(VF)	2014	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i40(VF)	2014	G 1.6 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 1.6 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 1.6 GDI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	i40(VF)	2014	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i40(VF)	2014	G 2.0 GDI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i40(VF)	2014	G 2.0 GDI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i40(VF)	2014	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i40(VF)	2014	G 2.0 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	i40(VF)	2014	G 2.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0095, 0096
Europe/General	i40(VF)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i40(VF)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i40(VF)	2014	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 2.0 GDI	AAF [Active Air Flap]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 2.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086, 0137
Europe/General	i40(VF)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i40(VF)	2014	G 2.0 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 2.0 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	i40(VF)	2014	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 2.0 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i40(VF)	2014	G 2.0 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i40(VF)	2014	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i40(VF)	2014	G 2.0 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 2.0 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 2.0 GDI	BCM [Power Seat Module]	x	x	x	x	x	0122

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i40(VF)	2014	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i40(VF)	2014	G 2.0 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	i40(VF)	2014	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	i40(VF)	2014	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i40(VF)	2014	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	i40(VF)	2014	G 2.0 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0095, 0096
Europe/General	i40(VF)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i40(VF)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i40(VF)	2014	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 2.0 MPI	AAF [Active Air Flap]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086, 0137
Europe/General	i40(VF)	2014	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i40(VF)	2014	G 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 2.0 MPI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	i40(VF)	2014	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i40(VF)	2014	G 2.0 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i40(VF)	2014	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i40(VF)	2014	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 2.0 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i40(VF)	2014	G 2.0 MPI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	i40(VF)	2014	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	ENGINE [Engine Control (Low power)]	x	x	x	x	x	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	ENGINE [Engine Control (High power)]	x	x	x	x	x	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	EPB [Electric Parking Brake]	x	x	x	x	x	0095, 0096
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	AAF [Active Air Flap]	x	x	x	x	x	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	EPS [Motor Driven Power Steering]	x	x	x	x		0086, 0137
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i40(VF)	2013	G 1.6 GDI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i40(VF)	2013	G 1.6 GDI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i40(VF)	2013	G 1.6 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	i40(VF)	2013	G 1.6 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0095, 0096
Europe/General	i40(VF)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i40(VF)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i40(VF)	2013	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 1.6 GDI	AAF [Active Air Flap]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 1.6 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086, 0137
Europe/General	i40(VF)	2013	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i40(VF)	2013	G 1.6 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 1.6 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	i40(VF)	2013	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i40(VF)	2013	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i40(VF)	2013	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i40(VF)	2013	G 1.6 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 1.6 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 1.6 GDI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	i40(VF)	2013	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i40(VF)	2013	G 2.0 GDI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i40(VF)	2013	G 2.0 GDI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i40(VF)	2013	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i40(VF)	2013	G 2.0 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	i40(VF)	2013	G 2.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0095, 0096
Europe/General	i40(VF)	2013	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i40(VF)	2013	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i40(VF)	2013	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 2.0 GDI	AAF [Active Air Flap]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 2.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086, 0137
Europe/General	i40(VF)	2013	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i40(VF)	2013	G 2.0 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 2.0 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	i40(VF)	2013	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 2.0 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i40(VF)	2013	G 2.0 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i40(VF)	2013	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i40(VF)	2013	G 2.0 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 2.0 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 2.0 GDI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	i40(VF)	2013	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i40(VF)	2013	G 2.0 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	i40(VF)	2013	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	i40(VF)	2013	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i40(VF)	2013	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	i40(VF)	2013	G 2.0 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0095, 0096
Europe/General	i40(VF)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i40(VF)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i40(VF)	2013	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 2.0 MPI	AAF [Active Air Flap]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086, 0137
Europe/General	i40(VF)	2013	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i40(VF)	2013	G 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 2.0 MPI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	i40(VF)	2013	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i40(VF)	2013	G 2.0 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i40(VF)	2013	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i40(VF)	2013	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 2.0 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i40(VF)	2013	G 2.0 MPI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	i40(VF)	2013	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	ENGINE [Engine Control (Low power)]	x	x	x	x	x	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	ENGINE [Engine Control (High power)]	x	x	x	x	x	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	EPB [Electric Parking Brake]	x	x	x	x	x	0095, 0096
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	AAF [Active Air Flap]	x	x	x	x	x	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	EPS [Motor Driven Power Steering]	x	x	x	x		0086, 0137
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	i40(VF)	2012	G 1.6 GDI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i40(VF)	2012	G 1.6 GDI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i40(VF)	2012	G 1.6 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	i40(VF)	2012	G 1.6 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0095, 0096
Europe/General	i40(VF)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i40(VF)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i40(VF)	2012	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 1.6 GDI	AAF [Active Air Flap]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 1.6 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086, 0137
Europe/General	i40(VF)	2012	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i40(VF)	2012	G 1.6 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 1.6 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	i40(VF)	2012	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i40(VF)	2012	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i40(VF)	2012	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i40(VF)	2012	G 1.6 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 1.6 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 1.6 GDI	BCM [Power Seat Module]	x	x	x	x	x	0122

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i40(VF)	2012	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i40(VF)	2012	G 2.0 GDI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	i40(VF)	2012	G 2.0 GDI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	i40(VF)	2012	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i40(VF)	2012	G 2.0 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	i40(VF)	2012	G 2.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0095, 0096
Europe/General	i40(VF)	2012	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i40(VF)	2012	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i40(VF)	2012	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 2.0 GDI	AAF [Active Air Flap]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 2.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086, 0137
Europe/General	i40(VF)	2012	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i40(VF)	2012	G 2.0 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 2.0 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	i40(VF)	2012	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 2.0 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i40(VF)	2012	G 2.0 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i40(VF)	2012	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i40(VF)	2012	G 2.0 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 2.0 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 2.0 GDI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	i40(VF)	2012	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	i40(VF)	2012	G 2.0 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	i40(VF)	2012	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	i40(VF)	2012	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	i40(VF)	2012	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	i40(VF)	2012	G 2.0 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0095, 0096
Europe/General	i40(VF)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	i40(VF)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	i40(VF)	2012	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 2.0 MPI	AAF [Active Air Flap]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	i40(VF)	2012	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086, 0137
Europe/General	i40(VF)	2012	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	i40(VF)	2012	G 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 2.0 MPI	LKAS [Lane Keeping Assist System]	x	x	x	x		
Europe/General	i40(VF)	2012	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	i40(VF)	2012	G 2.0 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	i40(VF)	2012	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	i40(VF)	2012	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 2.0 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	i40(VF)	2012	G 2.0 MPI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	i40(VF)	2012	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	EPS [Power Steering]	x	x	x	x		0086
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	EPS [Power Steering]	x	x	x	x		0086
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix20(JC)	2014	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ix20(JC)	2014	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix20(JC)	2014	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix20(JC)	2014	G 1.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ix20(JC)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix20(JC)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix20(JC)	2014	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix20(JC)	2014	G 1.4 MPI	EPS [Power Steering]	x	x	x	x		0086
Europe/General	ix20(JC)	2014	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix20(JC)	2014	G 1.4 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	ix20(JC)	2014	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	ix20(JC)	2014	G 1.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix20(JC)	2014	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix20(JC)	2014	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ix20(JC)	2014	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix20(JC)	2014	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix20(JC)	2014	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix20(JC)	2014	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ix20(JC)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix20(JC)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix20(JC)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix20(JC)	2014	G 1.6 MPI	EPS [Power Steering]	x	x	x	x		0086
Europe/General	ix20(JC)	2014	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix20(JC)	2014	G 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	ix20(JC)	2014	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	ix20(JC)	2014	G 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix20(JC)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	EPS [Power Steering]	x	x	x	x		0086

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	EPS [Power Steering]	x	x	x	x		0086
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix20(JC)	2013	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ix20(JC)	2013	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix20(JC)	2013	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix20(JC)	2013	G 1.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ix20(JC)	2013	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix20(JC)	2013	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix20(JC)	2013	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix20(JC)	2013	G 1.4 MPI	EPS [Power Steering]	x	x	x	x		0086
Europe/General	ix20(JC)	2013	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix20(JC)	2013	G 1.4 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	ix20(JC)	2013	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	ix20(JC)	2013	G 1.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix20(JC)	2013	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix20(JC)	2013	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ix20(JC)	2013	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix20(JC)	2013	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix20(JC)	2013	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix20(JC)	2013	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ix20(JC)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix20(JC)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix20(JC)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix20(JC)	2013	G 1.6 MPI	EPS [Power Steering]	x	x	x	x		0086
Europe/General	ix20(JC)	2013	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix20(JC)	2013	G 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	ix20(JC)	2013	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	ix20(JC)	2013	G 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix20(JC)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	EPS [Power Steering]	x	x	x	x		0086
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	EPS [Power Steering]	x	x	x	x		0086
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix20(JC)	2012	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ix20(JC)	2012	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix20(JC)	2012	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix20(JC)	2012	G 1.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ix20(JC)	2012	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix20(JC)	2012	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix20(JC)	2012	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix20(JC)	2012	G 1.4 MPI	EPS [Power Steering]	x	x	x	x		0086
Europe/General	ix20(JC)	2012	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix20(JC)	2012	G 1.4 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	ix20(JC)	2012	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	ix20(JC)	2012	G 1.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix20(JC)	2012	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix20(JC)	2012	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ix20(JC)	2012	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix20(JC)	2012	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix20(JC)	2012	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix20(JC)	2012	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ix20(JC)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix20(JC)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix20(JC)	2012	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix20(JC)	2012	G 1.6 MPI	EPS [Power Steering]	x	x	x	x		0086
Europe/General	ix20(JC)	2012	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix20(JC)	2012	G 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	ix20(JC)	2012	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	ix20(JC)	2012	G 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix20(JC)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	EPS [Power Steering]	x	x	x	x		0086
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix20(JC)	2011	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ix20(JC)	2011	G 1.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix20(JC)	2011	G 1.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0040, 0069, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix20(JC)	2011	G 1.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ix20(JC)	2011	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix20(JC)	2011	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix20(JC)	2011	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix20(JC)	2011	G 1.4 MPI	EPS [Power Steering]	x	x	x	x		0086
Europe/General	ix20(JC)	2011	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix20(JC)	2011	G 1.4 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	ix20(JC)	2011	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	ix20(JC)	2011	G 1.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix20(JC)	2011	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix20(JC)	2011	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	ix20(JC)	2011	G 1.6 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix20(JC)	2011	G 1.6 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix20(JC)	2011	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix20(JC)	2011	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	ix20(JC)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix20(JC)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix20(JC)	2011	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix20(JC)	2011	G 1.6 MPI	EPS [Power Steering]	x	x	x	x		0086
Europe/General	ix20(JC)	2011	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix20(JC)	2011	G 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	ix20(JC)	2011	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0042, 0043, 0056, 0118
Europe/General	ix20(JC)	2011	G 1.6 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix20(JC)	2011	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	HDC [High DC / DC Convertor]	x	x	x	x		
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	BPCU [Blower Pump Control Unit]	x	x	x	x		
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	FCU [Fuel Cell System]	x	x	x	x	x	0045, 0055, 0130
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	FPD [Fuel Processing Driver]	x	x	x	x	x	
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	HSCU [Hydrogen Storage System]	x	x	x	x	x	0108
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	SMKCODE [Smart Key Code Saving]				x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	SVM [Stack Volt Monitor]	×	×	×	×		
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	PDM [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	ABSESP [ABS / ESP]	×	×	×	×	×	0062, 0085
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	AHB [Active Hydraulic Booster]	×	×	×	×	×	
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	MCU [FCEV Motor Control System]	×	×	×	×		
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	BMS [EV Battery System]	×	×	×	×	×	
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	LDC [Low DC / DC Converter]	×	×	×	×		
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	EPS [Electronic Power Steering]	×	×	×	×		
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	SJB [Smart Junction Block]	×	×	×	×	×	
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	HDC [High DC / DC Converter]	×	×	×	×		
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	BPCU [Blower Pump Control Unit]	×	×	×	×		
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	FCU [Fuel Cell System]	×	×	×	×	×	0045, 0055, 0130
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	FPD [Fuel Processing Driver]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	HSCU [Hydrogen Storage System]	×	×	×	×	×	0108
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	SMKCODE [Smart Key Code Saving]				×		
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	SVM [Stack Volt Monitor]	×	×	×	×		
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	PDM [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	ABSESP [ABS / ESP]	×	×	×	×	×	0062, 0085
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	AHB [Active Hydraulic Booster]	×	×	×	×	×	
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	MCU [FCEV Motor Control System]	×	×	×	×		
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	BMS [EV Battery System]	×	×	×	×	×	
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	LDC [Low DC / DC Converter]	×	×	×	×		
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	EPS [Electronic Power Steering]	×	×	×	×		
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	SJB [Smart Junction Block]	×	×	×	×	×	
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	HDC [High DC / DC Convertor]	×	×	×	×		
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	BPCU [Blower Pump Control Unit]	×	×	×	×		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	FCU [Fuel Cell System]	×	×	×	×	×	0045, 0055, 0130
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	FPD [Fuel Processing Driver]	×	×	×	×	×	
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	HSCU [Hydrogen Storage System]	×	×	×	×	×	0108
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	SMKCODE [Smart Key Code Saving]				×		
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	SVM [Stack Volt Monitor]	×	×	×	×		
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	PDM [Power Distribution Module]	×	×	×	×	×	0042
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	ABSESP [ABS / ESP]	×	×	×	×	×	0062, 0085
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	AHB [Active Hydraulic Booster]	×	×	×	×	×	
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	MCU [FCEV Motor Control System]	×	×	×	×		
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	BMS [EV Battery System]	×	×	×	×	×	
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	LDC [Low DC / DC Converter]	×	×	×	×		
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	EPS [Electronic Power Steering]	×	×	×	×		
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	SJB [Smart Junction Block]	×	×	×	×	×	
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	ENGINE [Engine Control]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	ENGINE [Engine Control (High Power)]	x	x	x	x	x	0034, 0059
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	ENGINE [Engine Control (Low Power)]	x	x	x	x	x	0059
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2015	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix35(EL)	2015	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix35(EL)	2015	G 1.6 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2015	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	G 1.6 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ix35(EL)	2015	G 1.6 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
Europe/General	ix35(EL)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
Europe/General	ix35(EL)	2015	G 1.6 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ix35(EL)	2015	G 1.6 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2015	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ix35(EL)	2015	G 1.6 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2015	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix35(EL)	2015	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix35(EL)	2015	G 2.0 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2015	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35(EL)	2015	G 2.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ix35(EL)	2015	G 2.0 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
Europe/General	ix35(EL)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
Europe/General	ix35(EL)	2015	G 2.0 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ix35(EL)	2015	G 2.0 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2015	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ix35(EL)	2015	G 2.0 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2015	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ix35(EL)	2015	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix35(EL)	2015	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2015	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ix35(EL)	2015	G 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2015	G 2.0 MPI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
Europe/General	ix35(EL)	2015	G 2.0 MPI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
Europe/General	ix35(EL)	2015	G 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ix35(EL)	2015	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2015	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ix35(EL)	2015	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35(EL)	2015	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2015	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	ENGINE [Engine Control (High Power)]	x	x	x	x	x	0034, 0059
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	ENGINE [Engine Control (Low Power)]	x	x	x	x	x	0059
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2014	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix35(EL)	2014	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix35(EL)	2014	G 1.6 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2014	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	G 1.6 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ix35(EL)	2014	G 1.6 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2014	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
Europe/General	ix35(EL)	2014	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
Europe/General	ix35(EL)	2014	G 1.6 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ix35(EL)	2014	G 1.6 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2014	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ix35(EL)	2014	G 1.6 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2014	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix35(EL)	2014	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35(EL)	2014	G 2.0 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2014	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	G 2.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ix35(EL)	2014	G 2.0 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
Europe/General	ix35(EL)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
Europe/General	ix35(EL)	2014	G 2.0 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	ix35(EL)	2014	G 2.0 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2014	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ix35(EL)	2014	G 2.0 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2014	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ix35(EL)	2014	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix35(EL)	2014	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2014	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	ix35(EL)	2014	G 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2014	G 2.0 MPI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
Europe/General	ix35(EL)	2014	G 2.0 MPI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
Europe/General	ix35(EL)	2014	G 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35(EL)	2014	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2014	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	ix35(EL)	2014	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2014	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	EPS [Power Steering]	x	x	x	x		
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	SMK [Smart Key Code Saving]				x		
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	0059
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	0059
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	EPS [Power Steering]	x	x	x	x		
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x		0009, 0136

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	SMK [Smart Key Code Saving]				x		
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2013	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix35(EL)	2013	G 1.6 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2013	G 1.6 GDI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	G 1.6 GDI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	G 1.6 GDI	EPS [Power Steering]	x	x	x	x		
Europe/General	ix35(EL)	2013	G 1.6 GDI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	ix35(EL)	2013	G 1.6 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2013	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix35(EL)	2013	G 1.6 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	G 1.6 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2013	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	ix35(EL)	2013	G 1.6 GDI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	ix35(EL)	2013	G 1.6 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	ix35(EL)	2013	G 1.6 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2013	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ix35(EL)	2013	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	ix35(EL)	2013	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ix35(EL)	2013	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	ix35(EL)	2013	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35(EL)	2013	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	ix35(EL)	2013	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix35(EL)	2013	G 2.0 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2013	G 2.0 MPI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	G 2.0 MPI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	G 2.0 MPI	EPS [Power Steering]	x	x	x	x		
Europe/General	ix35(EL)	2013	G 2.0 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	ix35(EL)	2013	G 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2013	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix35(EL)	2013	G 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2013	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	ix35(EL)	2013	G 2.0 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	ix35(EL)	2013	G 2.0 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	ix35(EL)	2013	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2013	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	EPS [Power Steering]	x	x	x	x		
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	SMK [Power Distribution Module]	x	x	x	x	x	0042

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	SMK [Smart Key Code Saving]				x		
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	0059
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	0059
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	EPS [Power Steering]	x	x	x	x		
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	SMK [Smart Key Code Saving]				x		
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2012	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix35(EL)	2012	G 1.6 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2012	G 1.6 GDI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	G 1.6 GDI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	G 1.6 GDI	EPS [Power Steering]	x	x	x	x		
Europe/General	ix35(EL)	2012	G 1.6 GDI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	ix35(EL)	2012	G 1.6 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2012	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35(EL)	2012	G 1.6 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	G 1.6 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2012	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	ix35(EL)	2012	G 1.6 GDI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	ix35(EL)	2012	G 1.6 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	ix35(EL)	2012	G 1.6 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2012	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ix35(EL)	2012	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	ix35(EL)	2012	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	ix35(EL)	2012	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	ix35(EL)	2012	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	ix35(EL)	2012	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	ix35(EL)	2012	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix35(EL)	2012	G 2.0 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2012	G 2.0 MPI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	G 2.0 MPI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	G 2.0 MPI	EPS [Power Steering]	x	x	x	x		
Europe/General	ix35(EL)	2012	G 2.0 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	ix35(EL)	2012	G 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2012	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix35(EL)	2012	G 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2012	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	ix35(EL)	2012	G 2.0 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	ix35(EL)	2012	G 2.0 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	ix35(EL)	2012	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2012	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	EPS [Power Steering]	x	x	x	x		
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	SMK [Smart Key Code Saving]				x		
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	0059
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	0059
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	EPS [Power Steering]	x	x	x	x		
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	SMK [Smart Key Code Saving]				x		
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2011	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	ix35(EL)	2011	G 1.6 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2011	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2011	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2011	G 1.6 GDI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	G 1.6 GDI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	G 1.6 GDI	EPS [Power Steering]	x	x	x	x		
Europe/General	ix35(EL)	2011	G 1.6 GDI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	ix35(EL)	2011	G 1.6 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2011	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix35(EL)	2011	G 1.6 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	G 1.6 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2011	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	ix35(EL)	2011	G 1.6 GDI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	ix35(EL)	2011	G 1.6 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	ix35(EL)	2011	G 1.6 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2011	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	ix35(EL)	2011	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	ix35(EL)	2011	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	ix35(EL)	2011	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix35(EL)	2011	G 2.0 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2011	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2011	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2011	G 2.0 MPI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	G 2.0 MPI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	G 2.0 MPI	EPS [Power Steering]	x	x	x	x		
Europe/General	ix35(EL)	2011	G 2.0 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35(EL)	2011	G 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	ix35(EL)	2011	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix35(EL)	2011	G 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2011	G 2.0 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	ix35(EL)	2011	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	ix35(EL)	2011	G 2.0 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	ix35(EL)	2011	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2011	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	0059
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	0059
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	EPS [Power Steering]	x	x	x	x		
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	SMK [Smart Key Code Saving]				x		
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	ix35(EL)	2010	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	ix35(EL)	2010	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	ix35(EL)	2010	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	ix35(EL)	2010	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	ix35(EL)	2010	G 2.0 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	ix35(EL)	2010	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	ix35(EL)	2010	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	ix35(EL)	2010	G 2.0 MPI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	ix35(EL)	2010	G 2.0 MPI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	ix35(EL)	2010	G 2.0 MPI	EPS [Power Steering]	x	x	x	x		
Europe/General	ix35(EL)	2010	G 2.0 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	ix35(EL)	2010	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	ix35(EL)	2010	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	ix35(EL)	2010	G 2.0 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	ix35(EL)	2010	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	ix35(EL)	2010	G 2.0 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	ix35(EL)	2010	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	ix35(EL)	2010	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	ix35(EL)	2010	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	MARCIA(H1)	1998	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	MARCIA(H1)	1998	G 2.5 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	MARCIA(H1)	1997	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	MARCIA(H1)	1997	G 2.5 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	MARCIA(H1)	1996	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	MARCIA(H1)	1996	G 2.5 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	MATRIX(FC)	2011	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2011	D 1.5 TCI-U	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2011	D 1.5 TCI-U	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2011	D 1.5 TCI-U	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2011	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			
Europe/General	MATRIX(FC)	2011	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2011	D 1.5 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2011	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	MATRIX(FC)	2011	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2010	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2010	D 1.5 TCI-U	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2010	D 1.5 TCI-U	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2010	D 1.5 TCI-U	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2010	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			
Europe/General	MATRIX(FC)	2010	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2010	D 1.5 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2010	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	MATRIX(FC)	2010	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2009	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2009	D 1.5 TCI-U	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2009	D 1.5 TCI-U	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2009	D 1.5 TCI-U	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2009	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			
Europe/General	MATRIX(FC)	2009	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2009	D 1.5 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2009	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	MATRIX(FC)	2009	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2008	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2008	D 1.5 TCI-U	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2008	D 1.5 TCI-U	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2008	D 1.5 TCI-U	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2008	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			
Europe/General	MATRIX(FC)	2008	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2008	D 1.5 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2008	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	MATRIX(FC)	2008	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2007	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2007	D 1.5 TCI-U	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2007	D 1.5 TCI-U	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2007	D 1.5 TCI-U	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2007	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x			
Europe/General	MATRIX(FC)	2007	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2007	D 1.5 TCI-U	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2007	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	MATRIX(FC)	2007	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2006	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2006	D 1.5 TCI-U	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2006	D 1.5 TCI-U	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2006	D 1.5 TCI-U	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2006	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2006	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2006	G 1.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	MATRIX(FC)	2006	G 1.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2006	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2006	G 1.8 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2006	G 1.8 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	MATRIX(FC)	2006	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2006	G 1.8 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2006	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	MATRIX(FC)	2006	G 1.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-D	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-D	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-U	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-U	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-U	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-U	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-U	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2005	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	MATRIX(FC)	2005	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	MATRIX(FC)	2005	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	MATRIX(FC)	2005	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2005	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2005	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2005	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2005	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2005	G 1.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	MATRIX(FC)	2005	G 1.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2005	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2005	G 1.8 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2005	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2005	G 1.8 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2005	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2005	G 1.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2004	D 1.5 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2004	D 1.5 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2004	D 1.5 TCI-D	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2004	D 1.5 TCI-D	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2004	D 1.5 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2004	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	MATRIX(FC)	2004	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	MATRIX(FC)	2004	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	MATRIX(FC)	2004	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2004	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	MATRIX(FC)	2004	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2004	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2004	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2004	G 1.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	MATRIX(FC)	2004	G 1.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2004	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2004	G 1.8 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2004	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2004	G 1.8 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2004	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2004	G 1.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2003	D 1.5 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2003	D 1.5 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2003	D 1.5 TCI-D	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2003	D 1.5 TCI-D	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2003	D 1.5 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2003	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	MATRIX(FC)	2003	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	MATRIX(FC)	2003	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	MATRIX(FC)	2003	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2003	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2003	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2003	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2003	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2003	G 1.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	MATRIX(FC)	2003	G 1.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2003	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2003	G 1.8 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2003	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2003	G 1.8 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2003	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2003	G 1.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2002	D 1.5 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	MATRIX(FC)	2002	D 1.5 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2002	D 1.5 TCI-D	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2002	D 1.5 TCI-D	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2002	D 1.5 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	MATRIX(FC)	2002	G 1.6 DOHC	ENGINE [Unleaded GEN]	x	x	x	x		
Europe/General	MATRIX(FC)	2002	G 1.6 DOHC	ENGINE [Leaded All]		x	x	x		0070
Europe/General	MATRIX(FC)	2002	G 1.6 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x		
Europe/General	MATRIX(FC)	2002	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2002	G 1.6 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2002	G 1.6 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2002	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2002	G 1.6 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	MATRIX(FC)	2002	G 1.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	MATRIX(FC)	2002	G 1.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2002	G 1.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	MATRIX(FC)	2002	G 1.8 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	MATRIX(FC)	2002	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	MATRIX(FC)	2002	G 1.8 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	MATRIX(FC)	2002	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
Europe/General	MATRIX(FC)	2002	G 1.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	0059
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	0059
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	SMK [Smart Key Code Saving]				x		
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	0059
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	0059
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	SMK [Smart Key Code Saving]				x		
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0143
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	0059
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	0059
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	SMK [Smart Key Code Saving]				x		
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	0059
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	0059
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	SMK [Smart Key Code Saving]				x		
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0143
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	0059
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	0059
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	SMK [Smart Key Code Saving]				x		
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	0059
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	0059
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	SMK [Smart Key Code Saving]				x		
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0143
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	0059
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	0059
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	SMK [Smart Key Code Saving]				x		
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	AIRBAG [Airbag (NAS)]	x	x	x			0099, 0102
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	AIRBAG [Airbag (GEN)]	x	x	x			0102

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	0059
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	0059
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	SMK [Smart Key Code Saving]				x		
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0143
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	AIRBAG [Airbag (NAS)]	x	x	x			0099, 0102
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	AIRBAG [Airbag (GEN)]	x	x	x			0102
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0143
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0143
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	AIRBAG [Airbag (NAS)]	x	x	x			0099, 0102
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	AIRBAG [Airbag (GEN)]	x	x	x			0102
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0143
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0143
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	AIRBAG [Airbag (NAS)]	x	x	x			0099, 0102
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	AIRBAG [Airbag (GEN)]	x	x	x			0102
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0143
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0143
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	4WD [4WD Control]		x	x	x		
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	ENGINE [Leaded All]	x	x	x	x	x	0070

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	BCM [Body Control Module]	x			x	x	
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	ENGINE [Engine Control]	x	x	x	x	x	0034, 0059
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AVM [Around View Monitor System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AHS [Active Hood System]	x	x	x		x	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	PTG [Power Tail Gate]	x	x	x	x		
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	ENGINE [Engine Control]	x	x	x	x	x	0034, 0059
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AVM [Around View Monitor System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AHS [Active Hood System]	x	x	x		x	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	PTG [Power Tail Gate]	x	x	x	x		
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	BCM [Body Control Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AVM [Around View Monitor System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AHS [Active Hood System]	x	x	x		x	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	PTG [Power Tail Gate]	x	x	x	x		
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	ENGINE [Leaded All]		x	x			0015, 0070, 0109, 0113, 0143
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AVM [Around View Monitor System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AHS [Active Hood System]	x	x	x		x	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	PTG [Power Tail Gate]	x	x	x	x		
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	ENGINE [Unleaded All]	x	x	x	x		0053, 0109, 0143
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	ENGINE [Leaded All]	x	x	x	x		0053, 0070, 0109, 0143
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	SCC [Smart Cruise Control]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AVM [Around View Monitor System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AHS [Active Hood System]	x	x	x		x	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	PTG [Power Tail Gate]	x	x	x	x		
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	ENGINE [Engine Control]	x	x	x	x	x	0034, 0059
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	x	x	x	x		0079

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	AHS [Active Hood System]	x	x	x		x	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	ENGINE [Engine Control]	x	x	x	x	x	0034, 0059
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	AHS [Active Hood System]	x	x	x		x	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	BCM [Assist Door Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	AHS [Active Hood System]	x	x	x		x	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	ENGINE [Leaded All]		x	x			0015, 0070, 0109, 0113, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	AHS [Active Hood System]	x	x	x		x	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	AHS [Active Hood System]	x	x	x		x	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	ENGINE [Leaded All]	x	x	x	x		0053, 0070, 0109, 0143
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	ENGINE [Unleaded All]	x	x	x	x		0053, 0109, 0143
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	ENGINE [Engine Control]	x	x	x	x	x	0034, 0059
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	AHS [Active Hood System]	x	x	x		x	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	ENGINE [Engine Control]	x	x	x	x	x	0034, 0059
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	AHS [Active Hood System]	x	x	x		x	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	BCM [Power Seat Module]	x	x	x	x	x	0122

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	AHS [Active Hood System]	x	x	x		x	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	ENGINE [Leaded All]		x	x			0015, 0070, 0109, 0113, 0143
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	AHS [Active Hood System]	x	x	x		x	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	ENGINE [Leaded All]	x	x	x	x		0053, 0070, 0109, 0143
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	ENGINE [Unleaded All]	x	x	x	x		0053, 0109, 0143
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	AHS [Active Hood System]	x	x	x		x	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	BCM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	ENGINE [Engine Control]	x	x	x	x	x	0034, 0059
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	EPB [Electric Parking Brake]	x	x	x	x	x	0037
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	EPS [Motor driven Power Steering]	x	x	x	x		0086
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	x	x	x	x		0079
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	AHS [Active Hood System]	x	x	x		x	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	DDM [Driver Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	ADM [Assist Door Module]	x	x	x	x	x	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	PSM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (VGT)]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (WGT)]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	ABS [2WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	ABS [4WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	TCS [Traction Control]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	AIRBAG [NAS]	x	x	x			0104
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	AIRBAG [General]	x	x	x			
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	ABS [2WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	ABS [4WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	TCS [Traction Control]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	AIRBAG [NAS]	x	x	x			0104
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	AIRBAG [General]	x	x	x			
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	4WD [4WD Control]		x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	ABS [2WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	ABS [4WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	TCS [Traction Control]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	AIRBAG [NAS]	x	x	x			0104
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	AIRBAG [General]	x	x	x			
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	0015, 0053, 0110, 0113
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	ABS [2WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	ABS [4WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	TCS [Traction Control]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	AIRBAG [NAS]	x	x	x			0104
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	AIRBAG [General]	x	x	x			
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	ABS [2WD]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	ABS [4WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	TCS [Traction Control]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	AIRBAG [NAS]	x	x	x			0104
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	AIRBAG [General]	x	x	x			
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (VGT)]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (WGT)]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	ABS [2WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	ABS [4WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	TCS [Traction Control]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	AIRBAG [NAS]	x	x	x			0104
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	AIRBAG [General]	x	x	x			
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	ABS [2WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	ABS [4WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	TCS [Traction Control]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	AIRBAG [NAS]	x	x	x			0104
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	AIRBAG [General]	x	x	x			
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	4WD [4WD Control]		x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	ABS [2WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	ABS [4WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	TCS [Traction Control]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	AIRBAG [NAS]	x	x	x			0104
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	AIRBAG [General]	x	x	x			
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	0015, 0053, 0110, 0113
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	ABS [2WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	ABS [4WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	TCS [Traction Control]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	AIRBAG [NAS]	x	x	x			0104
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	AIRBAG [General]	x	x	x			
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	ABS [2WD]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	ABS [4WD]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	TCS [Traction Control]	x	x	x	x	x	0062
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	AIRBAG [NAS]	x	x	x			0104
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	AIRBAG [General]	x	x	x			
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (VGT)]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (WGT)]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	ABS [2WD]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	0015, 0053, 0110, 0113
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2004	G 3.5 DOHC	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 3.5 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2004	G 3.5 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2004	G 3.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2004	G 3.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2004	G 3.5 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2004	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (VGT)]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (WGT)]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ENGINE [Unleaded GEN (ZrO2)]	x	x	x	x	x	0015, 0109, 0113
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ENGINE [Unleaded EOBD (ZrO2)]	x	x	x	x	x	0015, 0109, 0113
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ENGINE [Unleaded OBD - II (ZrO2)]		x	x	x	x	0015, 0053, 0110, 0113
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ENGINE [Unleaded GEN (TiO2)]	x	x	x	x	x	0015, 0113
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ENGINE [Unleaded OBD - II (TiO2)]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ENGINE [Unleaded EOBD (TiO2)]	x	x	x	x	x	0015, 0113
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (VGT)]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (WGT)]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (WGT)]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	TCS [Traction Control]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	ABS [2WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	ABS [4WD]		x	x	x	x	0062
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	4WD [4WD Control]		x	x			
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAMO(M2)	2003	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SANTAMO(M2)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	SANTAMO(M2)	2003	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAMO(M2)	2002	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SANTAMO(M2)	2002	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	SANTAMO(M2)	2002	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAMO(M2)	2001	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SANTAMO(M2)	2001	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	SANTAMO(M2)	2001	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAMO(M2)	2000	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SANTAMO(M2)	2000	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	SANTAMO(M2)	2000	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAMO(M2)	2000	G 2.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SANTAMO(M2)	2000	G 2.0 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	SANTAMO(M2)	2000	G 2.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAMO(M2)	1999	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SANTAMO(M2)	1999	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	SANTAMO(M2)	1999	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAMO(M2)	1999	G 2.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SANTAMO(M2)	1999	G 2.0 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	SANTAMO(M2)	1999	G 2.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAMO(M2)	1998	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SANTAMO(M2)	1998	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	SANTAMO(M2)	1998	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAMO(M2)	1998	G 2.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SANTAMO(M2)	1998	G 2.0 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	SANTAMO(M2)	1998	G 2.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAMO(M2)	1997	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SANTAMO(M2)	1997	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	SANTAMO(M2)	1997	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SANTAMO(M2)	1997	G 2.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SANTAMO(M2)	1997	G 2.0 SOHC	AIRBAG [Airbag Control]		x	x	x		
Europe/General	SANTAMO(M2)	1997	G 2.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SCOUPE(L1)	1996	G 1.5 SOHC	ENGINE [Leaded All]		x	x	x	x	
Europe/General	SCOUPE(L1)	1996	G 1.5 SOHC	ENGINE [Unleaded T / C]		x	x	x	x	
Europe/General	SCOUPE(L1)	1996	G 1.5 SOHC	ENGINE [Unleaded CAL]		x	x	x	x	
Europe/General	SCOUPE(L1)	1996	G 1.5 SOHC	ENGINE [Unleaded FED]		x	x	x	x	
Europe/General	SCOUPE(L1)	1996	G 1.5 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	SCOUPE(L1)	1995	G 1.5 SOHC	ENGINE [Leaded All]		x	x	x	x	
Europe/General	SCOUPE(L1)	1995	G 1.5 SOHC	ENGINE [Unleaded T / C]		x	x	x	x	
Europe/General	SCOUPE(L1)	1995	G 1.5 SOHC	ENGINE [Unleaded CAL]		x	x	x	x	
Europe/General	SCOUPE(L1)	1995	G 1.5 SOHC	ENGINE [Unleaded FED]		x	x	x	x	
Europe/General	SCOUPE(L1)	1995	G 1.5 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	SCOUPE(L1)	1994	G 1.5 SOHC	ENGINE [Leaded All]		x	x	x	x	
Europe/General	SCOUPE(L1)	1994	G 1.5 SOHC	ENGINE [Unleaded T / C (94~96)]		x	x	x	x	
Europe/General	SCOUPE(L1)	1994	G 1.5 SOHC	ENGINE [Unleaded GEN]		x	x	x	x	
Europe/General	SCOUPE(L1)	1993	G 1.5 SOHC(Bosch)	ENGINE [Leaded All]		x	x	x	x	
Europe/General	SCOUPE(L1)	1993	G 1.5 SOHC(Melco)	ENGINE [Leaded All]		x	x	x	x	
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	SMK [Power Distribution Module]	x	x	x	x	x	
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	SMK [Smart Key Code Saving]				x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	SMK [Smart Key Unit]	×	×	×	×	×	0056, 0098, 0118, 0133
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	BCM [Body Control Module]	×	×	×	×	×	
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	SJB [Smart Junction Block]	×	×	×	×	×	
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	CLU [Cluster Module]	×	×	×	×	×	
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	CODE [Transmitter Code Saving]				×		0026
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	ENGINE [Engine Control]		×	×			0015, 0052, 0109, 0113, 0143
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	ENGINE [Engine Control]	×	×	×	×		0015, 0052, 0109, 0113, 0143
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	AT [Automatic Transaxle]	×	×	×	×	×	0036, 0114
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	ABSESC [ABS / ESC]	×	×	×	×	×	0062, 0085
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	AHB [Active Hydraulic Booster]	×	×	×	×	×	
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	AIRBAG [Airbag (Event #1)]	×	×	×			
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	AIRBAG [Airbag (Event #2)]	×	×	×			
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	ODS [Weight Classification System]	×	×	×	×		0141

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	HCU [HEV Control System]	×	×	×	×		0030, 0048, 0049, 0078
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	MCU [HEV Motor System]	×	×	×	×	×	0046, 0093
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	BMS [HEV Battery System]	×	×	×	×	×	
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	LDC [Low DC / DC Converter]	×	×	×	×		
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	AAF [Active Air Flap]	×	×	×	×	×	
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	EPS [Power Steering]	×	×	×	×		0086
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013	G 2.4 HEV	TMU [Telematics Unit]	×	×	×			
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	ENGINE [Engine Control (RUSSIA)]	×	×	×	×	×	0015, 0113
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	ENGINE [Engine Control (EOBD)]	×	×	×	×	×	
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	ABS [Anti - Lock Brake]		×	×	×	×	0062
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	TCS [Traction Control]		×	×	×	×	
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]		×	×			
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	ENGINE [Engine Control (RUSSIA)]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	ENGINE [Engine Control (EOBD)]	x	x	x	x	x	
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	0015, 0053, 0110, 0113
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	ENGINE [Unleaded GEN (Siemens)]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	ENGINE [Unleaded GEN (Melco)]	x	x	x	x	x	
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	ENGINE [Unleaded GEN (Siemens)]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	ENGINE [Unleaded GEN (Melco)]	x	x	x	x	x	
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	0015, 0053, 0110, 0113
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	ENGINE [Unleaded GEN (Siemens)]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	ENGINE [Unleaded GEN (Melco)]	x	x	x	x	x	
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	ENGINE [Unleaded GEN (Siemens)]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	ENGINE [Unleaded GEN (Melco)]	x	x	x	x	x	
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	ENGINE [Unleaded (Ti O2S) EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	ENGINE [Unleaded (Ti O2S) OBD - II]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	ENGINE [Unleaded (Zr O2S) OBD - II]		x	x	x	x	0015, 0053, 0110, 0113
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	ENGINE [Unleaded (Zr O2S) EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	ENGINE [Unleaded GEN (Siemens)]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	ENGINE [Unleaded GEN (Melco)]	x	x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	ENGINE [Unleaded GEN (Siemens)]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	ENGINE [Unleaded GEN (Melco)]	x	x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	AIRBAG [Airbag Control]		x	x			
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	ENGINE [Unleaded GEN (Siemens)]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	ENGINE [Unleaded GEN (Melco)]	x	x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	ENGINE [Unleaded GEN (Siemens)]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	ENGINE [Unleaded GEN (Melco)]	x	x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	ENGINE [Unleaded GEN (Siemens)]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	ENGINE [Unleaded GEN (Melco)]	x	x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	ENGINE [Unleaded GEN (Siemens)]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	ENGINE [Unleaded GEN (Melco)]	x	x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	ENGINE [Unleaded GEN (Melco)]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	ENGINE [Unleaded GEN (Melco)]	x	x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	ENGINE [Unleaded GEN (Siemens)]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	ENGINE [Unleaded GEN (Melco)]	x	x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	ENGINE [Unleaded IMMO]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	TCS [Traction Control]		x	x	x	x	
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(LF)	2015	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA(LF)	2015	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA(LF)	2015	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(LF)	2015	G 2.0 MPI	EPB [Electronic Parking Brake]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA(LF)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA(LF)	2015	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.0 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	SONATA(LF)	2015	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	SONATA(LF)	2015	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	SONATA(LF)	2015	G 2.0 MPI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
Europe/General	SONATA(LF)	2015	G 2.0 MPI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(LF)	2015	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
Europe/General	SONATA(LF)	2015	G 2.0 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SONATA(LF)	2015	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0041, 0042, 0043, 0056, 0118
Europe/General	SONATA(LF)	2015	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	0138
Europe/General	SONATA(LF)	2015	G 2.0 MPI	DDM [Driver Door Module]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.0 MPI	ADM [Assist Door Module]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.0 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.0 MPI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.0 MPI	PSM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SONATA(LF)	2015	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0115, 0143
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0041, 0042, 0043, 0056, 0118
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	BCM [Body Control Module]	x	x	x	x	x	0138
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(LF)	2015	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0115, 0143
Europe/General	SONATA(LF)	2015	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	SONATA(LF)	2015	G 2.4 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(LF)	2015	G 2.4 GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA(LF)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA(LF)	2015	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.4 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	SONATA(LF)	2015	G 2.4 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	SONATA(LF)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	SONATA(LF)	2015	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
Europe/General	SONATA(LF)	2015	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
Europe/General	SONATA(LF)	2015	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
Europe/General	SONATA(LF)	2015	G 2.4 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(LF)	2015	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0041, 0042, 0043, 0056, 0118
Europe/General	SONATA(LF)	2015	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	0138
Europe/General	SONATA(LF)	2015	G 2.4 GDI	DDM [Driver Door Module]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.4 GDI	ADM [Assist Door Module]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.4 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.4 GDI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.4 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SONATA(LF)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(LF)	2015	G 2.4 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA(LF)	2015	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA(LF)	2015	G 2.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(LF)	2015	G 2.4 MPI	EPB [Electronic Parking Brake]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA(LF)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA(LF)	2015	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.4 MPI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	SONATA(LF)	2015	G 2.4 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	SONATA(LF)	2015	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(LF)	2015	G 2.4 MPI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
Europe/General	SONATA(LF)	2015	G 2.4 MPI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
Europe/General	SONATA(LF)	2015	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
Europe/General	SONATA(LF)	2015	G 2.4 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SONATA(LF)	2015	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0041, 0042, 0043, 0056, 0118
Europe/General	SONATA(LF)	2015	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	0138
Europe/General	SONATA(LF)	2015	G 2.4 MPI	DDM [Driver Door Module]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.4 MPI	ADM [Assist Door Module]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.4 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.4 MPI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA(LF)	2015	G 2.4 MPI	PSM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SONATA(LF)	2015	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	AT [Dual Clutch Transmission]	x	x	x	x		0029
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	ODS [Occupant Classification Sensor]	x	x	x	x		
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	AIRCON [FATC / MTC]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0121
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	TMU [Telematics Unit]	x	x	x			
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	BCM [Body Control Module]	x	x	x	x	x	0138

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0115, 0143
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	ODS [Occupant Classification Sensor]	x	x	x	x		
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	AIRCON [FATC / MTC]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0121
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	TMU [Telematics Unit]	x	x	x			
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	BCM [Body Control Module]	x	x	x	x	x	0138
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0115, 0143
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	ODS [Occupant Classification Sensor]	x	x	x	x		
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	AIRCON [FATC / MTC]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	SCC [Smart Cruise Control]	x	x	x	x		
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0121
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	TMU [Telematics Unit]	x	x	x			
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	0138
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	DDM [Driver Door Module]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	ADM [Assist Door Module]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	CLU [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	0114
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	AGCS [AGCS]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	BCM [BODY CONTROL MODULE]	x			x	x	
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	0114
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	AGCS [AGCS]	x	x	x	x	x	
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0113
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	AGCS [AGCS]	x	x	x	x	x	
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	AGCS [AGCS]	x	x	x	x	x	
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	0114
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	AGCS [AGCS]	x	x	x	x	x	
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	BCM [BODY CONTROL MODULE]	x			x	x	
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	0114
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	AGCS [AGCS]	x	x	x	x	x	
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	SMK [Smart Key Code Saving]				x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0113
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	AGCS [AGCS]	x	x	x	x	x	
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	AGCS [AGCS]	x	x	x	x	x	
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	0114
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	AGCS [AGCS]	x	x	x	x	x	
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113, 0134
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113, 0134
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113, 0134

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	AGCS [AGCS]	x	x	x	x	x	
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2007	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	SONATA(NF)	2007	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	0114
Europe/General	SONATA(NF)	2007	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2007	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2007	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2007	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2007	D 2.0 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2007	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113, 0134
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113, 0134
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113, 0134
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113, 0134
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113, 0134
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113, 0134
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	AT [5 - Speed]	x	x	x	x	x	
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	AT [4 - Speed]	x	x	x	x	x	
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113, 0134
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113, 0134
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113, 0134
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	ECS [Electronic Control Suspension]	x	x	x	x	x	
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	BCM [Body Control Module]	x			x	x	
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(Y3)	1998	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1998	G 1.8 DOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1998	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1998	G 1.8 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1998	G 1.8 SOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1998	G 1.8 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1998	G 2.0 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	
Europe/General	SONATA(Y3)	1998	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1998	G 2.0 DOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1998	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1998	G 2.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1998	G 2.0 SOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1998	G 2.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1998	G 3.0 SOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	
Europe/General	SONATA(Y3)	1998	G 3.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1998	G 3.0 SOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1998	G 3.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1997	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1997	G 1.8 DOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1997	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1997	G 1.8 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1997	G 1.8 SOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1997	G 1.8 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1997	G 2.0 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(Y3)	1997	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1997	G 2.0 DOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1997	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1997	G 2.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1997	G 2.0 SOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1997	G 2.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1997	G 3.0 SOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	
Europe/General	SONATA(Y3)	1997	G 3.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1997	G 3.0 SOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1997	G 3.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1996	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1996	G 1.8 DOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1996	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1996	G 1.8 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1996	G 1.8 SOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1996	G 1.8 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1996	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1996	G 2.0 DOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1996	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1996	G 2.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1996	G 2.0 SOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1996	G 2.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1996	G 3.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1996	G 3.0 SOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1996	G 3.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1995	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1995	G 1.8 DOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1995	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1995	G 1.8 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1995	G 1.8 SOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1995	G 1.8 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1995	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1995	G 2.0 DOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1995	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1995	G 2.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1995	G 2.0 SOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1995	G 2.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(Y3)	1995	G 3.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1995	G 3.0 SOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1995	G 3.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1994	G 1.8 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1994	G 1.8 DOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1994	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1994	G 1.8 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1994	G 1.8 SOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1994	G 1.8 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1994	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1994	G 2.0 DOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1994	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1994	G 2.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1994	G 2.0 SOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1994	G 2.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(Y3)	1994	G 3.0 SOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	SONATA(Y3)	1994	G 3.0 SOHC	AIRBAG [AIRBAG]		x	x	x		
Europe/General	SONATA(Y3)	1994	G 3.0 SOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	ENGINE [Leaded All]		x	x			0015, 0070, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	ESP [Electronic Stability Program (Mobis)]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	ESP [Electronic Stability Program (Bosch)]	x	x	x	x	x	0010
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	ESP [Electronic Stability Program (Mobis)]	x	x	x	x	x	0062
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	ESP [Electronic Stability Program (Bosch)]	x	x	x	x	x	0010
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	ESP [Electronic Stability Program (Mobis)]	x	x	x	x	x	0062
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	ESP [Electronic Stability Program (Bosch)]	x	x	x	x	x	0010
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	ENGINE [Leaded All]		x	x			0015, 0070, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	ESP [Electronic Stability Program (Mobis)]	x	x	x	x	x	0062
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	ESP [Electronic Stability Program (Bosch)]	x	x	x	x	x	0010
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	ESP [Electronic Stability Program (Mobis)]	x	x	x	x	x	0062
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	ESP [Electronic Stability Program (Bosch)]	x	x	x	x	x	0010
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	ESP [Electronic Stability Program (Mobis)]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	ESP [Electronic Stability Program (Bosch)]	x	x	x	x	x	0010
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	ENGINE [Unleaded All]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	ENGINE [Leaded All]		x	x			0015, 0070, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	ESP [Electronic Stability Program (Mobis)]	x	x	x	x	x	0062
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	ESP [Electronic Stability Program (Bosch)]	x	x	x	x	x	0010
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0109, 0113, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	ESP [Electronic Stability Program (Mobis)]	x	x	x	x	x	0062
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	ESP [Electronic Stability Program (Bosch)]	x	x	x	x	x	0010
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	ESP [Electronic Stability Program (Mobis)]	x	x	x	x	x	0062
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	ESP [Electronic Stability Program (Bosch)]	x	x	x	x	x	0010
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	ESP [Electronic Stability Program (Mobis)]	x	x	x	x	x	0062
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	ESP [Electronic Stability Program (Bosch)]	x	x	x	x	x	0010
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	ESP [Electronic Stability Program (Mobis)]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	ESP [Electronic Stability Program (Bosch)]	x	x	x	x	x	0010
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	ESP [Electronic Stability Program (Mobis)]	x	x	x	x	x	0062
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	ESP [Electronic Stability Program (Bosch)]	x	x	x	x	x	0010
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	BCM [Cluster Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0010
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0010
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0010
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TERRACAN(HP)	2006	D 2.5 TCI	ENGINE [Engine Control]		x	x	x	x	
Europe/General	TERRACAN(HP)	2006	D 2.5 TCI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2006	D 2.5 TCI	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2006	D 2.5 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2006	D 2.5 TCI	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2006	D 2.5 TCI	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2006	D 2.5 TCI	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TERRACAN(HP)	2006	D 2.9 TCI	ENGINE [Engine Control]	x	x	x	x	x	0032, 0058, 0075
Europe/General	TERRACAN(HP)	2006	D 2.9 TCI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2006	D 2.9 TCI	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2006	D 2.9 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2006	D 2.9 TCI	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2006	D 2.9 TCI	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2006	D 2.9 TCI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TERRACAN(HP)	2005	D 2.5 TCI	ENGINE [Engine Control]		x	x	x	x	
Europe/General	TERRACAN(HP)	2005	D 2.5 TCI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2005	D 2.5 TCI	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2005	D 2.5 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2005	D 2.5 TCI	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2005	D 2.5 TCI	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2005	D 2.5 TCI	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TERRACAN(HP)	2005	D 2.9 TCI	ENGINE [Engine Control]	x	x	x	x	x	0032, 0058, 0075
Europe/General	TERRACAN(HP)	2005	D 2.9 TCI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2005	D 2.9 TCI	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2005	D 2.9 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2005	D 2.9 TCI	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2005	D 2.9 TCI	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2005	D 2.9 TCI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TERRACAN(HP)	2004	D 2.5 TCI	ENGINE [Engine Control]		x	x	x	x	
Europe/General	TERRACAN(HP)	2004	D 2.5 TCI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2004	D 2.5 TCI	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2004	D 2.5 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2004	D 2.5 TCI	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2004	D 2.5 TCI	4WD [TOD]		x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TERRACAN(HP)	2004	D 2.5 TCI	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TERRACAN(HP)	2004	D 2.9 TCI	ENGINE [Engine Control]	x	x	x	x	x	0032, 0058, 0075
Europe/General	TERRACAN(HP)	2004	D 2.9 TCI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2004	D 2.9 TCI	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2004	D 2.9 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2004	D 2.9 TCI	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2004	D 2.9 TCI	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2004	D 2.9 TCI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TERRACAN(HP)	2003	D 2.5 TCI	ENGINE [Engine Control]		x	x	x	x	
Europe/General	TERRACAN(HP)	2003	D 2.5 TCI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2003	D 2.5 TCI	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2003	D 2.5 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2003	D 2.5 TCI	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2003	D 2.5 TCI	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2003	D 2.5 TCI	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TERRACAN(HP)	2003	D 2.9 TCI	ENGINE [Engine Control]	x	x	x	x	x	0032, 0058, 0075
Europe/General	TERRACAN(HP)	2003	D 2.9 TCI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2003	D 2.9 TCI	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2003	D 2.9 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2003	D 2.9 TCI	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2003	D 2.9 TCI	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2003	D 2.9 TCI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TERRACAN(HP)	2002	D 2.5 TCI	ENGINE [Engine Control]		x	x	x	x	
Europe/General	TERRACAN(HP)	2002	D 2.5 TCI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2002	D 2.5 TCI	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2002	D 2.5 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2002	D 2.5 TCI	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2002	D 2.5 TCI	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2002	D 2.5 TCI	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TERRACAN(HP)	2002	D 2.9 TCI	ENGINE [Engine Control]	x	x	x	x	x	0032, 0058, 0075
Europe/General	TERRACAN(HP)	2002	D 2.9 TCI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2002	D 2.9 TCI	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2002	D 2.9 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2002	D 2.9 TCI	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2002	D 2.9 TCI	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2002	D 2.9 TCI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TERRACAN(HP)	2001	D 2.5 TCI	ENGINE [Engine Control]		x	x	x	x	
Europe/General	TERRACAN(HP)	2001	D 2.5 TCI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2001	D 2.5 TCI	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2001	D 2.5 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2001	D 2.5 TCI	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2001	D 2.5 TCI	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2001	D 2.5 TCI	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TERRACAN(HP)	2001	D 2.9 TCI	ENGINE [Engine Control]	x	x	x	x	x	0032, 0058, 0075

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TERRACAN(HP)	2001	D 2.9 TCI	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2001	D 2.9 TCI	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2001	D 2.9 TCI	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2001	D 2.9 TCI	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2001	D 2.9 TCI	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2001	D 2.9 TCI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	AIRBAG [AIRBAG]	x	x	x			
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	4WD [TOD]		x	x			
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TRAJET XG(FO)	2007	D 2.0 TCI-D	ENGINE [VGT]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2007	D 2.0 TCI-D	ENGINE [WGT]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2007	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2007	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2007	D 2.0 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2007	D 2.0 TCI-D	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2007	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2007	D 2.0 TCI-D	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2007	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TRAJET XG(FO)	2007	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	TRAJET XG(FO)	2007	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	TRAJET XG(FO)	2007	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	TRAJET XG(FO)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2007	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2007	G 2.0 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2007	G 2.0 DOHC	AIRBAG []	x	x	x			
Europe/General	TRAJET XG(FO)	2007	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TRAJET XG(FO)	2007	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113
Europe/General	TRAJET XG(FO)	2007	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TRAJET XG(FO)	2007	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TRAJET XG(FO)	2007	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TRAJET XG(FO)	2007	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2007	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2007	G 2.7 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2007	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2007	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TRAJET XG(FO)	2006	D 2.0 TCI-D	ENGINE [VGT]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2006	D 2.0 TCI-D	ENGINE [WGT]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2006	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2006	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2006	D 2.0 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2006	D 2.0 TCI-D	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2006	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2006	D 2.0 TCI-D	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2006	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TRAJET XG(FO)	2006	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	TRAJET XG(FO)	2006	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	TRAJET XG(FO)	2006	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	TRAJET XG(FO)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2006	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2006	G 2.0 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2006	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TRAJET XG(FO)	2006	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113
Europe/General	TRAJET XG(FO)	2006	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TRAJET XG(FO)	2006	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TRAJET XG(FO)	2006	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2006	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2006	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2006	G 2.7 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2006	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2006	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TRAJET XG(FO)	2005	D 2.0 TCI-D	ENGINE [VGT]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2005	D 2.0 TCI-D	ENGINE [WGT]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2005	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2005	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2005	D 2.0 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2005	D 2.0 TCI-D	ABS [Anti - Lock Brake]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TRAJET XG(FO)	2005	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2005	D 2.0 TCI-D	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2005	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TRAJET XG(FO)	2005	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	TRAJET XG(FO)	2005	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	TRAJET XG(FO)	2005	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	TRAJET XG(FO)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2005	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2005	G 2.0 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2005	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TRAJET XG(FO)	2005	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113
Europe/General	TRAJET XG(FO)	2005	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TRAJET XG(FO)	2005	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TRAJET XG(FO)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2005	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2005	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2005	G 2.7 DOHC	ABS [Anti - Lock Brake]	x	x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2005	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2005	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TRAJET XG(FO)	2004	D 2.0 TCI-D	ENGINE [VGT]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2004	D 2.0 TCI-D	ENGINE [WGT]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2004	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2004	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2004	D 2.0 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2004	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2004	D 2.0 TCI-D	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2004	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Melco)	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Melco)	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Melco)	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Melco)	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Melco)	AT [Automatic Transaxle]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Melco)	ABS [Anti - Lock Brake]		×	×	×	×	0062
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Melco)	AIRBAG [Airbag Control]	×	×	×			
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Melco)	IMMO [Immobilizer]		×	×	×		0071, 0090, 0091, 0094
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Siemens)	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0113
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Siemens)	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070, 0113
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Siemens)	AT [Automatic Transaxle]	×	×	×	×	×	
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Siemens)	ABS [Anti - Lock Brake]		×	×	×	×	0062
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Siemens)	AIRBAG [Airbag Control]	×	×	×			
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Siemens)	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Siemens)	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0113
Europe/General	TRAJET XG(FO)	2004	G 2.7 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070, 0109, 0113
Europe/General	TRAJET XG(FO)	2004	G 2.7 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0109, 0113
Europe/General	TRAJET XG(FO)	2004	G 2.7 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0109, 0113
Europe/General	TRAJET XG(FO)	2004	G 2.7 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	
Europe/General	TRAJET XG(FO)	2004	G 2.7 DOHC	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	TRAJET XG(FO)	2004	G 2.7 DOHC	ABS [Anti - Lock Brake]		×	×	×	×	0062
Europe/General	TRAJET XG(FO)	2004	G 2.7 DOHC	AIRBAG [Airbag Control]	×	×	×			
Europe/General	TRAJET XG(FO)	2004	G 2.7 DOHC	IMMO [Immobilizer]		×	×	×		0071, 0090, 0091, 0094
Europe/General	TRAJET XG(FO)	2003	D 2.0 TCI-D	ENGINE [VGT]	×	×	×	×	×	
Europe/General	TRAJET XG(FO)	2003	D 2.0 TCI-D	ENGINE [WGT]	×	×	×	×	×	
Europe/General	TRAJET XG(FO)	2003	D 2.0 TCI-D	AT [Automatic Transaxle]	×	×	×	×	×	
Europe/General	TRAJET XG(FO)	2003	D 2.0 TCI-D	AT [Automatic Transaxle]		×	×	×	×	
Europe/General	TRAJET XG(FO)	2003	D 2.0 TCI-D	ABS [Anti - Lock Brake]		×	×	×	×	0062
Europe/General	TRAJET XG(FO)	2003	D 2.0 TCI-D	AIRBAG [Airbag Control]	×	×	×			
Europe/General	TRAJET XG(FO)	2003	D 2.0 TCI-D	BHEATER [Fuel Fired Heater]		×	×	×	×	
Europe/General	TRAJET XG(FO)	2003	D 2.0 TCI-D	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	TRAJET XG(FO)	2003	G 2.0 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	
Europe/General	TRAJET XG(FO)	2003	G 2.0 DOHC	ENGINE [Leaded All]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TRAJET XG(FO)	2003	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2003	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2003	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2003	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2003	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	ENGINE [Unleaded (Zr O2S) GEN]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	ENGINE [Unleaded (Zr O2S) EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	ENGINE [Unleaded (Ti O2S) EOBD]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	ENGINE [Unleaded (Ti O2S) GEN]	x	x	x	x	x	0015, 0113
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TRAJET XG(FO)	2002	D 2.0 TCI-D	ENGINE [WGT]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2002	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2002	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2002	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2002	D 2.0 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2002	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2002	D 2.0 TCI-D	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2002	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TRAJET XG(FO)	2002	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2002	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2002	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2002	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2002	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2002	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2002	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2002	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TRAJET XG(FO)	2002	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	TRAJET XG(FO)	2002	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	TRAJET XG(FO)	2002	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	TRAJET XG(FO)	2002	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2002	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TRAJET XG(FO)	2002	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2002	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2002	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TRAJET XG(FO)	2001	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2001	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2001	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2001	D 2.0 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2001	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2001	D 2.0 TCI-D	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2001	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TRAJET XG(FO)	2001	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2001	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2001	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2001	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2001	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2001	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2001	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2001	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TRAJET XG(FO)	2001	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	TRAJET XG(FO)	2001	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	TRAJET XG(FO)	2001	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	TRAJET XG(FO)	2001	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2001	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2001	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2001	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2001	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TRAJET XG(FO)	2000	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2000	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2000	D 2.0 TCI-D	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2000	D 2.0 TCI-D	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2000	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2000	D 2.0 TCI-D	BHEATER [Fuel Fired Heater]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2000	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TRAJET XG(FO)	2000	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2000	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2000	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2000	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TRAJET XG(FO)	2000	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2000	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2000	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2000	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TRAJET XG(FO)	2000	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	TRAJET XG(FO)	2000	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	TRAJET XG(FO)	2000	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	TRAJET XG(FO)	2000	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	2000	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	2000	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	2000	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	2000	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TRAJET XG(FO)	1999	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	1999	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	1999	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	1999	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	1999	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	1999	G 2.0 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	1999	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	1999	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TRAJET XG(FO)	1999	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0053, 0110, 0113
Europe/General	TRAJET XG(FO)	1999	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	TRAJET XG(FO)	1999	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	TRAJET XG(FO)	1999	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TRAJET XG(FO)	1999	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
Europe/General	TRAJET XG(FO)	1999	G 2.7 DOHC	ABS [Anti - Lock Brake]		x	x	x	x	0062
Europe/General	TRAJET XG(FO)	1999	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TRAJET XG(FO)	1999	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	ENGINE [Engine Control]	x	x	x	x	x	0002, 0003, 0109
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	ABSESP [ABS / ESP (MGH40)]	x	x	x	x	x	0062
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	ABSESP [ABS / ESP (MGH25)]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	AIRBAG [Airbag Control]	×	×	×			
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	4WD [4WD Control]		×	×	×		
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	4WD [4WD Control]		×	×			
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	BCM [Body Control Module]	×			×	×	
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	CODE [Transmitter Code Saving]				×		0026
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	ENGINE [Engine Control]	×	×	×	×	×	0002, 0003, 0109
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	AT [Automatic Transaxle]	×	×	×	×	×	
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	ABSESP [ABS / ESP (MGH40)]	×	×	×	×	×	0062
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	ABSESP [ABS / ESP (MGH25)]	×	×	×	×	×	0062
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	AIRBAG [Airbag Control]	×	×	×			
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	4WD [4WD Control]		×	×	×		
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	4WD [4WD Control]		×	×			
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	TPMS [Tire Pressure Monitoring]	×	×	×		×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	BCM [Body Control Module]	x			x	x	
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	ABSESP [ABS / ESP (MGH - 40)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	ABSESP [ABS / ESP (MGH - 25)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	4WD [4WD Control]		x	x	x		
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0109, 0113, 0143
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	ABSESP [ABS / ESP (MGH - 40)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	ABSESP [ABS / ESP (MGH - 25)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	4WD [4WD Control]		x	x	x		
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	4WD [4WD Control]		x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	0015, 0053, 0109, 0110, 0113
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	ABSESP [ABS / ESP (MGH - 40)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	ABSESP [ABS / ESP (MGH - 25)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	4WD [4WD Control]		x	x	x		
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	ABSESP [ABS / ESP (MGH - 40)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	ABSESP [ABS / ESP (MGH - 25)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	4WD [4WD Control]		x	x	x		
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0109, 0113, 0143
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ABSESP [ABS / ESP (MGH - 40)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ABSESP [ABS / ESP (MGH - 25)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	4WD [4WD Control]		x	x	x		
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	0015, 0053, 0109, 0110, 0113
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	ABSESP [ABS / ESP (MGH - 40)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	ABSESP [ABS / ESP (MGH - 25)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	4WD [4WD Control]		x	x	x		
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	ABSESP [ABS / ESP (MGH - 40)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	ABSESP [ABS / ESP (MGH - 25)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	4WD [4WD Control]		x	x	x		
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0109, 0113, 0143
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0109, 0113, 0143
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0109, 0113, 0143
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0109, 0113, 0143
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ABSESP [ABS / ESP (MGH - 40)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ABSESP [ABS / ESP (MGH - 25)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	4WD [4WD Control]		x	x	x		
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	0015, 0053, 0109, 0110, 0113
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	ABSESP [ABS / ESP (MGH - 40)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	ABSESP [ABS / ESP (MGH - 25)]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	4WD [4WD Control]		x	x	x		
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	4WD [4WD Control]		x	x	x		
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0070, 0113
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0113
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0113
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0053, 0109, 0113, 0143
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	4WD [4WD Control]		x	x	x		
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	0015, 0053, 0109, 0110, 0113
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	4WD [4WD Control]		x	x	x		
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	0015, 0053, 0109, 0110, 0113
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0113
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0113
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0113
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		x	x	x	x	0015, 0053, 0109, 0110, 0113
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	ABSESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	4WD [4WD Control]		x	x			
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	ETACS [ETACS]	x			x	x	
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	ENGINE [Engine Control]	x	x	x	x	x	0034, 0059
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	ENGINE [Engine Control]	x	x	x	x	x	0034, 0059
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	0059
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	0059
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	ENGINE [Low Power (CPF+)]	x	x	x	x	x	0059
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	ENGINE [Low power (CPF -)]	x	x	x	x	x	0059
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	ENGINE [High Power (CPF+)]	x	x	x	x	x	0059
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	ENGINE [High Power (CPF -)]	x	x	x	x	x	0059
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	ENGINE [Engine Control]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x		0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x		0015, 0070, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	ENGINE [Low Power (CPF+)]	x	x	x	x	x	0059
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	ENGINE [Low power (CPF -)]	x	x	x	x	x	0059
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	ENGINE [High Power (CPF+)]	x	x	x	x	x	0059
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	ENGINE [High Power (CPF -)]	x	x	x	x	x	0059
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	SPAS [Smart Parking Assist System]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	ENGINE [Low power (CPF+)]	x	x	x	x	x	0059
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	ENGINE [Low power (CPF -)]	x	x	x	x	x	0059
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	ENGINE [High Power (CPF+)]	x	x	x	x	x	0059
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	ENGINE [High Power (CPF -)]	x	x	x	x	x	0059

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	BCM [Smart Junction Block]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0113, 0143
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	ESP [Electronic Stability Program]	x	x	x	x	x	0062, 0085
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	AIRCON [Air Conditioner (EURO)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	AIRCON [Air Conditioner (GEN)]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	EPS [Power Steering]	x	x	x	x		
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	SMK [Smart Key Code Saving]				x		
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	SMK [Power Distribution Module]	x	x	x	x	x	0042
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	BCM [Smart Junction Block]	x	x	x	x	x	
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	AT [Automatic Transaxle (DCT)]	x	x	x	x	x	0028
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	BCM [Instrument Panel Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	BCM [Instrument Panel Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	BCM [Instrument Panel Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	AT [Automatic Transaxle (DCT)]	x	x	x	x	x	0028
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	BCM [Instrument Panel Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	BCM [Instrument Panel Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	BCM [Instrument Panel Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	AT [Automatic Transaxle (DCT)]	x	x	x	x	x	0028
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	BCM [Instrument Panel Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	BCM [Instrument Panel Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	BCM [Instrument Panel Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	AT [Automatic Transaxle (DCT)]	x	x	x	x	x	0028
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	BCM [Instrument Panel Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	BCM [Instrument Panel Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	AT [Automatic Transaxle (DCT)]	x	x	x	x	x	0028
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	BCM [Instrument Panel Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062, 0085
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x			
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	IMMO [Immobilizer]		x	x	x		0035, 0084, 0105, 0135
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	BCM [Cluster Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	BCM [Instrument Panel Module]	x	x	x	x	x	
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	ENGINE [Engine Control]	x	x	x	x	x	0034, 0059
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	ESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	AIRBAG [Airbag Control]	x	x	x			
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	EPS [Electronic Power Steering]		x	x	x		
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	4WD [4WD Control]	x	x	x	x		0009, 0136
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	PTG [Power Tailgate]	x	x	x	x		
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	SMK [Smart Key Code Saving]				x		
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	BCM [IMS]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	BCM [User Option]				x		
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	BCM [Body Control Module]	x	x	x		x	
Europe/General	VERACRUZ/ix55(E N)	2013	D 3.0 TCI-S2	CODE [Transmitter Code Saving]				x		
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0145
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	ESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	4WD [4WD Control]		x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	PTG [Power Tailgate]	x	x	x	x		
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	SMK [Smart Key Code Saving]				x		
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	BCM [User Option]				x		
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	BCM [IMS]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	BCM [Body Control Module]	×	×	×		×	
Europe/General	VERACRUZ/ix55(E N)	2013	G 3.8 DOHC	CODE [Transmitter Code Saving]				×		
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	ENGINE [Engine Control]	×	×	×	×	×	0034, 0059
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	AT [Automatic Transaxle]	×	×	×	×	×	0114
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	ESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	AIRBAG [Airbag Control]	×	×	×			
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	EPS [Electronic Power Steering]		×	×	×		
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	4WD [4WD Control]	×	×	×	×		0009, 0136
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	PTG [Power Tailgate]	×	×	×	×		
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	SMK [Smart Key Code Saving]				×		
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	SMK [Smart Key Unit]	×	×	×		×	0089
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	BCM [Assist Door Module]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	BCM [IMS]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	BCM [User Option]				x		
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	BCM [Body Control Module]	x	x	x		x	
Europe/General	VERACRUZ/ix55(E N)	2012	D 3.0 TCI-S2	CODE [Transmitter Code Saving]				x		
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0145
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	ESP [ABS / ESP]	x	x	x	x	x	0062
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	4WD [4WD Control]		x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	PTG [Power Tailgate]	x	x	x	x		
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	SMK [Smart Key Code Saving]				×		
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	SMK [Smart Key Unit]	×	×	×		×	0089
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	BCM [Tilt / Telescope]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	BCM [User Option]				×		
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	BCM [IMS]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	BCM [Body Control Module]	×	×	×		×	
Europe/General	VERACRUZ/ix55(E N)	2012	G 3.8 DOHC	CODE [Transmitter Code Saving]				×		
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	ENGINE [Engine Control (CPF -)]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	ENGINE [Engine Control (CPF+)]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0145
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	ESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	AIRBAG [Airbag Control]	×	×	×			
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	EPS [Electronic Power Steering]		×	×	×		
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	4WD [4WD Control]		×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	TPMS [Tire Pressure Monitoring]	×	×	×		×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	PTG [Power Tailgate]	x	x	x	x		
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	SMK [Smart Key Code Saving]				x		
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	BCM [Body Control Module]	x	x	x		x	
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	BCM [User Option]				x		
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	BCM [IMS]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2011	D 3.0 TCI-S	CODE [Transmitter Code Saving]				x		
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	ENGINE [Unleaded GEN]	x	x	x	x	x	0015, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0145
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	ESP [ABS / ESP]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	AIRBAG [Airbag Control]	x	x	x			
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	EPS [Electronic Power Steering]		x	x	x		
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	4WD [4WD Control]		x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	PTG [Power Tailgate]	x	x	x	x		
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	SMK [Smart Key Code Saving]				x		
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	BCM [User Option]				x		
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	BCM [IMS]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
Europe/General	VERACRUZ/ix55(E N)	2011	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	ENGINE [Engine Control (CPF+)]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0145
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	ESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	AIRBAG [Airbag Control]	×	×	×			
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	EPS [Electronic Power Steering]		×	×	×		
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	4WD [4WD Control]		×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	PTG [Power Tailgate]	×	×	×	×		
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	SMK [Smart Key Unit]	×	×	×		×	0089
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	SMK [Smart Key Code Saving]				×		
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	BCM [Body Control Module]	×	×	×		×	
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	BCM [Tilt / Telescope]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	BCM [User Option]				×		
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	BCM [IMS]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	BCM [Assist Door Module]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2010	D 3.0 TCI-S	CODE [Transmitter Code Saving]				×		
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0015, 0053, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0145
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	ESP [ABS / ESP]	×	×	×	×	×	0062
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	AIRBAG [Airbag Control]	×	×	×			
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	EPS [Electronic Power Steering]		×	×	×		
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	4WD [4WD Control]		×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	TPMS [Tire Pressure Monitoring]	×	×	×		×	
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	PTG [Power Tailgate]	×	×	×	×		
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	SMK [Smart Key Code Saving]				×		
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	SMK [Smart Key Unit]	×	×	×		×	0089

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	BCM [User Option]				x		
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	BCM [IMS]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
Europe/General	VERACRUZ/ix55(E N)	2010	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	ENGINE [Engine Control (CPF -)]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	ENGINE [Engine Control (CPF+)]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0145
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	AIRBAG [Airbag Control]	x	x	x			
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	EPS [Electronic Power Steering]		x	x	x		
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	4WD [4WD Control]		x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	PTG [Power Tailgate]	x	x	x	x		
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	SMK [Smart Key Unit]	×	×	×		×	0089
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	SMK [Smart Key Code Saving]				×		
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	BCM [Body Control Module]	×	×	×		×	
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	BCM [Tilt / Telescope]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	BCM [User Option]				×		
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	BCM [IMS]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2009	D 3.0 TCI-S	CODE [Transmitter Code Saving]				×		
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0015, 0053, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0145
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	ESP [Electronic Stability Program]	×	×	×	×	×	0062
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	AIRBAG [Airbag Control]	×	×	×			
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	EPS [Electronic Power Steering]		×	×	×		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	4WD [4WD Control]		x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	TPMS [Tire Pressure Monitoring]	x	x	x		x	
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	PTG [Power Tailgate]	x	x	x	x		
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	SMK [Smart Key Code Saving]				x		
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	BCM [User Option]				x		
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	BCM [IMS]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
Europe/General	VERACRUZ/ix55(E N)	2009	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0145
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	ESP [Electronic Stability Program]	x	x	x	x	x	0062
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	AIRBAG [Airbag Control]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	EPS [Electronic Power Steering]		x	x	x		
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	4WD [4WD Control]		x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	AHLS [Auto Headlamp Leveling]	x	x	x	x		0083, 0124
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	PTG [Power Tailgate]	x	x	x	x		
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	IMMO [Immobilizer]				x		0035, 0084, 0105, 0135
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	SMK [Smart Key Code Saving]				x		
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	SMK [Smart Key Unit]	x	x	x		x	0089
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	BCM [IMS]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	BCM [User Option]				x		
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	BCM [Body Control Module]	x	x	x		x	
Europe/General	VERACRUZ/ix55(E N)	2008	D 3.0 TCI-S	CODE [Transmitter Code Saving]				x		
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	x	x	x	x	x	0015, 0053, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	ENGINE [Unleaded EOBD]	x	x	x	x	x	0015, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	ENGINE [Leaded All]	x	x	x	x	x	0015, 0070, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0145
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	ESP [Electronic Stability Program]	×	×	×	×	×	0062
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	AIRBAG [Airbag Control]	×	×	×			
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	EPS [Electronic Power Steering]		×	×	×		
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	4WD [4WD Control]		×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	PTG [Power Tailgate]	×	×	×	×		
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	SMK [Smart Key Unit]	×	×	×		×	0089
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	SMK [Smart Key Code Saving]				×		
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	BCM [Body Control Module]	×	×	×		×	
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	BCM [Tilt / Telescope]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	BCM [User Option]				×		
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	BCM [IMS]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	BCM [Driver Door Module]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2008	G 3.8 DOHC	CODE [Transmitter Code Saving]				×		
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	ENGINE [Engine Control]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0145
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	ESP [Electronic Stability Program]	×	×	×	×	×	0062
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	AIRBAG [Airbag Control]	×	×	×			
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	EPS [Electronic Power Steering]		×	×	×		
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	4WD [4WD Control]		×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	PTG [Power Tailgate]	×	×	×	×		
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	SMK [Smart Key Code Saving]				×		
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	SMK [Smart Key Unit]	×	×	×		×	0089
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	BCM [Driver Door Module]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	BCM [Assist Door Module]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	BCM [IMS]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	BCM [User Option]				×		
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	BCM [Tilt / Telescope]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	BCM [Body Control Module]	×	×	×		×	
Europe/General	VERACRUZ/ix55(E N)	2007	D 3.0 TCI-S	CODE [Transmitter Code Saving]				×		
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	×	×	×	×	×	0015, 0053, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	ENGINE [Unleaded EOBD]	×	×	×	×	×	0015, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	ENGINE [Leaded All]	×	×	×	×	×	0015, 0070, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	ENGINE [Unleaded GEN]	×	×	×	×	×	0015, 0109, 0143
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0145
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	ESP [Electronic Stability Program]	×	×	×	×	×	0062
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	AIRBAG [Airbag Control]	×	×	×			
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	EPS [Electronic Power Steering]		×	×	×		
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	4WD [4WD Control]		×	×	×	×	
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	AHLS [Auto Headlamp Leveling]	×	×	×	×		0083, 0124
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	PTG [Power Tailgate]	×	×	×	×		
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0127, 0135
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	IMMO [Immobilizer]				×		0035, 0084, 0105, 0135
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	SMK [Smart Key Unit]	×	×	×		×	0089
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	SMK [Smart Key Code Saving]				×		
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	BCM [Body Control Module]	×	×	×		×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	BCM [Tilt / Telescope]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	BCM [User Option]				x		
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	BCM [IMS]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	BCM [Assist Door Module]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	BCM [Driver Door Module]	x	x	x	x	x	
Europe/General	VERACRUZ/ix55(E N)	2007	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	EPS [Power Steering]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	EPS [Power Steering]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	x			x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	EPS [Power Steering]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	EPS [Power Steering]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	EPS [Power Steering]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	EPS [Power Steering]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	EPS [Power Steering]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	EPS [Power Steering]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	0058
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	EPS [Power Steering]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	ENGINE [Engine Control]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	EPS [Power Steering]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				x		0026
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	EPS [Power Steering]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	CODE [Transmitter Code Saving]				x		0026
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	ENGINE [Leaded All]	x	x	x	x		0040, 0069, 0070, 0109, 0143
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	ENGINE [Unleaded All]	x	x	x	x		0040, 0069, 0109, 0143
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	ABS [Anti - Lock Brake]	x	x	x	x	x	0062, 0085
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	EPS [Power Steering]	x	x	x	x	x	
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	IMMO [Immobilizer]				x		0035, 0084, 0105, 0127, 0135
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0042, 0043, 0056, 0118
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	BCM [Body Control Module (SMK+)]	x			x	x	
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	BCM [Body Control Module (SMK -)]	x			x	x	
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				x		0026
US	ACCENT(LC)	2005	G 1.5 SOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ACCENT(LC)	2005	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
US	ACCENT(LC)	2005	G 1.5 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ACCENT(LC)	2005	G 1.5 SOHC	AIRBAG [Airbag Control]	x	x	x			
US	ACCENT(LC)	2005	G 1.5 SOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(LC)	2005	G 1.6 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	ACCENT(LC)	2005	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	ACCENT(LC)	2005	G 1.6 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ACCENT(LC)	2005	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	ACCENT(LC)	2005	G 1.6 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(LC)	2004	G 1.5 SOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	ACCENT(LC)	2004	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
US	ACCENT(LC)	2004	G 1.5 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ACCENT(LC)	2004	G 1.5 SOHC	AIRBAG [Airbag Control]	x	x	x			
US	ACCENT(LC)	2004	G 1.5 SOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(LC)	2004	G 1.6 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	ACCENT(LC)	2004	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	ACCENT(LC)	2004	G 1.6 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ACCENT(LC)	2004	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	ACCENT(LC)	2004	G 1.6 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(LC)	2003	G 1.5 SOHC	ENGINE [Engine Control]	x	x	x	x		0053
US	ACCENT(LC)	2003	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
US	ACCENT(LC)	2003	G 1.5 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ACCENT(LC)	2003	G 1.5 SOHC	AIRBAG [Airbag Control]	x	x	x			
US	ACCENT(LC)	2003	G 1.5 SOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(LC)	2003	G 1.6 DOHC	ENGINE [Engine Control]	x	x	x	x		0053
US	ACCENT(LC)	2003	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	ACCENT(LC)	2003	G 1.6 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ACCENT(LC)	2003	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	ACCENT(LC)	2003	G 1.6 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(LC)	2002	G 1.5 SOHC	ENGINE [Engine Control]	x	x	x	x		0053
US	ACCENT(LC)	2002	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
US	ACCENT(LC)	2002	G 1.5 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ACCENT(LC)	2002	G 1.5 SOHC	AIRBAG [Airbag Control]	x	x	x			
US	ACCENT(LC)	2002	G 1.5 SOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(LC)	2002	G 1.6 DOHC	ENGINE [Engine Control]	x	x	x	x		0053
US	ACCENT(LC)	2002	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	ACCENT(LC)	2002	G 1.6 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ACCENT(LC)	2002	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	ACCENT(LC)	2002	G 1.6 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(LC)	2001	G 1.5 SOHC	ENGINE [Engine Control]	x	x	x	x		0053
US	ACCENT(LC)	2001	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
US	ACCENT(LC)	2001	G 1.5 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ACCENT(LC)	2001	G 1.5 SOHC	AIRBAG [Airbag Control]	x	x	x			
US	ACCENT(LC)	2001	G 1.5 SOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(LC)	2001	G 1.6 DOHC	ENGINE [Engine Control]	x	x	x	x		0053
US	ACCENT(LC)	2001	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	ACCENT(LC)	2001	G 1.6 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ACCENT(LC)	2001	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	ACCENT(LC)	2001	G 1.6 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(LC)	2000	G 1.5 SOHC	ENGINE [Engine Control]	x	x	x	x		0053
US	ACCENT(LC)	2000	G 1.5 SOHC	AT [Automatic Transaxle]		x	x	x	x	
US	ACCENT(LC)	2000	G 1.5 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ACCENT(LC)	2000	G 1.5 SOHC	AIRBAG [Airbag Control]	x	x	x			
US	ACCENT(LC)	2000	G 1.5 SOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(LC)	2000	G 1.6 DOHC	ENGINE [Engine Control]	x	x	x	x		0053
US	ACCENT(LC)	2000	G 1.6 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	ACCENT(LC)	2000	G 1.6 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ACCENT(LC)	2000	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	ACCENT(LC)	2000	G 1.6 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(MC)	2011	G 1.6 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	ACCENT(MC)	2011	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ACCENT(MC)	2011	G 1.6 DOHC	ABS [Anti - Lock Brake System]	x	x	x	x	x	0062
US	ACCENT(MC)	2011	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
US	ACCENT(MC)	2011	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ACCENT(MC)	2011	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
US	ACCENT(MC)	2011	G 1.6 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ACCENT(MC)	2011	G 1.6 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ACCENT(MC)	2011	G 1.6 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(MC)	2010	G 1.6 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	ACCENT(MC)	2010	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ACCENT(MC)	2010	G 1.6 DOHC	ABS [Anti - Lock Brake System]	x	x	x	x	x	0062
US	ACCENT(MC)	2010	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ACCENT(MC)	2010	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ACCENT(MC)	2010	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
US	ACCENT(MC)	2010	G 1.6 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ACCENT(MC)	2010	G 1.6 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ACCENT(MC)	2010	G 1.6 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(MC)	2009	G 1.6 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	ACCENT(MC)	2009	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ACCENT(MC)	2009	G 1.6 DOHC	ABS [ABS (MGH - 25)]	x	x	x	x	x	0062
US	ACCENT(MC)	2009	G 1.6 DOHC	ABS [ABS (MGH - 40)]	x	x	x	x	x	0062
US	ACCENT(MC)	2009	G 1.6 DOHC	ABS [ABS (MGH - 60)]	x	x	x	x	x	0062
US	ACCENT(MC)	2009	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
US	ACCENT(MC)	2009	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ACCENT(MC)	2009	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
US	ACCENT(MC)	2009	G 1.6 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ACCENT(MC)	2009	G 1.6 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ACCENT(MC)	2009	G 1.6 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(MC)	2008	G 1.6 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	ACCENT(MC)	2008	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ACCENT(MC)	2008	G 1.6 DOHC	ABS [ABS (MGH - 25)]	x	x	x	x	x	0062
US	ACCENT(MC)	2008	G 1.6 DOHC	ABS [ABS (MGH - 40)]	x	x	x	x	x	0062
US	ACCENT(MC)	2008	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
US	ACCENT(MC)	2008	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ACCENT(MC)	2008	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
US	ACCENT(MC)	2008	G 1.6 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ACCENT(MC)	2008	G 1.6 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ACCENT(MC)	2008	G 1.6 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(MC)	2007	G 1.6 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	ACCENT(MC)	2007	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ACCENT(MC)	2007	G 1.6 DOHC	ABS [Anti - Lock Brake System]	x	x	x	x	x	0062
US	ACCENT(MC)	2007	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
US	ACCENT(MC)	2007	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ACCENT(MC)	2007	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ACCENT(MC)	2007	G 1.6 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ACCENT(MC)	2007	G 1.6 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ACCENT(MC)	2007	G 1.6 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(MC)	2006	G 1.6 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	ACCENT(MC)	2006	G 1.6 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ACCENT(MC)	2006	G 1.6 DOHC	ABS [Anti - Lock Brake System]	x	x	x	x	x	0062
US	ACCENT(MC)	2006	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
US	ACCENT(MC)	2006	G 1.6 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ACCENT(MC)	2006	G 1.6 DOHC	EPS [Electronic Power Steering]	x	x	x	x		
US	ACCENT(MC)	2006	G 1.6 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ACCENT(RB)	2017	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	ACCENT(RB)	2017	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ACCENT(RB)	2017	G 1.6 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	ACCENT(RB)	2017	G 1.6 GDI	ODS [PODS - F]	x	x	x			
US	ACCENT(RB)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ACCENT(RB)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ACCENT(RB)	2017	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ACCENT(RB)	2017	G 1.6 GDI	EPS [Power Steering]	x	x	x	x	x	
US	ACCENT(RB)	2017	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
US	ACCENT(RB)	2017	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
US	ACCENT(RB)	2017	G 1.6 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ACCENT(RB)	2017	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	ACCENT(RB)	2017	G 1.6 GDI	BCM [Body Control Module]	x			x	x	
US	ACCENT(RB)	2017	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
US	ACCENT(RB)	2016	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	ACCENT(RB)	2016	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ACCENT(RB)	2016	G 1.6 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	ACCENT(RB)	2016	G 1.6 GDI	ODS [PODS - F]	x	x	x			
US	ACCENT(RB)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ACCENT(RB)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ACCENT(RB)	2016	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ACCENT(RB)	2016	G 1.6 GDI	EPS [Power Steering]	x	x	x	x	x	
US	ACCENT(RB)	2016	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
US	ACCENT(RB)	2016	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
US	ACCENT(RB)	2016	G 1.6 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ACCENT(RB)	2016	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	ACCENT(RB)	2016	G 1.6 GDI	BCM [Body Control Module]	x			x	x	
US	ACCENT(RB)	2016	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
US	ACCENT(RB)	2015	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	ACCENT(RB)	2015	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ACCENT(RB)	2015	G 1.6 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	ACCENT(RB)	2015	G 1.6 GDI	ODS [PODS - F]	x	x	x			
US	ACCENT(RB)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ACCENT(RB)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ACCENT(RB)	2015	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ACCENT(RB)	2015	G 1.6 GDI	EPS [Power Steering]	x	x	x	x	x	
US	ACCENT(RB)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
US	ACCENT(RB)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
US	ACCENT(RB)	2015	G 1.6 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ACCENT(RB)	2015	G 1.6 GDI	BCM [Body Control Module]	x			x	x	
US	ACCENT(RB)	2015	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
US	ACCENT(RB)	2014	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	ACCENT(RB)	2014	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ACCENT(RB)	2014	G 1.6 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	ACCENT(RB)	2014	G 1.6 GDI	ODS [PODS - F]	x	x	x			
US	ACCENT(RB)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ACCENT(RB)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ACCENT(RB)	2014	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ACCENT(RB)	2014	G 1.6 GDI	EPS [Power Steering]	x	x	x	x	x	
US	ACCENT(RB)	2014	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ACCENT(RB)	2014	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
US	ACCENT(RB)	2014	G 1.6 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ACCENT(RB)	2014	G 1.6 GDI	BCM [Body Control Module]	x			x	x	
US	ACCENT(RB)	2014	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
US	ACCENT(RB)	2013	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	ACCENT(RB)	2013	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ACCENT(RB)	2013	G 1.6 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	ACCENT(RB)	2013	G 1.6 GDI	ODS [PODS - F]	x	x	x			
US	ACCENT(RB)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ACCENT(RB)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ACCENT(RB)	2013	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ACCENT(RB)	2013	G 1.6 GDI	EPS [Power Steering]	x	x	x	x	x	
US	ACCENT(RB)	2013	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ACCENT(RB)	2013	G 1.6 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ACCENT(RB)	2013	G 1.6 GDI	BCM [Body Control Module]	x	x		x	x	
US	ACCENT(RB)	2013	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
US	ACCENT(RB)	2012	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	ACCENT(RB)	2012	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ACCENT(RB)	2012	G 1.6 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	ACCENT(RB)	2012	G 1.6 GDI	ODS [PODS - F]	x	x	x			
US	ACCENT(RB)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ACCENT(RB)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ACCENT(RB)	2012	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ACCENT(RB)	2012	G 1.6 GDI	EPS [Power Steering]	x	x	x	x	x	
US	ACCENT(RB)	2012	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ACCENT(RB)	2012	G 1.6 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ACCENT(RB)	2012	G 1.6 GDI	BCM [Body Control Module]	x			x	x	
US	ACCENT(RB)	2012	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
US	ACCENT(X3)	1999	G 1.5 SOHC/DOHC	ENGINE [Engine Control]		x	x	x		
US	ACCENT(X3)	1999	G 1.5 SOHC/DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ACCENT(X3)	1999	G 1.5 SOHC/DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ACCENT(X3)	1999	G 1.5 SOHC/DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	ACCENT(X3)	1998	G 1.5 SOHC/DOHC	ENGINE [Engine Control]		x	x	x		
US	ACCENT(X3)	1998	G 1.5 SOHC/DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ACCENT(X3)	1998	G 1.5 SOHC/DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ACCENT(X3)	1998	G 1.5 SOHC/DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	ACCENT(X3)	1997	G 1.5 SOHC/DOHC	ENGINE [Engine Control]		x	x	x		
US	ACCENT(X3)	1997	G 1.5 SOHC/DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ACCENT(X3)	1997	G 1.5 SOHC/DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ACCENT(X3)	1997	G 1.5 SOHC/DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	ACCENT(X3)	1996	G 1.5 SOHC/DOHC	ENGINE [Engine Control]		x	x	x		
US	ACCENT(X3)	1996	G 1.5 SOHC/DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ACCENT(X3)	1996	G 1.5 SOHC/DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ACCENT(X3)	1996	G 1.5 SOHC/DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	ACCENT(X3)	1995	G 1.5 SOHC/DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ACCENT(X3)	1995	G 1.5 SOHC/DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ACCENT(X3)	1995	G 1.5 SOHC/DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	AZERA(HG)	2017	G 3.3 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0143
US	AZERA(HG)	2017	G 3.3 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	AZERA(HG)	2017	G 3.3 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0014, 0037, 0060, 0095, 0096

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	AZERA(HG)	2017	G 3.3 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	AZERA(HG)	2017	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	AZERA(HG)	2017	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	AZERA(HG)	2017	G 3.3 GDI	ODS [PODS - F]	x	x	x			
US	AZERA(HG)	2017	G 3.3 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(HG)	2017	G 3.3 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	AZERA(HG)	2017	G 3.3 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	AZERA(HG)	2017	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	AZERA(HG)	2017	G 3.3 GDI	MCS [Multi - View Camera System]	x	x	x	x	x	
US	AZERA(HG)	2017	G 3.3 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	AZERA(HG)	2017	G 3.3 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		
US	AZERA(HG)	2017	G 3.3 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
US	AZERA(HG)	2017	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	AZERA(HG)	2017	G 3.3 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	AZERA(HG)	2017	G 3.3 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	AZERA(HG)	2017	G 3.3 GDI	AMP [Amplifier]						0005
US	AZERA(HG)	2017	G 3.3 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	AZERA(HG)	2017	G 3.3 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(HG)	2017	G 3.3 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	AZERA(HG)	2017	G 3.3 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(HG)	2017	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	x	x	x	x		
US	AZERA(HG)	2017	G 3.3 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	AZERA(HG)	2017	G 3.3 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	AZERA(HG)	2017	G 3.3 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
US	AZERA(HG)	2017	G 3.3 GDI	TMU [Telematics Unit]	x	x	x			
US	AZERA(HG)	2017	G 3.3 GDI	CODE [Transmitter Code Saving]				x		0026
US	AZERA(HG)	2016	G 3.3 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0143
US	AZERA(HG)	2016	G 3.3 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	AZERA(HG)	2016	G 3.3 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0014, 0037, 0060, 0095, 0096
US	AZERA(HG)	2016	G 3.3 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	AZERA(HG)	2016	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	AZERA(HG)	2016	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	AZERA(HG)	2016	G 3.3 GDI	ODS [PODS - F]	x	x	x			
US	AZERA(HG)	2016	G 3.3 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(HG)	2016	G 3.3 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	AZERA(HG)	2016	G 3.3 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	AZERA(HG)	2016	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	AZERA(HG)	2016	G 3.3 GDI	MCS [Multi - View Camera System]	x	x	x	x	x	
US	AZERA(HG)	2016	G 3.3 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	AZERA(HG)	2016	G 3.3 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		
US	AZERA(HG)	2016	G 3.3 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
US	AZERA(HG)	2016	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	AZERA(HG)	2016	G 3.3 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	AZERA(HG)	2016	G 3.3 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	AZERA(HG)	2016	G 3.3 GDI	AMP [Amplifier]						0005
US	AZERA(HG)	2016	G 3.3 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	AZERA(HG)	2016	G 3.3 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(HG)	2016	G 3.3 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	AZERA(HG)	2016	G 3.3 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(HG)	2016	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	x	x	x	x		
US	AZERA(HG)	2016	G 3.3 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	AZERA(HG)	2016	G 3.3 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	AZERA(HG)	2016	G 3.3 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
US	AZERA(HG)	2016	G 3.3 GDI	TMU [Telematics Unit]	x	x	x			
US	AZERA(HG)	2016	G 3.3 GDI	CODE [Transmitter Code Saving]				x		0026
US	AZERA(HG)	2015	G 3.3 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0143
US	AZERA(HG)	2015	G 3.3 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	AZERA(HG)	2015	G 3.3 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0014, 0037, 0060, 0095, 0096
US	AZERA(HG)	2015	G 3.3 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	AZERA(HG)	2015	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	AZERA(HG)	2015	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	AZERA(HG)	2015	G 3.3 GDI	ODS [PODS - F]	x	x	x			
US	AZERA(HG)	2015	G 3.3 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(HG)	2015	G 3.3 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	AZERA(HG)	2015	G 3.3 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	AZERA(HG)	2015	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	AZERA(HG)	2015	G 3.3 GDI	MCS [Multi - View Camera System]	x	x	x	x	x	
US	AZERA(HG)	2015	G 3.3 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	AZERA(HG)	2015	G 3.3 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		
US	AZERA(HG)	2015	G 3.3 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
US	AZERA(HG)	2015	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	AZERA(HG)	2015	G 3.3 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	AZERA(HG)	2015	G 3.3 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	AZERA(HG)	2015	G 3.3 GDI	AMP [Amplifier]						0005
US	AZERA(HG)	2015	G 3.3 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	AZERA(HG)	2015	G 3.3 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(HG)	2015	G 3.3 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	AZERA(HG)	2015	G 3.3 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(HG)	2015	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	x	x	x	x		
US	AZERA(HG)	2015	G 3.3 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	AZERA(HG)	2015	G 3.3 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	AZERA(HG)	2015	G 3.3 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
US	AZERA(HG)	2015	G 3.3 GDI	TMU [Telematics Unit]	x	x	x			
US	AZERA(HG)	2015	G 3.3 GDI	CODE [Transmitter Code Saving]				x		0026
US	AZERA(HG)	2014	G 3.3 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0143
US	AZERA(HG)	2014	G 3.3 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	AZERA(HG)	2014	G 3.3 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0014, 0037, 0060, 0095, 0096
US	AZERA(HG)	2014	G 3.3 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	AZERA(HG)	2014	G 3.3 GDI	ODS [PODS - F]	x	x	x			
US	AZERA(HG)	2014	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	AZERA(HG)	2014	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	AZERA(HG)	2014	G 3.3 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(HG)	2014	G 3.3 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	AZERA(HG)	2014	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	AZERA(HG)	2014	G 3.3 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	AZERA(HG)	2014	G 3.3 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	AZERA(HG)	2014	G 3.3 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(HG)	2014	G 3.3 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	AZERA(HG)	2014	G 3.3 GDI	CLU [Cluster Module]	x	x	x			
US	AZERA(HG)	2014	G 3.3 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(HG)	2014	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	x	x	x	x		
US	AZERA(HG)	2014	G 3.3 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	AZERA(HG)	2014	G 3.3 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	AZERA(HG)	2014	G 3.3 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
US	AZERA(HG)	2014	G 3.3 GDI	TMU [Telematics Unit]	x	x	x			
US	AZERA(HG)	2014	G 3.3 GDI	CODE [Transmitter Code Saving]				x		0026
US	AZERA(HG)	2013	G 3.3 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0143
US	AZERA(HG)	2013	G 3.3 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	AZERA(HG)	2013	G 3.3 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0014, 0037, 0060, 0095, 0096
US	AZERA(HG)	2013	G 3.3 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	AZERA(HG)	2013	G 3.3 GDI	ODS [PODS - F]	x	x	x			
US	AZERA(HG)	2013	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	AZERA(HG)	2013	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	AZERA(HG)	2013	G 3.3 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(HG)	2013	G 3.3 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	AZERA(HG)	2013	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	AZERA(HG)	2013	G 3.3 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	AZERA(HG)	2013	G 3.3 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	AZERA(HG)	2013	G 3.3 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(HG)	2013	G 3.3 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	AZERA(HG)	2013	G 3.3 GDI	CLU [Cluster Module]	x	x	x			
US	AZERA(HG)	2013	G 3.3 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(HG)	2013	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	x	x	x	x		
US	AZERA(HG)	2013	G 3.3 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	AZERA(HG)	2013	G 3.3 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	AZERA(HG)	2013	G 3.3 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
US	AZERA(HG)	2013	G 3.3 GDI	TMU [Telematics Unit]	x	x	x			
US	AZERA(HG)	2013	G 3.3 GDI	CODE [Transmitter Code Saving]				x		0026
US	AZERA(HG)	2012	G 3.3 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	AZERA(HG)	2012	G 3.3 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	AZERA(HG)	2012	G 3.3 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0014, 0037, 0060, 0095, 0096
US	AZERA(HG)	2012	G 3.3 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	AZERA(HG)	2012	G 3.3 GDI	ODS [PODS - F]	x	x	x			
US	AZERA(HG)	2012	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	AZERA(HG)	2012	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	AZERA(HG)	2012	G 3.3 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(HG)	2012	G 3.3 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	AZERA(HG)	2012	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	AZERA(HG)	2012	G 3.3 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	AZERA(HG)	2012	G 3.3 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	AZERA(HG)	2012	G 3.3 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(HG)	2012	G 3.3 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	AZERA(HG)	2012	G 3.3 GDI	CLU [Cluster Module]	x	x	x			
US	AZERA(HG)	2012	G 3.3 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(HG)	2012	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	x	x	x	x		
US	AZERA(HG)	2012	G 3.3 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	AZERA(HG)	2012	G 3.3 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	AZERA(HG)	2012	G 3.3 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
US	AZERA(HG)	2012	G 3.3 GDI	TMU [Telematics Unit]	x	x	x			
US	AZERA(HG)	2012	G 3.3 GDI	CODE [Transmitter Code Saving]				x		0026
US	AZERA(TG)	2011	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0140, 0143
US	AZERA(TG)	2011	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	AZERA(TG)	2011	G 3.3 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	AZERA(TG)	2011	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	AZERA(TG)	2011	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(TG)	2011	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	AZERA(TG)	2011	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	AZERA(TG)	2011	G 3.3 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	AZERA(TG)	2011	G 3.3 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	AZERA(TG)	2011	G 3.3 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	AZERA(TG)	2011	G 3.3 DOHC	BCM [Body Control Module]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	AZERA(TG)	2011	G 3.3 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(TG)	2011	G 3.3 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(TG)	2011	G 3.3 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	AZERA(TG)	2011	G 3.3 DOHC	OPTION [User Option]				x		
US	AZERA(TG)	2011	G 3.3 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	AZERA(TG)	2011	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		
US	AZERA(TG)	2011	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0140, 0143
US	AZERA(TG)	2011	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	AZERA(TG)	2011	G 3.8 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	AZERA(TG)	2011	G 3.8 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	AZERA(TG)	2011	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(TG)	2011	G 3.8 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	AZERA(TG)	2011	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	AZERA(TG)	2011	G 3.8 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	AZERA(TG)	2011	G 3.8 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	AZERA(TG)	2011	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	AZERA(TG)	2011	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
US	AZERA(TG)	2011	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(TG)	2011	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(TG)	2011	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	AZERA(TG)	2011	G 3.8 DOHC	OPTION [User Option]				x		
US	AZERA(TG)	2011	G 3.8 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	AZERA(TG)	2011	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		
US	AZERA(TG)	2010	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0140, 0143
US	AZERA(TG)	2010	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	AZERA(TG)	2010	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	AZERA(TG)	2010	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	AZERA(TG)	2010	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	AZERA(TG)	2010	G 3.3 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	AZERA(TG)	2010	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	AZERA(TG)	2010	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(TG)	2010	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	AZERA(TG)	2010	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	AZERA(TG)	2010	G 3.3 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	AZERA(TG)	2010	G 3.3 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	AZERA(TG)	2010	G 3.3 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	AZERA(TG)	2010	G 3.3 DOHC	BCM [Body Control Module]	x	x	x		x	
US	AZERA(TG)	2010	G 3.3 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(TG)	2010	G 3.3 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(TG)	2010	G 3.3 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	AZERA(TG)	2010	G 3.3 DOHC	OPTION [User Option]				x		
US	AZERA(TG)	2010	G 3.3 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	AZERA(TG)	2010	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		
US	AZERA(TG)	2010	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0140, 0143
US	AZERA(TG)	2010	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	AZERA(TG)	2010	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	AZERA(TG)	2010	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	AZERA(TG)	2010	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	AZERA(TG)	2010	G 3.8 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	AZERA(TG)	2010	G 3.8 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	AZERA(TG)	2010	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(TG)	2010	G 3.8 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	AZERA(TG)	2010	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	AZERA(TG)	2010	G 3.8 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	AZERA(TG)	2010	G 3.8 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	AZERA(TG)	2010	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	AZERA(TG)	2010	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
US	AZERA(TG)	2010	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(TG)	2010	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(TG)	2010	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	AZERA(TG)	2010	G 3.8 DOHC	OPTION [User Option]				x		
US	AZERA(TG)	2010	G 3.8 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	AZERA(TG)	2010	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		
US	AZERA(TG)	2009	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	AZERA(TG)	2009	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	AZERA(TG)	2009	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	AZERA(TG)	2009	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	AZERA(TG)	2009	G 3.3 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	AZERA(TG)	2009	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	AZERA(TG)	2009	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(TG)	2009	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	AZERA(TG)	2009	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	AZERA(TG)	2009	G 3.3 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	AZERA(TG)	2009	G 3.3 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	AZERA(TG)	2009	G 3.3 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	AZERA(TG)	2009	G 3.3 DOHC	BCM [Body Control Module]	x	x	x		x	
US	AZERA(TG)	2009	G 3.3 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(TG)	2009	G 3.3 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(TG)	2009	G 3.3 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	AZERA(TG)	2009	G 3.3 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	AZERA(TG)	2009	G 3.3 DOHC	OPTION [User Option]				x		
US	AZERA(TG)	2009	G 3.3 DOHC	CODE [Transmitter Code Saving (January 05 / 2009~)]				x		
US	AZERA(TG)	2009	G 3.3 DOHC	CODE [Transmitter Code Saving (~January 04 / 2009)]				x		
US	AZERA(TG)	2009	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	AZERA(TG)	2009	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	AZERA(TG)	2009	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	AZERA(TG)	2009	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	AZERA(TG)	2009	G 3.8 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	AZERA(TG)	2009	G 3.8 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	AZERA(TG)	2009	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(TG)	2009	G 3.8 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	AZERA(TG)	2009	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	AZERA(TG)	2009	G 3.8 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	AZERA(TG)	2009	G 3.8 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	AZERA(TG)	2009	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	AZERA(TG)	2009	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
US	AZERA(TG)	2009	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(TG)	2009	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(TG)	2009	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	AZERA(TG)	2009	G 3.8 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	AZERA(TG)	2009	G 3.8 DOHC	OPTION [User Option]				x		
US	AZERA(TG)	2009	G 3.8 DOHC	CODE [Transmitter Code Saving (January 05 / 2009~)]				x		
US	AZERA(TG)	2009	G 3.8 DOHC	CODE [Transmitter Code Saving (~January 04 / 2009)]				x		
US	AZERA(TG)	2008	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	AZERA(TG)	2008	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	AZERA(TG)	2008	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	AZERA(TG)	2008	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	AZERA(TG)	2008	G 3.3 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	AZERA(TG)	2008	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	AZERA(TG)	2008	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(TG)	2008	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	AZERA(TG)	2008	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	AZERA(TG)	2008	G 3.3 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	AZERA(TG)	2008	G 3.3 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	AZERA(TG)	2008	G 3.3 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	AZERA(TG)	2008	G 3.3 DOHC	BCM [Body Control Module]	x	x	x		x	
US	AZERA(TG)	2008	G 3.3 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(TG)	2008	G 3.3 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(TG)	2008	G 3.3 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	AZERA(TG)	2008	G 3.3 DOHC	OPTION [User Option]				x		
US	AZERA(TG)	2008	G 3.3 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	AZERA(TG)	2008	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	AZERA(TG)	2008	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	AZERA(TG)	2008	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	AZERA(TG)	2008	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	AZERA(TG)	2008	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	AZERA(TG)	2008	G 3.8 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	AZERA(TG)	2008	G 3.8 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	AZERA(TG)	2008	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(TG)	2008	G 3.8 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	AZERA(TG)	2008	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	AZERA(TG)	2008	G 3.8 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	AZERA(TG)	2008	G 3.8 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	AZERA(TG)	2008	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	AZERA(TG)	2008	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
US	AZERA(TG)	2008	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(TG)	2008	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(TG)	2008	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	AZERA(TG)	2008	G 3.8 DOHC	OPTION [User Option]				x		
US	AZERA(TG)	2008	G 3.8 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	AZERA(TG)	2008	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		
US	AZERA(TG)	2007	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	AZERA(TG)	2007	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	AZERA(TG)	2007	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	AZERA(TG)	2007	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	AZERA(TG)	2007	G 3.3 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	AZERA(TG)	2007	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	AZERA(TG)	2007	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(TG)	2007	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	AZERA(TG)	2007	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	AZERA(TG)	2007	G 3.3 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	AZERA(TG)	2007	G 3.3 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	AZERA(TG)	2007	G 3.3 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	AZERA(TG)	2007	G 3.3 DOHC	BCM [Body Control Module]	x	x	x		x	
US	AZERA(TG)	2007	G 3.3 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(TG)	2007	G 3.3 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(TG)	2007	G 3.3 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	AZERA(TG)	2007	G 3.3 DOHC	OPTION [User Option]				x		
US	AZERA(TG)	2007	G 3.3 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	AZERA(TG)	2007	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		
US	AZERA(TG)	2007	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	AZERA(TG)	2007	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	AZERA(TG)	2007	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	AZERA(TG)	2007	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	AZERA(TG)	2007	G 3.8 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	AZERA(TG)	2007	G 3.8 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	AZERA(TG)	2007	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(TG)	2007	G 3.8 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	AZERA(TG)	2007	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	AZERA(TG)	2007	G 3.8 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	AZERA(TG)	2007	G 3.8 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	AZERA(TG)	2007	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	AZERA(TG)	2007	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
US	AZERA(TG)	2007	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(TG)	2007	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(TG)	2007	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	AZERA(TG)	2007	G 3.8 DOHC	OPTION [User Option]				x		
US	AZERA(TG)	2007	G 3.8 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	AZERA(TG)	2007	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		
US	AZERA(TG)	2006	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	AZERA(TG)	2006	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	AZERA(TG)	2006	G 3.3 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	AZERA(TG)	2006	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	AZERA(TG)	2006	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(TG)	2006	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	AZERA(TG)	2006	G 3.3 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	AZERA(TG)	2006	G 3.3 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	AZERA(TG)	2006	G 3.3 DOHC	OPTION [User Option]				x		
US	AZERA(TG)	2006	G 3.3 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	AZERA(TG)	2006	G 3.3 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	AZERA(TG)	2006	G 3.3 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(TG)	2006	G 3.3 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(TG)	2006	G 3.3 DOHC	BCM [Body Control Module]	x	x	x		x	
US	AZERA(TG)	2006	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		
US	AZERA(TG)	2006	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	AZERA(TG)	2006	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	AZERA(TG)	2006	G 3.8 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	AZERA(TG)	2006	G 3.8 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	AZERA(TG)	2006	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	AZERA(TG)	2006	G 3.8 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	AZERA(TG)	2006	G 3.8 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	AZERA(TG)	2006	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	AZERA(TG)	2006	G 3.8 DOHC	OPTION [User Option]				x		
US	AZERA(TG)	2006	G 3.8 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	AZERA(TG)	2006	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	AZERA(TG)	2006	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	AZERA(TG)	2006	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	AZERA(TG)	2006	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
US	AZERA(TG)	2006	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		
US	ELANTRA COUPE(JK)	2015	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA COUPE(JK)	2015	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA COUPE(JK)	2015	G 1.8 MPI	ODS [Occupant Detection Sensor]	x	x	x	x		0141

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
US	ELANTRA COUPE(JK)	2015	G 1.8 MPI	EPS [Motor driven Power Steering]	×	×	×	×		0086
US	ELANTRA COUPE(JK)	2015	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
US	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
US	ELANTRA COUPE(JK)	2015	G 1.8 MPI	IMMO [Immobilizer]				×		0081, 0084, 0094, 0105, 0127
US	ELANTRA COUPE(JK)	2015	G 1.8 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0027, 0056, 0118
US	ELANTRA COUPE(JK)	2015	G 1.8 MPI	CLU [Cluster Module]	×	×	×	×	×	
US	ELANTRA COUPE(JK)	2015	G 1.8 MPI	SJB [Smart Junction Block]	×	×	×	×	×	
US	ELANTRA COUPE(JK)	2015	G 1.8 MPI	BCM [Body Control Module]	×	×	×	×	×	
US	ELANTRA COUPE(JK)	2015	G 1.8 MPI	CODE [Transmitter Code Saving]				×		0026
US	ELANTRA COUPE(JK)	2015	G 2.0 GDI	ENGINE [Engine Control]	×	×	×	×		0012, 0040, 0053, 0069, 0109, 0143
US	ELANTRA COUPE(JK)	2015	G 2.0 GDI	AT [Automatic Transaxle]	×	×	×	×	×	0114
US	ELANTRA COUPE(JK)	2015	G 2.0 GDI	ESC [Electronic Stability Control]	×	×	×	×	×	0062, 0085
US	ELANTRA COUPE(JK)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			
US	ELANTRA COUPE(JK)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	×	×	×			
US	ELANTRA COUPE(JK)	2015	G 2.0 GDI	ODS [Occupant Detection Sensor]	×	×	×	×		0141
US	ELANTRA COUPE(JK)	2015	G 2.0 GDI	AIRCON [Air Conditioner]	×	×	×	×	×	
US	ELANTRA COUPE(JK)	2015	G 2.0 GDI	EPS [Motor driven Power Steering]	×	×	×	×		0086
US	ELANTRA COUPE(JK)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	×	×	×		×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA COUPE(JK)	2015	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	ELANTRA COUPE(JK)	2015	G 2.0 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA COUPE(JK)	2015	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA COUPE(JK)	2015	G 2.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA COUPE(JK)	2015	G 2.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA COUPE(JK)	2015	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA COUPE(JK)	2015	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA COUPE(JK)	2014	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA COUPE(JK)	2014	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA COUPE(JK)	2014	G 1.8 MPI	ODS [Occupant Detection Sensor]	x	x	x	x		0141
US	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA COUPE(JK)	2014	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA COUPE(JK)	2014	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	ELANTRA COUPE(JK)	2014	G 1.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA COUPE(JK)	2014	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA COUPE(JK)	2014	G 1.8 MPI	CLU [Cluster Module]	×	×	×	×	×	
US	ELANTRA COUPE(JK)	2014	G 1.8 MPI	SJB [Smart Junction Block]	×	×	×	×	×	
US	ELANTRA COUPE(JK)	2014	G 1.8 MPI	BCM [Body Control Module]	×	×	×	×	×	
US	ELANTRA COUPE(JK)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				×		0026
US	ELANTRA COUPE(JK)	2014	G 2.0 GDI	ENGINE [Engine Control]	×	×	×	×		0012, 0040, 0053, 0069, 0109, 0143
US	ELANTRA COUPE(JK)	2014	G 2.0 GDI	AT [Automatic Transaxle]	×	×	×	×	×	0114
US	ELANTRA COUPE(JK)	2014	G 2.0 GDI	ESC [Electronic Stability Control]	×	×	×	×	×	0062, 0085
US	ELANTRA COUPE(JK)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			
US	ELANTRA COUPE(JK)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	×	×	×			
US	ELANTRA COUPE(JK)	2014	G 2.0 GDI	ODS [Occupant Detection Sensor]	×	×	×	×		0141
US	ELANTRA COUPE(JK)	2014	G 2.0 GDI	AIRCON [Air Conditioner]	×	×	×	×	×	
US	ELANTRA COUPE(JK)	2014	G 2.0 GDI	EPS [Motor driven Power Steering]	×	×	×	×		0086
US	ELANTRA COUPE(JK)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
US	ELANTRA COUPE(JK)	2014	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
US	ELANTRA COUPE(JK)	2014	G 2.0 GDI	IMMO [Immobilizer]				×		0081, 0084, 0094, 0105, 0127
US	ELANTRA COUPE(JK)	2014	G 2.0 GDI	SMK [Smart Key Unit]	×	×	×	×	×	0027, 0056, 0118
US	ELANTRA COUPE(JK)	2014	G 2.0 GDI	CLU [Cluster Module]	×	×	×	×	×	
US	ELANTRA COUPE(JK)	2014	G 2.0 GDI	SJB [Smart Junction Block]	×	×	×	×	×	
US	ELANTRA COUPE(JK)	2014	G 2.0 GDI	BCM [Body Control Module]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA COUPE(JK)	2014	G 2.0 GDI	CODE [Transmitter Code Saving]				×		0026
US	ELANTRA COUPE(JK)	2013	G 1.8 MPI	ENGINE [Engine Control]	×	×	×	×		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114
US	ELANTRA COUPE(JK)	2013	G 1.8 MPI	ESC [Electronic Stability Control]	×	×	×	×	×	0062, 0085
US	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			
US	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			
US	ELANTRA COUPE(JK)	2013	G 1.8 MPI	ODS [Occupant Detection Sensor]	×	×	×	×		0141
US	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
US	ELANTRA COUPE(JK)	2013	G 1.8 MPI	EPS [Motor driven Power Steering]	×	×	×	×		0086
US	ELANTRA COUPE(JK)	2013	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	×	×	×		×	
US	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
US	ELANTRA COUPE(JK)	2013	G 1.8 MPI	IMMO [Immobilizer]				×		0081, 0084, 0094, 0105, 0127
US	ELANTRA COUPE(JK)	2013	G 1.8 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0027, 0056, 0118
US	ELANTRA COUPE(JK)	2013	G 1.8 MPI	CLU [Cluster Module]	×	×	×	×	×	
US	ELANTRA COUPE(JK)	2013	G 1.8 MPI	SJB [Smart Junction Block]	×	×	×	×	×	
US	ELANTRA COUPE(JK)	2013	G 1.8 MPI	BCM [Body Control Module]	×	×	×	×	×	
US	ELANTRA COUPE(JK)	2013	G 1.8 MPI	CODE [Transmitter Code Saving]				×		0026
US	ELANTRA GT(GD)	2017	G 1.8 MPI	ENGINE [Engine Control]	×	×	×	×		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA GT(GD)	2017	G 1.8 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114
US	ELANTRA GT(GD)	2017	G 1.8 MPI	EPB [Electric Parking Brake]	×	×	×	×	×	0018, 0037, 0060
US	ELANTRA GT(GD)	2017	G 1.8 MPI	ESC [Electronic Stability Control]	×	×	×	×	×	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA GT(GD)	2017	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA GT(GD)	2017	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA GT(GD)	2017	G 1.8 MPI	ODS [Weight Classification System]	x	x	x	x		0141
US	ELANTRA GT(GD)	2017	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA GT(GD)	2017	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		
US	ELANTRA GT(GD)	2017	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA GT(GD)	2017	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
US	ELANTRA GT(GD)	2017	G 1.8 MPI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	ELANTRA GT(GD)	2017	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA GT(GD)	2017	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA GT(GD)	2017	G 1.8 MPI	SERVICE [Service Reminder]	x					
US	ELANTRA GT(GD)	2017	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	x	x	x			
US	ELANTRA GT(GD)	2017	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA GT(GD)	2017	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA GT(GD)	2017	G 1.8 MPI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA GT(GD)	2017	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA GT(GD)	2017	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	ELANTRA GT(GD)	2017	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA GT(GD)	2017	G 2.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	ELANTRA GT(GD)	2017	G 2.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0018, 0037, 0060
US	ELANTRA GT(GD)	2017	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA GT(GD)	2017	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA GT(GD)	2017	G 2.0 GDI	ODS [Weight Classification System]	x	x	x	x		0141
US	ELANTRA GT(GD)	2017	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA GT(GD)	2017	G 2.0 GDI	EPS [Motor driven Power Steering]	x	x	x	x		
US	ELANTRA GT(GD)	2017	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA GT(GD)	2017	G 2.0 GDI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
US	ELANTRA GT(GD)	2017	G 2.0 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	ELANTRA GT(GD)	2017	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA GT(GD)	2017	G 2.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA GT(GD)	2017	G 2.0 GDI	SERVICE [Service Reminder]	x					
US	ELANTRA GT(GD)	2017	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	x	x	x			
US	ELANTRA GT(GD)	2017	G 2.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA GT(GD)	2017	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA GT(GD)	2017	G 2.0 GDI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA GT(GD)	2017	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA GT(GD)	2016	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA GT(GD)	2016	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA GT(GD)	2016	G 1.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0018, 0037, 0060
US	ELANTRA GT(GD)	2016	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	ELANTRA GT(GD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA GT(GD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA GT(GD)	2016	G 1.8 MPI	ODS [Weight Classification System]	x	x	x	x		0141
US	ELANTRA GT(GD)	2016	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA GT(GD)	2016	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		
US	ELANTRA GT(GD)	2016	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA GT(GD)	2016	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
US	ELANTRA GT(GD)	2016	G 1.8 MPI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	ELANTRA GT(GD)	2016	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA GT(GD)	2016	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA GT(GD)	2016	G 1.8 MPI	SERVICE [Service Reminder]	x					
US	ELANTRA GT(GD)	2016	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	x	x	x			
US	ELANTRA GT(GD)	2016	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA GT(GD)	2016	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA GT(GD)	2016	G 1.8 MPI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA GT(GD)	2016	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA GT(GD)	2016	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	ELANTRA GT(GD)	2016	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA GT(GD)	2016	G 2.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	ELANTRA GT(GD)	2016	G 2.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0018, 0037, 0060
US	ELANTRA GT(GD)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA GT(GD)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA GT(GD)	2016	G 2.0 GDI	ODS [Weight Classification System]	x	x	x	x		0141
US	ELANTRA GT(GD)	2016	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA GT(GD)	2016	G 2.0 GDI	EPS [Motor driven Power Steering]	x	x	x	x		
US	ELANTRA GT(GD)	2016	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA GT(GD)	2016	G 2.0 GDI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA GT(GD)	2016	G 2.0 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	ELANTRA GT(GD)	2016	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA GT(GD)	2016	G 2.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA GT(GD)	2016	G 2.0 GDI	SERVICE [Service Reminder]	x					
US	ELANTRA GT(GD)	2016	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	x	x	x			
US	ELANTRA GT(GD)	2016	G 2.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA GT(GD)	2016	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA GT(GD)	2016	G 2.0 GDI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA GT(GD)	2016	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA GT(GD)	2015	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA GT(GD)	2015	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA GT(GD)	2015	G 1.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0018, 0037, 0060
US	ELANTRA GT(GD)	2015	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	ELANTRA GT(GD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA GT(GD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA GT(GD)	2015	G 1.8 MPI	ODS [Weight Classification System]	x	x	x	x		0141
US	ELANTRA GT(GD)	2015	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA GT(GD)	2015	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA GT(GD)	2015	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA GT(GD)	2015	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
US	ELANTRA GT(GD)	2015	G 1.8 MPI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	ELANTRA GT(GD)	2015	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA GT(GD)	2015	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA GT(GD)	2015	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	x	x	x			
US	ELANTRA GT(GD)	2015	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA GT(GD)	2015	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA GT(GD)	2015	G 1.8 MPI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA GT(GD)	2015	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA GT(GD)	2015	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	ELANTRA GT(GD)	2015	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA GT(GD)	2015	G 2.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	ELANTRA GT(GD)	2015	G 2.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0018, 0037, 0060
US	ELANTRA GT(GD)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA GT(GD)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA GT(GD)	2015	G 2.0 GDI	ODS [Weight Classification System]	x	x	x	x		0141
US	ELANTRA GT(GD)	2015	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA GT(GD)	2015	G 2.0 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA GT(GD)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA GT(GD)	2015	G 2.0 GDI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
US	ELANTRA GT(GD)	2015	G 2.0 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	ELANTRA GT(GD)	2015	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA GT(GD)	2015	G 2.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA GT(GD)	2015	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	x	x	x			
US	ELANTRA GT(GD)	2015	G 2.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA GT(GD)	2015	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA GT(GD)	2015	G 2.0 GDI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA GT(GD)	2015	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA GT(GD)	2014	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA GT(GD)	2014	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA GT(GD)	2014	G 1.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0018, 0037, 0060
US	ELANTRA GT(GD)	2014	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	ELANTRA GT(GD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA GT(GD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA GT(GD)	2014	G 1.8 MPI	ODS [Weight Classification System]	x	x	x	x		0141
US	ELANTRA GT(GD)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA GT(GD)	2014	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA GT(GD)	2014	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA GT(GD)	2014	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
US	ELANTRA GT(GD)	2014	G 1.8 MPI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	ELANTRA GT(GD)	2014	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA GT(GD)	2014	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA GT(GD)	2014	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	x	x	x			
US	ELANTRA GT(GD)	2014	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA GT(GD)	2014	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA GT(GD)	2014	G 1.8 MPI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA GT(GD)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA GT(GD)	2014	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA GT(GD)	2014	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA GT(GD)	2014	G 2.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	ELANTRA GT(GD)	2014	G 2.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0018, 0037, 0060
US	ELANTRA GT(GD)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA GT(GD)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA GT(GD)	2014	G 2.0 GDI	ODS [Weight Classification System]	x	x	x	x		0141
US	ELANTRA GT(GD)	2014	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA GT(GD)	2014	G 2.0 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA GT(GD)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA GT(GD)	2014	G 2.0 GDI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
US	ELANTRA GT(GD)	2014	G 2.0 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	ELANTRA GT(GD)	2014	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA GT(GD)	2014	G 2.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA GT(GD)	2014	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	x	x	x			
US	ELANTRA GT(GD)	2014	G 2.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA GT(GD)	2014	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA GT(GD)	2014	G 2.0 GDI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA GT(GD)	2014	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA GT(GD)	2013	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA GT(GD)	2013	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA GT(GD)	2013	G 1.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	0018, 0037, 0060
US	ELANTRA GT(GD)	2013	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	ELANTRA GT(GD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA GT(GD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA GT(GD)	2013	G 1.8 MPI	ODS [Weight Classification System]	x	x	x	x		0141
US	ELANTRA GT(GD)	2013	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA GT(GD)	2013	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA GT(GD)	2013	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA GT(GD)	2013	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	x	x	x	x		0083
US	ELANTRA GT(GD)	2013	G 1.8 MPI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	ELANTRA GT(GD)	2013	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA GT(GD)	2013	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA GT(GD)	2013	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	x	x	x			
US	ELANTRA GT(GD)	2013	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA GT(GD)	2013	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA GT(GD)	2013	G 1.8 MPI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA GT(GD)	2013	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA TOURING(FD)	2012	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	ELANTRA TOURING(FD)	2012	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA TOURING(FD)	2012	G 2.0 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	ELANTRA TOURING(FD)	2012	G 2.0 MPI	ODS [Weight Classification]	x	x	x	x		0141
US	ELANTRA TOURING(FD)	2012	G 2.0 MPI	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	ELANTRA TOURING(FD)	2012	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA TOURING(FD)	2012	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	ELANTRA TOURING(FD)	2012	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ELANTRA TOURING(FD)	2012	G 2.0 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA TOURING(FD)	2012	G 2.0 MPI	BCM [Body Control Module]	x			x	x	
US	ELANTRA TOURING(FD)	2012	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA TOURING(FD)	2011	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	ELANTRA TOURING(FD)	2011	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA TOURING(FD)	2011	G 2.0 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	ELANTRA TOURING(FD)	2011	G 2.0 MPI	ODS [Weight Classification]	x	x	x	x		0141
US	ELANTRA TOURING(FD)	2011	G 2.0 MPI	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	ELANTRA TOURING(FD)	2011	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA TOURING(FD)	2011	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA TOURING(FD)	2011	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ELANTRA TOURING(FD)	2011	G 2.0 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA TOURING(FD)	2011	G 2.0 MPI	BCM [Body Control Module]	x			x	x	
US	ELANTRA TOURING(FD)	2011	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA TOURING(FD)	2010	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	ELANTRA TOURING(FD)	2010	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA TOURING(FD)	2010	G 2.0 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	ELANTRA TOURING(FD)	2010	G 2.0 MPI	ODS [Weight Classification]	x	x	x	x		0141
US	ELANTRA TOURING(FD)	2010	G 2.0 MPI	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	ELANTRA TOURING(FD)	2010	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA TOURING(FD)	2010	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	ELANTRA TOURING(FD)	2010	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ELANTRA TOURING(FD)	2010	G 2.0 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA TOURING(FD)	2010	G 2.0 MPI	BCM [Body Control Module]	x			x	x	
US	ELANTRA TOURING(FD)	2010	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA TOURING(FD)	2009	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	ELANTRA TOURING(FD)	2009	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA TOURING(FD)	2009	G 2.0 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	ELANTRA TOURING(FD)	2009	G 2.0 MPI	ODS [Weight Classification]	x	x	x	x		0141

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA TOURING(FD)	2009	G 2.0 MPI	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	ELANTRA TOURING(FD)	2009	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA TOURING(FD)	2009	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	ELANTRA TOURING(FD)	2009	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ELANTRA TOURING(FD)	2009	G 2.0 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA TOURING(FD)	2009	G 2.0 MPI	BCM [Body Control Module]	x			x	x	
US	ELANTRA TOURING(FD)	2009	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(AD)	2017	G 1.6 T-GDI	ENGINE [Engine Control]	x	x	x	x		0015, 0053, 0069, 0109, 0143
US	ELANTRA(AD)	2017	G 1.6 T-GDI	AT [Dual Clutch Transmission]	x	x	x	x		0022, 0025
US	ELANTRA(AD)	2017	G 1.6 T-GDI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
US	ELANTRA(AD)	2017	G 1.6 T-GDI	SCCAEB [SCC / AEB]	x	x	x	x		
US	ELANTRA(AD)	2017	G 1.6 T-GDI	OCS [Occupant Classification System]	x	x	x	x		
US	ELANTRA(AD)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(AD)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(AD)	2017	G 1.6 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(AD)	2017	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	ELANTRA(AD)	2017	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	ELANTRA(AD)	2017	G 1.6 T-GDI	PGS [Parking Guide System]	x	x	x	x		
US	ELANTRA(AD)	2017	G 1.6 T-GDI	MFC [Multi Function Camera]	x	x	x	x		
US	ELANTRA(AD)	2017	G 1.6 T-GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	ELANTRA(AD)	2017	G 1.6 T-GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	ELANTRA(AD)	2017	G 1.6 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	ELANTRA(AD)	2017	G 1.6 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(AD)	2017	G 1.6 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(AD)	2017	G 1.6 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	ELANTRA(AD)	2017	G 1.6 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	ELANTRA(AD)	2017	G 1.6 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	ELANTRA(AD)	2017	G 1.6 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA(AD)	2017	G 1.6 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(AD)	2017	G 1.6 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(AD)	2017	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x	x	0012, 0015, 0050, 0053, 0109, 0113, 0143
US	ELANTRA(AD)	2017	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x		0006, 0114
US	ELANTRA(AD)	2017	G 2.0 MPI	ABSESP [ABS / ESP]	x	x	x	x	x	0062
US	ELANTRA(AD)	2017	G 2.0 MPI	SCCAEB [SCC / AEB]	x	x	x	x		
US	ELANTRA(AD)	2017	G 2.0 MPI	OCS [Occupant Classification System]	x	x	x	x		
US	ELANTRA(AD)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(AD)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(AD)	2017	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(AD)	2017	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	ELANTRA(AD)	2017	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	ELANTRA(AD)	2017	G 2.0 MPI	PGS [Parking Guide System]	x	x	x	x		
US	ELANTRA(AD)	2017	G 2.0 MPI	MFC [Multi Function Camera]	x	x	x	x		
US	ELANTRA(AD)	2017	G 2.0 MPI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	ELANTRA(AD)	2017	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	ELANTRA(AD)	2017	G 2.0 MPI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	ELANTRA(AD)	2017	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(AD)	2017	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(AD)	2017	G 2.0 MPI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	ELANTRA(AD)	2017	G 2.0 MPI	DDM [Driver Door Module]	x	x	x	x	x	
US	ELANTRA(AD)	2017	G 2.0 MPI	ADM [Assist Door Module]	x	x	x	x	x	
US	ELANTRA(AD)	2017	G 2.0 MPI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	ELANTRA(AD)	2017	G 2.0 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(AD)	2017	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	ENGINE [Engine Control]	x	x	x	x		0015, 0053, 0069, 0109, 0143
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	AT [Dual Clutch Transmission]	x	x	x	x		0022, 0025
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	SCCAEB [SCC / AEB]	x	x	x	x		
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	OCS [Occupant Classification System]	x	x	x	x		
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	PGS [Parking Guide System]	x	x	x	x		
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	MFC [Multi Function Camera]	x	x	x	x		
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(ADA)	2017	G 1.4 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(ADA)	2017	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x	x	0012, 0015, 0050, 0053, 0109, 0113, 0143
US	ELANTRA(ADA)	2017	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x		0006, 0114
US	ELANTRA(ADA)	2017	G 2.0 MPI	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	ELANTRA(ADA)	2017	G 2.0 MPI	SCCAEB [SCC / AEB]	x	x	x	x		
US	ELANTRA(ADA)	2017	G 2.0 MPI	OCS [Occupant Classification System]	x	x	x	x		
US	ELANTRA(ADA)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(ADA)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(ADA)	2017	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(ADA)	2017	G 2.0 MPI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	ELANTRA(ADA)	2017	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	ELANTRA(ADA)	2017	G 2.0 MPI	PGS [Parking Guide System]	x	x	x	x		
US	ELANTRA(ADA)	2017	G 2.0 MPI	MFC [Multi Function Camera]	x	x	x	x		
US	ELANTRA(ADA)	2017	G 2.0 MPI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	ELANTRA(ADA)	2017	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	ELANTRA(ADA)	2017	G 2.0 MPI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	ELANTRA(ADA)	2017	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(ADA)	2017	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(ADA)	2017	G 2.0 MPI	SJB [Smart Junction Block]	x	x	x	x	x	0117

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA(ADA)	2017	G 2.0 MPI	DDM [Driver Door Module]	x	x	x	x	x	
US	ELANTRA(ADA)	2017	G 2.0 MPI	ADM [Assist Door Module]	x	x	x	x	x	
US	ELANTRA(ADA)	2017	G 2.0 MPI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	ELANTRA(ADA)	2017	G 2.0 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(ADA)	2017	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(HD)	2010	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	ELANTRA(HD)	2010	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(HD)	2010	G 2.0 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	ELANTRA(HD)	2010	G 2.0 DOHC	ODS [Weight Classification]	x	x	x	x		0141
US	ELANTRA(HD)	2010	G 2.0 DOHC	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	ELANTRA(HD)	2010	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(HD)	2010	G 2.0 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0086
US	ELANTRA(HD)	2010	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ELANTRA(HD)	2010	G 2.0 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(HD)	2010	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ELANTRA(HD)	2010	G 2.0 DOHC	BCM [Body Control Module]	x			x	x	
US	ELANTRA(HD)	2010	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(HD)	2009	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	ELANTRA(HD)	2009	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(HD)	2009	G 2.0 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	ELANTRA(HD)	2009	G 2.0 DOHC	ODS [Weight Classification]	x	x	x	x		0141
US	ELANTRA(HD)	2009	G 2.0 DOHC	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	ELANTRA(HD)	2009	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(HD)	2009	G 2.0 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0086
US	ELANTRA(HD)	2009	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ELANTRA(HD)	2009	G 2.0 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(HD)	2009	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ELANTRA(HD)	2009	G 2.0 DOHC	BCM [Body Control Module]	x			x	x	
US	ELANTRA(HD)	2009	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(HD)	2008	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	ELANTRA(HD)	2008	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(HD)	2008	G 2.0 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	ELANTRA(HD)	2008	G 2.0 DOHC	ODS [Weight Classification]	x	x	x	x		0141

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA(HD)	2008	G 2.0 DOHC	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	ELANTRA(HD)	2008	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(HD)	2008	G 2.0 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0086
US	ELANTRA(HD)	2008	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ELANTRA(HD)	2008	G 2.0 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(HD)	2008	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ELANTRA(HD)	2008	G 2.0 DOHC	BCM [Body Control Module]	x			x	x	
US	ELANTRA(HD)	2008	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(HD)	2007	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	ELANTRA(HD)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(HD)	2007	G 2.0 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	ELANTRA(HD)	2007	G 2.0 DOHC	ODS [Weight Classification]	x	x	x	x		0141
US	ELANTRA(HD)	2007	G 2.0 DOHC	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	ELANTRA(HD)	2007	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(HD)	2007	G 2.0 DOHC	EPS [Electronic Power Steering]	x	x	x	x		0086
US	ELANTRA(HD)	2007	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ELANTRA(HD)	2007	G 2.0 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(HD)	2007	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ELANTRA(HD)	2007	G 2.0 DOHC	BCM [Body Control Module]	x			x	x	
US	ELANTRA(HD)	2007	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(J1)	1995	G 1.6 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(J1)	1995	G 1.6 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(J1)	1995	G 1.6 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ELANTRA(J1)	1995	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(J1)	1995	G 1.8 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(J1)	1995	G 1.8 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(J1)	1995	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ELANTRA(J1)	1995	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(J1)	1994	G 1.6 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(J1)	1994	G 1.6 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(J1)	1994	G 1.6 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ELANTRA(J1)	1994	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(J1)	1994	G 1.8 DOHC	TCS [Traction Control System]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA(J1)	1994	G 1.8 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(J1)	1994	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ELANTRA(J1)	1994	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(J1)	1993	G 1.6 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(J1)	1993	G 1.6 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(J1)	1993	G 1.6 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ELANTRA(J1)	1993	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(J1)	1993	G 1.8 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(J1)	1993	G 1.8 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(J1)	1993	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ELANTRA(J1)	1993	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(J1)	1992	G 1.6 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(J1)	1992	G 1.6 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(J1)	1992	G 1.6 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ELANTRA(J1)	1992	G 1.6 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(MD)	2016	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA(MD)	2016	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(MD)	2016	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	ELANTRA(MD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(MD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(MD)	2016	G 1.8 MPI	ODS [Occupant Detection Sensor]	x	x	x	x		0141
US	ELANTRA(MD)	2016	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(MD)	2016	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA(MD)	2016	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA(MD)	2016	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	ELANTRA(MD)	2016	G 1.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(MD)	2016	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(MD)	2016	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	x	x	x			
US	ELANTRA(MD)	2016	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(MD)	2016	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(MD)	2016	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA(MD)	2016	G 1.8 MPI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA(MD)	2016	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA(MD)	2016	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	ELANTRA(MD)	2016	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(MD)	2016	G 2.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	ELANTRA(MD)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(MD)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(MD)	2016	G 2.0 GDI	ODS [Occupant Detection Sensor]	x	x	x	x		0141
US	ELANTRA(MD)	2016	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(MD)	2016	G 2.0 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA(MD)	2016	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA(MD)	2016	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	ELANTRA(MD)	2016	G 2.0 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(MD)	2016	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(MD)	2016	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	x	x	x			
US	ELANTRA(MD)	2016	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(MD)	2016	G 2.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(MD)	2016	G 2.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA(MD)	2016	G 2.0 GDI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA(MD)	2016	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(MD)	2015	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA(MD)	2015	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(MD)	2015	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	ELANTRA(MD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(MD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(MD)	2015	G 1.8 MPI	ODS [Occupant Detection Sensor]	x	x	x	x		0141
US	ELANTRA(MD)	2015	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(MD)	2015	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA(MD)	2015	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA(MD)	2015	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	ELANTRA(MD)	2015	G 1.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(MD)	2015	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(MD)	2015	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	x	x	x			
US	ELANTRA(MD)	2015	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA(MD)	2015	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(MD)	2015	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA(MD)	2015	G 1.8 MPI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA(MD)	2015	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(MD)	2015	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	ELANTRA(MD)	2015	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(MD)	2015	G 2.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	ELANTRA(MD)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(MD)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(MD)	2015	G 2.0 GDI	ODS [Occupant Detection Sensor]	x	x	x	x		0141
US	ELANTRA(MD)	2015	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(MD)	2015	G 2.0 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA(MD)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA(MD)	2015	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	ELANTRA(MD)	2015	G 2.0 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(MD)	2015	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(MD)	2015	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	x	x	x			
US	ELANTRA(MD)	2015	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(MD)	2015	G 2.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(MD)	2015	G 2.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA(MD)	2015	G 2.0 GDI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA(MD)	2015	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(MD)	2014	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA(MD)	2014	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(MD)	2014	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	ELANTRA(MD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(MD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(MD)	2014	G 1.8 MPI	ODS [Occupant Detection Sensor]	x	x	x	x		0141
US	ELANTRA(MD)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(MD)	2014	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA(MD)	2014	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA(MD)	2014	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA(MD)	2014	G 1.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(MD)	2014	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(MD)	2014	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	x	x	x			
US	ELANTRA(MD)	2014	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(MD)	2014	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(MD)	2014	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA(MD)	2014	G 1.8 MPI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA(MD)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(MD)	2014	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	ELANTRA(MD)	2014	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(MD)	2014	G 2.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	ELANTRA(MD)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(MD)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(MD)	2014	G 2.0 GDI	ODS [Occupant Detection Sensor]	x	x	x	x		0141
US	ELANTRA(MD)	2014	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(MD)	2014	G 2.0 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA(MD)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA(MD)	2014	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	ELANTRA(MD)	2014	G 2.0 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(MD)	2014	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(MD)	2014	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	x	x	x			
US	ELANTRA(MD)	2014	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(MD)	2014	G 2.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(MD)	2014	G 2.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA(MD)	2014	G 2.0 GDI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA(MD)	2014	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(MD)	2013	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA(MD)	2013	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(MD)	2013	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	ELANTRA(MD)	2013	G 1.8 MPI	ODS [Occupant Detection Sensor]	x	x	x	x		0141
US	ELANTRA(MD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(MD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(MD)	2013	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA(MD)	2013	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA(MD)	2013	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA(MD)	2013	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	ELANTRA(MD)	2013	G 1.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(MD)	2013	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(MD)	2013	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA(MD)	2013	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(MD)	2013	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(MD)	2013	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(MD)	2012	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA(MD)	2012	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(MD)	2012	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	ELANTRA(MD)	2012	G 1.8 MPI	ODS [Occupant Detection Sensor]	x	x	x	x		0141
US	ELANTRA(MD)	2012	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(MD)	2012	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(MD)	2012	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(MD)	2012	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA(MD)	2012	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA(MD)	2012	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	ELANTRA(MD)	2012	G 1.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(MD)	2012	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(MD)	2012	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA(MD)	2012	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(MD)	2012	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(MD)	2012	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(MD)	2011	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA(MD)	2011	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(MD)	2011	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	ELANTRA(MD)	2011	G 1.8 MPI	ODS [Occupant Detection Sensor]	x	x	x	x		0141
US	ELANTRA(MD)	2011	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(MD)	2011	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(MD)	2011	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA(MD)	2011	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA(MD)	2011	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA(MD)	2011	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	ELANTRA(MD)	2011	G 1.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(MD)	2011	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(MD)	2011	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA(MD)	2011	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(MD)	2011	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(MD)	2011	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(RD)	2000	G 2.0 DOHC	ENGINE [Engine Control]		x	x	x		
US	ELANTRA(RD)	2000	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	ELANTRA(RD)	2000	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(RD)	2000	G 2.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(RD)	2000	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ELANTRA(RD)	2000	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(RD)	2000	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	ELANTRA(RD)	1999	G 2.0 DOHC	ENGINE [Engine Control]		x	x	x		
US	ELANTRA(RD)	1999	G 2.0 DOHC	AT [Automatic Transaxle (June1 / 1999~)]		x	x	x	x	
US	ELANTRA(RD)	1999	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(RD)	1999	G 2.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(RD)	1999	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ELANTRA(RD)	1999	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(RD)	1999	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	ELANTRA(RD)	1998	G 1.8 DOHC	ENGINE [Engine Control]		x	x	x		
US	ELANTRA(RD)	1998	G 1.8 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(RD)	1998	G 1.8 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(RD)	1998	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ELANTRA(RD)	1998	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(RD)	1998	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	ELANTRA(RD)	1997	G 1.8 DOHC	ENGINE [Engine Control]		x	x	x		
US	ELANTRA(RD)	1997	G 1.8 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(RD)	1997	G 1.8 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(RD)	1997	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ELANTRA(RD)	1997	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA(RD)	1997	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	ELANTRA(RD)	1996	G 1.8 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(RD)	1996	G 1.8 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(RD)	1996	G 1.8 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ELANTRA(RD)	1996	G 1.8 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(RD)	1996	G 1.8 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	ELANTRA(UD)	2016	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA(UD)	2016	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(UD)	2016	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	ELANTRA(UD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(UD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(UD)	2016	G 1.8 MPI	ODS [Occupant Detection Sensor]	x	x	x	x		0141
US	ELANTRA(UD)	2016	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(UD)	2016	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA(UD)	2016	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA(UD)	2016	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	ELANTRA(UD)	2016	G 1.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(UD)	2016	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(UD)	2016	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(UD)	2016	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(UD)	2016	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA(UD)	2016	G 1.8 MPI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA(UD)	2016	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(UD)	2015	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA(UD)	2015	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(UD)	2015	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	ELANTRA(UD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(UD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(UD)	2015	G 1.8 MPI	ODS [Occupant Detection Sensor]	x	x	x	x		0141
US	ELANTRA(UD)	2015	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(UD)	2015	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA(UD)	2015	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA(UD)	2015	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA(UD)	2015	G 1.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(UD)	2015	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(UD)	2015	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(UD)	2015	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(UD)	2015	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA(UD)	2015	G 1.8 MPI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA(UD)	2015	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(UD)	2014	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA(UD)	2014	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(UD)	2014	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	ELANTRA(UD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(UD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(UD)	2014	G 1.8 MPI	ODS [Occupant Detection Sensor]	x	x	x	x		0141
US	ELANTRA(UD)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(UD)	2014	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA(UD)	2014	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA(UD)	2014	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	ELANTRA(UD)	2014	G 1.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(UD)	2014	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(UD)	2014	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(UD)	2014	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(UD)	2014	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA(UD)	2014	G 1.8 MPI	TMU [Telematics Unit]	x	x	x			
US	ELANTRA(UD)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(UD)	2013	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA(UD)	2013	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(UD)	2013	G 1.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	ELANTRA(UD)	2013	G 1.8 MPI	ODS [Occupant Detection Sensor]	x	x	x	x		0141
US	ELANTRA(UD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(UD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(UD)	2013	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(UD)	2013	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA(UD)	2013	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA(UD)	2013	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	ELANTRA(UD)	2013	G 1.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(UD)	2013	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(UD)	2013	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA(UD)	2013	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(UD)	2013	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(UD)	2013	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(UD)	2012	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA(UD)	2012	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(UD)	2012	G 1.8 MPI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	ELANTRA(UD)	2012	G 1.8 MPI	ODS [Occupant Detection Sensor]	x	x	x	x		0141
US	ELANTRA(UD)	2012	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(UD)	2012	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(UD)	2012	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(UD)	2012	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA(UD)	2012	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	ELANTRA(UD)	2012	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	ELANTRA(UD)	2012	G 1.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(UD)	2012	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(UD)	2012	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA(UD)	2012	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(UD)	2012	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(UD)	2012	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(UD)	2011	G 1.8 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	ELANTRA(UD)	2011	G 1.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ELANTRA(UD)	2011	G 1.8 MPI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	ELANTRA(UD)	2011	G 1.8 MPI	ODS [Occupant Detection Sensor]	x	x	x	x		0141
US	ELANTRA(UD)	2011	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	ELANTRA(UD)	2011	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	ELANTRA(UD)	2011	G 1.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	ELANTRA(UD)	2011	G 1.8 MPI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	ELANTRA(UD)	2011	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA(UD)	2011	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	ELANTRA(UD)	2011	G 1.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ELANTRA(UD)	2011	G 1.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	ELANTRA(UD)	2011	G 1.8 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	ELANTRA(UD)	2011	G 1.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	ELANTRA(UD)	2011	G 1.8 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	ELANTRA(UD)	2011	G 1.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	ELANTRA(XD)	2006	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113
US	ELANTRA(XD)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	ELANTRA(XD)	2006	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(XD)	2006	G 2.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(XD)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
US	ELANTRA(XD)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(XD)	2006	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ELANTRA(XD)	2005	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113
US	ELANTRA(XD)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	ELANTRA(XD)	2005	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(XD)	2005	G 2.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(XD)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
US	ELANTRA(XD)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(XD)	2005	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ELANTRA(XD)	2004	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0110, 0113
US	ELANTRA(XD)	2004	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	ELANTRA(XD)	2004	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(XD)	2004	G 2.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(XD)	2004	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
US	ELANTRA(XD)	2004	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(XD)	2004	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ELANTRA(XD)	2003	G 2.0 DOHC	ENGINE [Engine Control (SULEV)]	x	x	x	x	x	0015, 0053, 0110, 0113
US	ELANTRA(XD)	2003	G 2.0 DOHC	ENGINE [Engine Control (Non SULEV)]	x	x	x	x	x	0015, 0053, 0110, 0113
US	ELANTRA(XD)	2003	G 2.0 DOHC	AT [Automatic Transaxle (SULEV)]	x	x	x	x	x	
US	ELANTRA(XD)	2003	G 2.0 DOHC	AT [Automatic Transaxle (Non SULEV)]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ELANTRA(XD)	2003	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(XD)	2003	G 2.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(XD)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ELANTRA(XD)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(XD)	2003	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ELANTRA(XD)	2002	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0110, 0113
US	ELANTRA(XD)	2002	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	ELANTRA(XD)	2002	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(XD)	2002	G 2.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(XD)	2002	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ELANTRA(XD)	2002	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(XD)	2002	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ELANTRA(XD)	2001	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0110, 0113
US	ELANTRA(XD)	2001	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	ELANTRA(XD)	2001	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	ELANTRA(XD)	2001	G 2.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	ELANTRA(XD)	2001	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	ELANTRA(XD)	2001	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x	x		
US	ELANTRA(XD)	2001	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	ODS [Weight Classification System]	x	x	x	x		0141
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	IPM [Instrument Panel Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	RAM [Rear Area Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	FAM [Front Area Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	PSD - L [Power Sliding Door - Left]	x	x	x	x		
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	PSD - R [Power Sliding Door - Right]	x	x	x	x		
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	PTG [Power Tailgate]	x	x	x	x		
US	ENTOURAGE(EP)	2010	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		0026
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	ODS [Weight Classification System]	x	x	x	x		0141
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	IPM [Instrument Panel Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	RAM [Rear Area Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	FAM [Front Area Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	PSD - L [Power Sliding Door - Left]	x	x	x	x		
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	PSD - R [Power Sliding Door - Right]	x	x	x	x		
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	PTG [Power Tailgate]	x	x	x	x		
US	ENTOURAGE(EP)	2009	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		0026
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	ODS [Weight Classification System]	x	x	x	x		0141
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	AIRCON [Air Conditioner]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	IPM [Instrument Panel Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	RAM [Rear Area Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	FAM [Front Area Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	PSD - L [Power Sliding Door - Left]	x	x	x	x		
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	PSD - R [Power Sliding Door - Right]	x	x	x	x		
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	PTG [Power Tailgate]	x	x	x	x		
US	ENTOURAGE(EP)	2008	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		0026
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	ODS [Weight Classification System]	x	x	x	x		0141
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	AIRCON [Air Conditioner]		x	x	x	x	
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	IPM [Instrument Panel Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	RAM [Rear Area Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	FAM [Front Area Module]	x	x	x	x	x	
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	PSD - L [Power Sliding Door - Left]	x	x	x	x		
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	PSD - R [Power Sliding Door - Right]	x	x	x	x		
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	PTG [Power Tailgate]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	ENTOURAGE(EP)	2007	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		0026
US	EQUUS(VI)	2016	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	EQUUS(VI)	2016	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	EQUUS(VI)	2016	G 5.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	EQUUS(VI)	2016	G 5.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	EQUUS(VI)	2016	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	EQUUS(VI)	2016	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	EQUUS(VI)	2016	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	EQUUS(VI)	2016	G 5.0 GDI	EPS [Electronic Hydraulic Power Steering System]	x	x	x	x	x	
US	EQUUS(VI)	2016	G 5.0 GDI	ECS [Electronic Control Suspension]	x	x	x	x		
US	EQUUS(VI)	2016	G 5.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	EQUUS(VI)	2016	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	EQUUS(VI)	2016	G 5.0 GDI	MCS [Multi - View Camera System]	x	x	x	x	x	
US	EQUUS(VI)	2016	G 5.0 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
US	EQUUS(VI)	2016	G 5.0 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	EQUUS(VI)	2016	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	EQUUS(VI)	2016	G 5.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	EQUUS(VI)	2016	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			
US	EQUUS(VI)	2016	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
US	EQUUS(VI)	2016	G 5.0 GDI	PTM [Power Trunk Module]	x	x	x	x		
US	EQUUS(VI)	2016	G 5.0 GDI	FAM [Front Area Module]	x	x	x	x	x	
US	EQUUS(VI)	2016	G 5.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	EQUUS(VI)	2016	G 5.0 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	EQUUS(VI)	2016	G 5.0 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	EQUUS(VI)	2016	G 5.0 GDI	PSM [Power Seat Module]	x	x	x	x	x	
US	EQUUS(VI)	2016	G 5.0 GDI	SCM [Steering Column Module]	x	x	x	x	x	
US	EQUUS(VI)	2016	G 5.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	EQUUS(VI)	2016	G 5.0 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	EQUUS(VI)	2016	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	x	x	x	x		
US	EQUUS(VI)	2016	G 5.0 GDI	APSM [Assist Power Seat Module]	x	x	x	x	x	
US	EQUUS(VI)	2016	G 5.0 GDI	CLU [Cluster Module]	x			x	x	
US	EQUUS(VI)	2016	G 5.0 GDI	HUD [Head Up Display]	x	x	x	x		
US	EQUUS(VI)	2016	G 5.0 GDI	ECW [Electric Control Wiper]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	EQUUS(VI)	2016	G 5.0 GDI	DIS [Multimedia]	x			x		
US	EQUUS(VI)	2016	G 5.0 GDI	TMU [Telematics Unit]	x	x	x			
US	EQUUS(VI)	2015	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	EQUUS(VI)	2015	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	EQUUS(VI)	2015	G 5.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	EQUUS(VI)	2015	G 5.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	EQUUS(VI)	2015	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	EQUUS(VI)	2015	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	EQUUS(VI)	2015	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	EQUUS(VI)	2015	G 5.0 GDI	EPS [Electronic Hydraulic Power Steering System]	x	x	x	x	x	
US	EQUUS(VI)	2015	G 5.0 GDI	ECS [Electronic Control Suspension]	x	x	x	x		
US	EQUUS(VI)	2015	G 5.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	EQUUS(VI)	2015	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	EQUUS(VI)	2015	G 5.0 GDI	MCS [Multi - View Camera System]	x	x	x	x	x	
US	EQUUS(VI)	2015	G 5.0 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
US	EQUUS(VI)	2015	G 5.0 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	EQUUS(VI)	2015	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	EQUUS(VI)	2015	G 5.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	EQUUS(VI)	2015	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			
US	EQUUS(VI)	2015	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
US	EQUUS(VI)	2015	G 5.0 GDI	PTM [Power Trunk Module]	x	x	x	x		
US	EQUUS(VI)	2015	G 5.0 GDI	FAM [Front Area Module]	x	x	x	x	x	
US	EQUUS(VI)	2015	G 5.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	EQUUS(VI)	2015	G 5.0 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	EQUUS(VI)	2015	G 5.0 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	EQUUS(VI)	2015	G 5.0 GDI	PSM [Power Seat Module]	x	x	x	x	x	
US	EQUUS(VI)	2015	G 5.0 GDI	SCM [Steering Column Module]	x	x	x	x	x	
US	EQUUS(VI)	2015	G 5.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	EQUUS(VI)	2015	G 5.0 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	EQUUS(VI)	2015	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	x	x	x	x		
US	EQUUS(VI)	2015	G 5.0 GDI	APSM [Assist Power Seat Module]	x	x	x	x	x	
US	EQUUS(VI)	2015	G 5.0 GDI	CLU [Cluster Module]	x			x	x	
US	EQUUS(VI)	2015	G 5.0 GDI	HUD [Head Up Display]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	EQUUS(VI)	2015	G 5.0 GDI	ECW [Electric Control Wiper]	x	x	x	x		
US	EQUUS(VI)	2015	G 5.0 GDI	DIS [Multimedia]	x			x		
US	EQUUS(VI)	2015	G 5.0 GDI	TMU [Telematics Unit]	x	x	x			
US	EQUUS(VI)	2014	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	EQUUS(VI)	2014	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	EQUUS(VI)	2014	G 5.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	EQUUS(VI)	2014	G 5.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	EQUUS(VI)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	EQUUS(VI)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	EQUUS(VI)	2014	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	EQUUS(VI)	2014	G 5.0 GDI	EPS [Electronic Hydraulic Power Steering System]	x	x	x	x	x	
US	EQUUS(VI)	2014	G 5.0 GDI	ECS [Electronic Control Suspension]	x	x	x	x		
US	EQUUS(VI)	2014	G 5.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	EQUUS(VI)	2014	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	EQUUS(VI)	2014	G 5.0 GDI	MCS [Multi - View Camera System]	x	x	x	x	x	
US	EQUUS(VI)	2014	G 5.0 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
US	EQUUS(VI)	2014	G 5.0 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	EQUUS(VI)	2014	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	EQUUS(VI)	2014	G 5.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	EQUUS(VI)	2014	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			
US	EQUUS(VI)	2014	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
US	EQUUS(VI)	2014	G 5.0 GDI	PTM [Power Trunk Module]	x	x	x	x		
US	EQUUS(VI)	2014	G 5.0 GDI	FAM [Front Area Module]	x	x	x	x	x	
US	EQUUS(VI)	2014	G 5.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	EQUUS(VI)	2014	G 5.0 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	EQUUS(VI)	2014	G 5.0 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	EQUUS(VI)	2014	G 5.0 GDI	PSM [Power Seat Module]	x	x	x	x	x	
US	EQUUS(VI)	2014	G 5.0 GDI	SCM [Steering Column Module]	x	x	x	x	x	
US	EQUUS(VI)	2014	G 5.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	EQUUS(VI)	2014	G 5.0 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	EQUUS(VI)	2014	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	x	x	x	x		
US	EQUUS(VI)	2014	G 5.0 GDI	APSM [Assist Power Seat Module]	x	x	x	x	x	
US	EQUUS(VI)	2014	G 5.0 GDI	CLU [Cluster Module]	x			x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	EQUUS(VI)	2014	G 5.0 GDI	HUD [Head Up Display]	x	x	x	x		
US	EQUUS(VI)	2014	G 5.0 GDI	ECW [Electric Control Wiper]	x	x	x	x		
US	EQUUS(VI)	2014	G 5.0 GDI	DIS [Multimedia]	x			x		
US	EQUUS(VI)	2014	G 5.0 GDI	TMU [Telematics Unit]	x	x	x			
US	EQUUS(VI)	2013	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	EQUUS(VI)	2013	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	EQUUS(VI)	2013	G 5.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	EQUUS(VI)	2013	G 5.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	EQUUS(VI)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	EQUUS(VI)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	EQUUS(VI)	2013	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	EQUUS(VI)	2013	G 5.0 GDI	EPS [Electronic Hydraulic Power Steering System]	x	x	x	x	x	
US	EQUUS(VI)	2013	G 5.0 GDI	ECS [Electronic Control Suspension]	x	x	x	x		
US	EQUUS(VI)	2013	G 5.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	EQUUS(VI)	2013	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	EQUUS(VI)	2013	G 5.0 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
US	EQUUS(VI)	2013	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	EQUUS(VI)	2013	G 5.0 GDI	SMKCODE [Smart Key Code Saving]				x		
US	EQUUS(VI)	2013	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
US	EQUUS(VI)	2013	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			
US	EQUUS(VI)	2013	G 5.0 GDI	OPTION [User Option]				x		
US	EQUUS(VI)	2013	G 5.0 GDI	IPM [Instrument Panel Module]	x	x	x	x	x	0056, 0068, 0098
US	EQUUS(VI)	2013	G 5.0 GDI	FAM [Front Area Module]	x	x	x	x	x	
US	EQUUS(VI)	2013	G 5.0 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	EQUUS(VI)	2013	G 5.0 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	EQUUS(VI)	2013	G 5.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	EQUUS(VI)	2013	G 5.0 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	EQUUS(VI)	2013	G 5.0 GDI	PSM [Power Seat Module]	x	x	x	x	x	0065
US	EQUUS(VI)	2013	G 5.0 GDI	SCM [Steering Column Module]	x	x	x	x	x	
US	EQUUS(VI)	2013	G 5.0 GDI	FBWS [Front Back Warning System]	x	x	x	x		
US	EQUUS(VI)	2013	G 5.0 GDI	PTM [Power Trunk Module]	x	x	x	x		
US	EQUUS(VI)	2013	G 5.0 GDI	PDM [Power Distribution Module]	x	x	x	x	x	
US	EQUUS(VI)	2013	G 5.0 GDI	ECW [Electric Control Wiper]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	EQUUS(VI)	2013	G 5.0 GDI	TUNER_AMP [Tuner / Amplifier]	x	x	x			0033
US	EQUUS(VI)	2013	G 5.0 GDI	VRS [Voice Recognition System]	x	x	x			0033
US	EQUUS(VI)	2013	G 5.0 GDI	HEADUNIT [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
US	EQUUS(VI)	2012	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	EQUUS(VI)	2012	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	EQUUS(VI)	2012	G 5.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	EQUUS(VI)	2012	G 5.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	EQUUS(VI)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	EQUUS(VI)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	EQUUS(VI)	2012	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	EQUUS(VI)	2012	G 5.0 GDI	EPS [Electronic Hydraulic Power Steering System]	x	x	x	x	x	
US	EQUUS(VI)	2012	G 5.0 GDI	ECS [Electronic Control Suspension]	x	x	x	x		
US	EQUUS(VI)	2012	G 5.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	EQUUS(VI)	2012	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	EQUUS(VI)	2012	G 5.0 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
US	EQUUS(VI)	2012	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	EQUUS(VI)	2012	G 5.0 GDI	SMKCODE [Smart Key Code Saving]				x		
US	EQUUS(VI)	2012	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
US	EQUUS(VI)	2012	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			
US	EQUUS(VI)	2012	G 5.0 GDI	OPTION [User Option]				x		
US	EQUUS(VI)	2012	G 5.0 GDI	IPM [Instrument Panel Module]	x	x	x	x	x	0056, 0068, 0098
US	EQUUS(VI)	2012	G 5.0 GDI	FAM [Front Area Module]	x	x	x	x	x	
US	EQUUS(VI)	2012	G 5.0 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	EQUUS(VI)	2012	G 5.0 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	EQUUS(VI)	2012	G 5.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	EQUUS(VI)	2012	G 5.0 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	EQUUS(VI)	2012	G 5.0 GDI	PSM [Power Seat Module]	x	x	x	x	x	0065
US	EQUUS(VI)	2012	G 5.0 GDI	SCM [Steering Column Module]	x	x	x	x	x	
US	EQUUS(VI)	2012	G 5.0 GDI	FBWS [Front Back Warning System]	x	x	x	x		
US	EQUUS(VI)	2012	G 5.0 GDI	PTM [Power Trunk Module]	x	x	x	x		
US	EQUUS(VI)	2012	G 5.0 GDI	PDM [Power Distribution Module]	x	x	x	x	x	
US	EQUUS(VI)	2012	G 5.0 GDI	ECW [Electric Control Wiper]	x	x	x	x		
US	EQUUS(VI)	2012	G 5.0 GDI	TUNER_AMP [Tuner / Amplifier]	x	x	x			0033

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	EQUUS(VI)	2012	G 5.0 GDI	VRS [Voice Recognition System]	x	x	x			0033
US	EQUUS(VI)	2012	G 5.0 GDI	HEADUNIT [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
US	EQUUS(VI)	2011	G 4.6 MPI	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	EQUUS(VI)	2011	G 4.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0019, 0114
US	EQUUS(VI)	2011	G 4.6 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	EQUUS(VI)	2011	G 4.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	EQUUS(VI)	2011	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	EQUUS(VI)	2011	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	EQUUS(VI)	2011	G 4.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	EQUUS(VI)	2011	G 4.6 MPI	EPS [Electronic Hydraulic Power Steering System]	x	x	x	x	x	
US	EQUUS(VI)	2011	G 4.6 MPI	ECS [Electronic Control Suspension]	x	x	x	x		
US	EQUUS(VI)	2011	G 4.6 MPI	SCC [Smart Cruise Control]	x	x	x	x		
US	EQUUS(VI)	2011	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	EQUUS(VI)	2011	G 4.6 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
US	EQUUS(VI)	2011	G 4.6 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	EQUUS(VI)	2011	G 4.6 MPI	SMKCODE [Smart Key Code Saving]				x		
US	EQUUS(VI)	2011	G 4.6 MPI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			
US	EQUUS(VI)	2011	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
US	EQUUS(VI)	2011	G 4.6 MPI	OPTION [User Option]				x		
US	EQUUS(VI)	2011	G 4.6 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	EQUUS(VI)	2011	G 4.6 MPI	IPM [Instrument Panel Module]	x	x	x	x	x	0056, 0068, 0098
US	EQUUS(VI)	2011	G 4.6 MPI	FAM [Front Area Module]	x	x	x	x	x	
US	EQUUS(VI)	2011	G 4.6 MPI	ADM [Assist Door Module]	x	x	x	x	x	
US	EQUUS(VI)	2011	G 4.6 MPI	DDM [Driver Door Module]	x	x	x	x	x	
US	EQUUS(VI)	2011	G 4.6 MPI	MFSW [Multi Function Switch]	x	x	x	x		
US	EQUUS(VI)	2011	G 4.6 MPI	PSM [Power Seat Module]	x	x	x	x	x	0065
US	EQUUS(VI)	2011	G 4.6 MPI	SCM [Steering Column Module]	x	x	x	x	x	
US	EQUUS(VI)	2011	G 4.6 MPI	FBWS [Front Back Warning System]	x	x	x	x		
US	EQUUS(VI)	2011	G 4.6 MPI	PTM [Power Trunk Module]	x	x	x	x		
US	EQUUS(VI)	2011	G 4.6 MPI	PDM [Power Distribution Module]	x	x	x	x	x	
US	EQUUS(VI)	2011	G 4.6 MPI	ECW [Electric Control Wiper]	x	x	x	x		
US	EQUUS(VI)	2011	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	x	x	x			0033
US	EQUUS(VI)	2011	G 4.6 MPI	VRS [Voice Recognition System]	x	x	x			0033

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	EQUUS(VI)	2011	G 4.6 MPI	HEADUNIT [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
US	G80(DH)	2017	G 3.8 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0143
US	G80(DH)	2017	G 3.8 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	G80(DH)	2017	G 3.8 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0076, 0085
US	G80(DH)	2017	G 3.8 GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
US	G80(DH)	2017	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	G80(DH)	2017	G 3.8 GDI	OCS [Occupant Classification Sensor]	x	x	x	x		
US	G80(DH)	2017	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	G80(DH)	2017	G 3.8 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	G80(DH)	2017	G 3.8 GDI	4WD [4WD Control]	x	x	x	x		
US	G80(DH)	2017	G 3.8 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	G80(DH)	2017	G 3.8 GDI	ECS [Electronic Control Suspension]	x	x	x	x	x	
US	G80(DH)	2017	G 3.8 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	G80(DH)	2017	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	G80(DH)	2017	G 3.8 GDI	PGS [Parking Guide System]	x	x	x	x	x	
US	G80(DH)	2017	G 3.8 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	G80(DH)	2017	G 3.8 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
US	G80(DH)	2017	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	G80(DH)	2017	G 3.8 GDI	AAF [Active Air Flap]	x	x	x	x	x	
US	G80(DH)	2017	G 3.8 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	G80(DH)	2017	G 3.8 GDI	PSB [Pre - safe Seat Belt]	x	x	x	x	x	
US	G80(DH)	2017	G 3.8 GDI	AVN [Audio Video Navigation (with DIS)]	x			x		0116
US	G80(DH)	2017	G 3.8 GDI	AVN [Audio Video Navigation (Non DIS)]	x			x		
US	G80(DH)	2017	G 3.8 GDI	AMP [Amplifier]						0005
US	G80(DH)	2017	G 3.8 GDI	HSWS [Haptic Steering Warning System]	x	x	x			
US	G80(DH)	2017	G 3.8 GDI	DSS [Driver Seat Switch]	x	x	x	x		
US	G80(DH)	2017	G 3.8 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	G80(DH)	2017	G 3.8 GDI	HUD [Head Up Display]	x	x	x	x		
US	G80(DH)	2017	G 3.8 GDI	PTM [Power Trunk Module]	x	x	x	x		
US	G80(DH)	2017	G 3.8 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	G80(DH)	2017	G 3.8 GDI	DDM [Driver Door Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	G80(DH)	2017	G 3.8 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	G80(DH)	2017	G 3.8 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	G80(DH)	2017	G 3.8 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
US	G80(DH)	2017	G 3.8 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	G80(DH)	2017	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	x	x	x			
US	G80(DH)	2017	G 3.8 GDI	SLB [Seat Lumbar Bolster]	x	x	x	x	x	
US	G80(DH)	2017	G 3.8 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	G80(DH)	2017	G 3.8 GDI	CGW [Central Gateway]	x	x	x			0051
US	G80(DH)	2017	G 3.8 GDI	I - BOX [I - BOX]	x	x	x			
US	G80(DH)	2017	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	G80(DH)	2017	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	G80(DH)	2017	G 5.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0076, 0085
US	G80(DH)	2017	G 5.0 GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
US	G80(DH)	2017	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	G80(DH)	2017	G 5.0 GDI	OCS [Occupant Classification Sensor]	x	x	x	x		
US	G80(DH)	2017	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	G80(DH)	2017	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	G80(DH)	2017	G 5.0 GDI	4WD [4WD Control]	x	x	x	x		
US	G80(DH)	2017	G 5.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	G80(DH)	2017	G 5.0 GDI	ECS [Electronic Control Suspension]	x	x	x	x	x	
US	G80(DH)	2017	G 5.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	G80(DH)	2017	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	G80(DH)	2017	G 5.0 GDI	PGS [Parking Guide System]	x	x	x	x	x	
US	G80(DH)	2017	G 5.0 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	G80(DH)	2017	G 5.0 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
US	G80(DH)	2017	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	G80(DH)	2017	G 5.0 GDI	AAF [Active Air Flap]	x	x	x	x	x	
US	G80(DH)	2017	G 5.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	G80(DH)	2017	G 5.0 GDI	PSB [Pre - safe Seat Belt]	x	x	x	x	x	
US	G80(DH)	2017	G 5.0 GDI	AVN [Audio Video Navigation (with DIS)]	x			x		0116
US	G80(DH)	2017	G 5.0 GDI	AVN [Audio Video Navigation (Non DIS)]	x			x		
US	G80(DH)	2017	G 5.0 GDI	AMP [Amplifier]						0005

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	G80(DH)	2017	G 5.0 GDI	HSWS [Haptic Steering Warning System]	x	x	x			
US	G80(DH)	2017	G 5.0 GDI	DSS [Driver Seat Switch]	x	x	x	x		
US	G80(DH)	2017	G 5.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	G80(DH)	2017	G 5.0 GDI	HUD [Head Up Display]	x	x	x	x		
US	G80(DH)	2017	G 5.0 GDI	PTM [Power Trunk Module]	x	x	x	x		
US	G80(DH)	2017	G 5.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	G80(DH)	2017	G 5.0 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	G80(DH)	2017	G 5.0 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	G80(DH)	2017	G 5.0 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	G80(DH)	2017	G 5.0 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
US	G80(DH)	2017	G 5.0 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	G80(DH)	2017	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	x	x	x			
US	G80(DH)	2017	G 5.0 GDI	SLB [Seat Lumbar Bolster]	x	x	x	x	x	
US	G80(DH)	2017	G 5.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	G80(DH)	2017	G 5.0 GDI	CGW [Central Gateway]	x	x	x			0051
US	G80(DH)	2017	G 5.0 GDI	I - BOX [I - BOX]	x	x	x			
US	G90(HI)	2017	G 3.3 T-GDI	ENGINE [Engine Control]	x	x	x	x	x	0012, 0015, 0050, 0053, 0109, 0113, 0143
US	G90(HI)	2017	G 3.3 T-GDI	AT [Automatic Transaxle]	x	x	x	x		0006, 0114
US	G90(HI)	2017	G 3.3 T-GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	G90(HI)	2017	G 3.3 T-GDI	SCCAEB [SCC / AEB]	x	x	x	x		
US	G90(HI)	2017	G 3.3 T-GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	G90(HI)	2017	G 3.3 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	G90(HI)	2017	G 3.3 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	G90(HI)	2017	G 3.3 T-GDI	OCS [Occupant Classification System]	x	x	x	x		
US	G90(HI)	2017	G 3.3 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	G90(HI)	2017	G 3.3 T-GDI	4WD [4WD Control]	x	x	x	x	x	
US	G90(HI)	2017	G 3.3 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	G90(HI)	2017	G 3.3 T-GDI	ECS [Electronic Control Suspension]	x	x	x	x		
US	G90(HI)	2017	G 3.3 T-GDI	PGS [Parking Guide System]	x	x	x	x		
US	G90(HI)	2017	G 3.3 T-GDI	MCS [Multi - View Camera System]	x	x	x	x	x	0007
US	G90(HI)	2017	G 3.3 T-GDI	BSD [Blind Spot Detection]	x	x	x	x		
US	G90(HI)	2017	G 3.3 T-GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
US	G90(HI)	2017	G 3.3 T-GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	G90(HI)	2017	G 3.3 T-GDI	AAF [Active Air Flap]	x	x	x	x	x	
US	G90(HI)	2017	G 3.3 T-GDI	ESHIFTER [E - Shifter]	x	x	x	x	x	
US	G90(HI)	2017	G 3.3 T-GDI	PSB [Pre - safe Seat Belt]	x	x	x	x	x	
US	G90(HI)	2017	G 3.3 T-GDI	AMP [Amplifier]						0005
US	G90(HI)	2017	G 3.3 T-GDI	AVN [Audio Video Navigation]	x	x	x	x		
US	G90(HI)	2017	G 3.3 T-GDI	PSM - RL [Power Seat Module - Rear Left]	x	x	x	x	x	0122, 0123
US	G90(HI)	2017	G 3.3 T-GDI	PSM - RR [Power Seat Module - Rear Right]	x	x	x	x	x	0122, 0123
US	G90(HI)	2017	G 3.3 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	G90(HI)	2017	G 3.3 T-GDI	HUD [Head Up Display]	x	x	x	x		
US	G90(HI)	2017	G 3.3 T-GDI	PTM [Power Trunk Module]	x	x	x	x		
US	G90(HI)	2017	G 3.3 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122, 0123
US	G90(HI)	2017	G 3.3 T-GDI	WPC [Wireless Power Charger]	x	x	x	x	x	
US	G90(HI)	2017	G 3.3 T-GDI	APSM [Assist Power Seat Module]	x	x	x	x	x	0122, 0123
US	G90(HI)	2017	G 3.3 T-GDI	IBU - BCM [Intergrated Body Control Unit - BCM]	x	x	x	x	x	
US	G90(HI)	2017	G 3.3 T-GDI	IBU - SMK [Intergrated Body Control Unit - SMK]	x	x	x	x	x	0027, 0056, 0118
US	G90(HI)	2017	G 3.3 T-GDI	IBU - TPMS [Intergrated Body Control Unit - TPMS]	x	x	x			
US	G90(HI)	2017	G 3.3 T-GDI	RWPC [Rear Wireless Power Charger]	x	x	x	x	x	
US	G90(HI)	2017	G 3.3 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	G90(HI)	2017	G 3.3 T-GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
US	G90(HI)	2017	G 3.3 T-GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	G90(HI)	2017	G 3.3 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	G90(HI)	2017	G 3.3 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	0073
US	G90(HI)	2017	G 3.3 T-GDI	ARS [Rear Armrest Switch]	x	x	x	x	x	0122
US	G90(HI)	2017	G 3.3 T-GDI	CGW [Central Gateway]	x	x	x	x		0051
US	G90(HI)	2017	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0050, 0053, 0109, 0143
US	G90(HI)	2017	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0006, 0114
US	G90(HI)	2017	G 5.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	G90(HI)	2017	G 5.0 GDI	SCCAEB [SCC / AEB]	x	x	x	x		
US	G90(HI)	2017	G 5.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	G90(HI)	2017	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	G90(HI)	2017	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	G90(HI)	2017	G 5.0 GDI	OCS [Occupant Classification System]	x	x	x	x		
US	G90(HI)	2017	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	G90(HI)	2017	G 5.0 GDI	4WD [4WD Control]	x	x	x	x	x	
US	G90(HI)	2017	G 5.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	G90(HI)	2017	G 5.0 GDI	ECS [Electronic Control Suspension]	x	x	x	x		
US	G90(HI)	2017	G 5.0 GDI	PGS [Parking Guide System]	x	x	x	x		
US	G90(HI)	2017	G 5.0 GDI	MCS [Multi - View Camera System]	x	x	x	x	x	0007
US	G90(HI)	2017	G 5.0 GDI	BSD [Blind Spot Detection]	x	x	x	x		
US	G90(HI)	2017	G 5.0 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
US	G90(HI)	2017	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	G90(HI)	2017	G 5.0 GDI	AAF [Active Air Flap]	x	x	x	x	x	
US	G90(HI)	2017	G 5.0 GDI	ESHIFTER [E - Shifter]	x	x	x	x	x	
US	G90(HI)	2017	G 5.0 GDI	PSB [Pre - safe Seat Belt]	x	x	x	x	x	
US	G90(HI)	2017	G 5.0 GDI	AMP [Amplifier]						0005
US	G90(HI)	2017	G 5.0 GDI	AVN [Audio Video Navigation]	x	x	x	x		
US	G90(HI)	2017	G 5.0 GDI	PSM - RL [Power Seat Module - Rear Left]	x	x	x	x	x	0122, 0123
US	G90(HI)	2017	G 5.0 GDI	PSM - RR [Power Seat Module - Rear Right]	x	x	x	x	x	0122, 0123
US	G90(HI)	2017	G 5.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	G90(HI)	2017	G 5.0 GDI	HUD [Head Up Display]	x	x	x	x		
US	G90(HI)	2017	G 5.0 GDI	PTM [Power Trunk Module]	x	x	x	x		
US	G90(HI)	2017	G 5.0 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122, 0123
US	G90(HI)	2017	G 5.0 GDI	WPC [Wireless Power Charger]	x	x	x	x	x	
US	G90(HI)	2017	G 5.0 GDI	APSM [Assist Power Seat Module]	x	x	x	x	x	0122, 0123
US	G90(HI)	2017	G 5.0 GDI	IBU - BCM [Intergrated Body Control Unit - BCM]	x	x	x	x	x	
US	G90(HI)	2017	G 5.0 GDI	IBU - SMK [Intergrated Body Control Unit - SMK]	x	x	x	x	x	0027, 0056, 0118
US	G90(HI)	2017	G 5.0 GDI	IBU - TPMS [Intergrated Body Control Unit - TPMS]	x	x	x			
US	G90(HI)	2017	G 5.0 GDI	RWPC [Rear Wireless Power Charger]	x	x	x	x	x	
US	G90(HI)	2017	G 5.0 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	G90(HI)	2017	G 5.0 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
US	G90(HI)	2017	G 5.0 GDI	MFSW [Multi Function Switch]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	G90(HI)	2017	G 5.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	G90(HI)	2017	G 5.0 GDI	DDM [Driver Door Module]	x	x	x	x	x	0073
US	G90(HI)	2017	G 5.0 GDI	ARS [Rear Armrest Switch]	x	x	x	x	x	0122
US	G90(HI)	2017	G 5.0 GDI	CGW [Central Gateway]	x	x	x	x		0051
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	AT [Automatic Transaxle]	x	x	x	x		0114
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	PDM [Power Distribution Module]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				x		
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	CLU [Cluster Module]	x			x	x	
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	BCM [Body Control Module]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	TMU [Telematics Unit]	x	x	x			
US	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	ENGINE [Engine Control]	×	×	×	×		0012, 0015, 0053, 0109, 0143
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	AT [Automatic Transaxle]	×	×	×	×		0114
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	ESC [Electronic Stability Control]	×	×	×	×	×	0062, 0085
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			0099, 0102
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	×	×	×			0099, 0102
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	AIRCON [Air Conditioner]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	×	×	×		×	
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	AHLS [Automatic Headlamp Leveling System]	×	×	×	×		0083, 0124
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	IMMO [Immobilizer]				×		0081, 0084, 0094, 0105, 0127
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	PDM [Power Distribution Module]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	SMKCODE [Smart Key Code Saving]				×		
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	SMK [Smart Key Unit]	×	×	×	×	×	0056, 0098, 0118, 0133
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	SJB [Smart Junction Block]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	CLU [Cluster Module]	×			×	×	
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	BCM [Body Control Module]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	TMU [Telematics Unit]	×	×	×			
US	GENESIS COUPE(BK)	2016	G 3.8 GDI	CODE [Transmitter Code Saving]				×		0026
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	ENGINE [Engine Control]	×	×	×	×		0012, 0015, 0053, 0109, 0113, 0143
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AT [Automatic Transaxle]	×	×	×	×		0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	ESC [Electronic Stability Control]	×	×	×	×	×	0062, 0085
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	×	×	×			0099, 0102
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	×	×	×			0099, 0102
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	TPMS [Tire Pressure Monitoring System]	×	×	×		×	
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AHLS [Automatic Headlamp Leveling System]	×	×	×	×		0083, 0124
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	IMMO [Immobilizer]				×		0081, 0084, 0094, 0105, 0127
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	PDM [Power Distribution Module]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				×		
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	SMK [Smart Key Unit]	×	×	×	×	×	0056, 0098, 0118, 0133
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	SJB [Smart Junction Block]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	CLU [Cluster Module]	×			×	×	
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	BCM [Body Control Module]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	TMU [Telematics Unit]	×	×	×			
US	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	CODE [Transmitter Code Saving]				×		0026
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	ENGINE [Engine Control]	×	×	×	×		0012, 0015, 0053, 0109, 0143
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	AT [Automatic Transaxle]	×	×	×	×		0114
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	ESC [Electronic Stability Control]	×	×	×	×	×	0062, 0085
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			0099, 0102

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	PDM [Power Distribution Module]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	SMKCODE [Smart Key Code Saving]				x		
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	CLU [Cluster Module]	x			x	x	
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	TMU [Telematics Unit]	x	x	x			
US	GENESIS COUPE(BK)	2015	G 3.8 GDI	CODE [Transmitter Code Saving]				x		0026
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AT [Automatic Transaxle]	x	x	x	x		0114
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	PDM [Power Distribution Module]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				x		
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	CLU [Cluster Module]	x			x	x	
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	BCM [Body Control Module]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	TMU [Telematics Unit]	x	x	x			
US	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	CODE [Transmitter Code Saving]				x		0026
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0143
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083, 0124

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	PDM [Power Distribution Module]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	SMKCODE [Smart Key Code Saving]				x		
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	CLU [Cluster Module]	x			x	x	
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	TMU [Telematics Unit]	x	x	x			
US	GENESIS COUPE(BK)	2014	G 3.8 GDI	CODE [Transmitter Code Saving]				x		0026
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AT [Automatic Transaxle]	x	x	x	x		0114
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	PDM [Power Distribution Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				×		
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	SMK [Smart Key Unit]	×	×	×	×	×	0056, 0098, 0118, 0133
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	SJB [Smart Junction Block]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	CLU [Cluster Module]	×			×	×	
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	BCM [Body Control Module]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	TMU [Telematics Unit]	×	×	×			
US	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	CODE [Transmitter Code Saving]				×		0026
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	ENGINE [Engine Control]	×	×	×	×		0012, 0015, 0053, 0109, 0143
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	AT [Automatic Transaxle]	×	×	×	×		0114
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	ESC [Electronic Stability Control]	×	×	×	×	×	0062
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			0099, 0102
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	×	×	×			0099, 0102
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	AIRCON [Air Conditioner]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	×	×	×		×	
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	AHLS [Automatic Headlamp Leveling System]	×	×	×	×		0083, 0124
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	IMMO [Immobilizer]				×		0081, 0084, 0094, 0105, 0127
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	PDM [Power Distribution Module]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	SMKCODE [Smart Key Code Saving]				×		
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	SMK [Smart Key Unit]	×	×	×	×	×	0056, 0098, 0118, 0133

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	SJB [Smart Junction Block]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	CLU [Cluster Module]	×			×	×	
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	BCM [Body Control Module]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	TMU [Telematics Unit]	×	×	×			
US	GENESIS COUPE(BK)	2013	G 3.8 GDI	CODE [Transmitter Code Saving]				×		0026
US	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	ENGINE [Engine Control]	×	×	×	×	×	0015, 0053, 0097, 0109, 0113, 0143
US	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	ENGINE [Engine Control]	×	×	×	×	×	0015, 0053, 0109, 0113, 0143
US	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0132
US	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	ESC [Electronic Stability Control]	×	×	×	×	×	0062
US	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	×	×	×			0099, 0102
US	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	×	×	×			0099, 0102
US	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	TPMS [Tire Pressure Monitoring System]	×	×	×		×	
US	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AHLS [Automatic Headlamp Leveling System]	×	×	×	×		0083, 0124
US	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	IMMO [Immobilizer]				×		0081, 0084, 0094, 0105, 0127
US	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
US	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				×		
US	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	PDM [Power Distribution Module]	×	×	×	×	×	0042
US	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	BCM [Body Control Module]	×			×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	CODE [Transmitter Code Saving]				×		0026
US	GENESIS COUPE(BK)	2012	G 3.8 MPI	ENGINE [Engine Control]	×	×	×	×	×	0015, 0053, 0109, 0143
US	GENESIS COUPE(BK)	2012	G 3.8 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0019, 0114
US	GENESIS COUPE(BK)	2012	G 3.8 MPI	ESC [Electronic Stability Control]	×	×	×	×	×	0062
US	GENESIS COUPE(BK)	2012	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			0099, 0102
US	GENESIS COUPE(BK)	2012	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			0099, 0102
US	GENESIS COUPE(BK)	2012	G 3.8 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2012	G 3.8 MPI	TPMS [Tire Pressure Monitoring System]	×	×	×		×	
US	GENESIS COUPE(BK)	2012	G 3.8 MPI	AHLS [Automatic Headlamp Leveling System]	×	×	×	×		0083, 0124
US	GENESIS COUPE(BK)	2012	G 3.8 MPI	IMMO [Immobilizer]				×		0081, 0084, 0094, 0105, 0127
US	GENESIS COUPE(BK)	2012	G 3.8 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
US	GENESIS COUPE(BK)	2012	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				×		
US	GENESIS COUPE(BK)	2012	G 3.8 MPI	PDM [Power Distribution Module]	×	×	×	×	×	0042
US	GENESIS COUPE(BK)	2012	G 3.8 MPI	BCM [Body Control Module]	×			×	×	
US	GENESIS COUPE(BK)	2012	G 3.8 MPI	CODE [Transmitter Code Saving]				×		0026
US	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	ENGINE [Engine Control]	×	×	×	×	×	0015, 0053, 0097, 0109, 0113, 0143
US	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	ENGINE [Engine Control]	×	×	×	×	×	0015, 0053, 0109, 0113, 0143
US	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AT [Automatic Transaxle]	×	×	×	×	×	0114, 0132
US	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	ESC [Electronic Stability Control]	×	×	×	×	×	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
US	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				x		
US	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	BCM [Body Control Module]	x			x	x	
US	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	CODE [Transmitter Code Saving]				x		0026
US	GENESIS COUPE(BK)	2011	G 3.8 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
US	GENESIS COUPE(BK)	2011	G 3.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0019, 0114
US	GENESIS COUPE(BK)	2011	G 3.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	GENESIS COUPE(BK)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS COUPE(BK)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS COUPE(BK)	2011	G 3.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2011	G 3.8 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS COUPE(BK)	2011	G 3.8 MPI	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083, 0124

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS COUPE(BK)	2011	G 3.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS COUPE(BK)	2011	G 3.8 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
US	GENESIS COUPE(BK)	2011	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				x		
US	GENESIS COUPE(BK)	2011	G 3.8 MPI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS COUPE(BK)	2011	G 3.8 MPI	BCM [Body Control Module]	x			x	x	
US	GENESIS COUPE(BK)	2011	G 3.8 MPI	CODE [Transmitter Code Saving]				x		0026
US	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0097, 0109, 0113, 0143
US	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
US	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0132
US	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
US	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				x		
US	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	PDM [Power Distribution Module]	x	x	x	x	x	0042

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	BCM [Body Control Module]	×			×	×	
US	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	CODE [Transmitter Code Saving]				×		0026
US	GENESIS COUPE(BK)	2010	G 3.8 MPI	ENGINE [Engine Control]	×	×	×	×	×	0015, 0053, 0109, 0143
US	GENESIS COUPE(BK)	2010	G 3.8 MPI	AT [Automatic Transaxle]	×	×	×	×	×	0019, 0114
US	GENESIS COUPE(BK)	2010	G 3.8 MPI	ESC [Electronic Stability Control]	×	×	×	×	×	0062
US	GENESIS COUPE(BK)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	×	×	×			0099, 0102
US	GENESIS COUPE(BK)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	×	×	×			0099, 0102
US	GENESIS COUPE(BK)	2010	G 3.8 MPI	AIRCON [Air Conditioner]	×	×	×	×	×	
US	GENESIS COUPE(BK)	2010	G 3.8 MPI	TPMS [Tire Pressure Monitoring System]	×	×	×		×	
US	GENESIS COUPE(BK)	2010	G 3.8 MPI	AHLS [Automatic Headlamp Leveling System]	×	×	×	×		0083, 0124
US	GENESIS COUPE(BK)	2010	G 3.8 MPI	IMMO [Immobilizer]				×		0081, 0084, 0094, 0105, 0127
US	GENESIS COUPE(BK)	2010	G 3.8 MPI	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
US	GENESIS COUPE(BK)	2010	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				×		
US	GENESIS COUPE(BK)	2010	G 3.8 MPI	PDM [Power Distribution Module]	×	×	×	×	×	0042
US	GENESIS COUPE(BK)	2010	G 3.8 MPI	BCM [Body Control Module]	×			×	×	
US	GENESIS COUPE(BK)	2010	G 3.8 MPI	CODE [Transmitter Code Saving]				×		0026
US	GENESIS(BH)	2014	G 3.8 GDI	ENGINE [Engine Control]	×	×	×	×	×	0015, 0053, 0109, 0143
US	GENESIS(BH)	2014	G 3.8 GDI	AT [Automatic Transaxle]	×	×	×	×		0114
US	GENESIS(BH)	2014	G 3.8 GDI	ESC [Electronic Stability Control]	×	×	×	×	×	0062, 0077, 0082, 0100
US	GENESIS(BH)	2014	G 3.8 GDI	EPB [Electric Parking Brake]	×	×	×	×	×	
US	GENESIS(BH)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			0099
US	GENESIS(BH)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	×	×	×			0099, 0102
US	GENESIS(BH)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	×	×	×			0099

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS(BH)	2014	G 3.8 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 3.8 GDI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 3.8 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(BH)	2014	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2014	G 3.8 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
US	GENESIS(BH)	2014	G 3.8 GDI	AHLS [AHLS]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2014	G 3.8 GDI	AFLS [AFLS (HID)]	x	x	x	x	x	0021
US	GENESIS(BH)	2014	G 3.8 GDI	AFLS [AFLS (LED)]	x	x	x	x	x	0004, 0021
US	GENESIS(BH)	2014	G 3.8 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2014	G 3.8 GDI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0056, 0118
US	GENESIS(BH)	2014	G 3.8 GDI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2014	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			
US	GENESIS(BH)	2014	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
US	GENESIS(BH)	2014	G 3.8 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2014	G 3.8 GDI	IPM [Inter Panel Module (with SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2014	G 3.8 GDI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 3.8 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 3.8 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 3.8 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 3.8 GDI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 3.8 GDI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2014	G 3.8 GDI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2014	G 3.8 GDI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2014	G 3.8 GDI	OPTION [User Option]				x		
US	GENESIS(BH)	2014	G 3.8 GDI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 3.8 GDI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2014	G 3.8 GDI	DIS [Multimedia]	x	x		x		
US	GENESIS(BH)	2014	G 3.8 GDI	TMU [Telematics Unit]	x	x	x			
US	GENESIS(BH)	2014	G 3.8 GDI	CODE [Transmitter Code Saving]				x		
US	GENESIS(BH)	2014	G 4.6 MPI	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	GENESIS(BH)	2014	G 4.6 MPI	AT [Automatic Transaxle]	x	x	x	x		0114
US	GENESIS(BH)	2014	G 4.6 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2014	G 4.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	GENESIS(BH)	2014	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS(BH)	2014	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	GENESIS(BH)	2014	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS(BH)	2014	G 4.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 4.6 MPI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 4.6 MPI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(BH)	2014	G 4.6 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2014	G 4.6 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
US	GENESIS(BH)	2014	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2014	G 4.6 MPI	AFLS [AFLS (HID)]	x	x	x	x	x	0021
US	GENESIS(BH)	2014	G 4.6 MPI	AFLS [AFLS (LED)]	x	x	x	x	x	0004, 0021
US	GENESIS(BH)	2014	G 4.6 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2014	G 4.6 MPI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0056, 0118
US	GENESIS(BH)	2014	G 4.6 MPI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2014	G 4.6 MPI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			
US	GENESIS(BH)	2014	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
US	GENESIS(BH)	2014	G 4.6 MPI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2014	G 4.6 MPI	IPM [Inter Panel Module (with SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2014	G 4.6 MPI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 4.6 MPI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 4.6 MPI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 4.6 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 4.6 MPI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 4.6 MPI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2014	G 4.6 MPI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2014	G 4.6 MPI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2014	G 4.6 MPI	OPTION [User Option]				x		
US	GENESIS(BH)	2014	G 4.6 MPI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 4.6 MPI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2014	G 4.6 MPI	DIS [Multimedia]	x	x		x		
US	GENESIS(BH)	2014	G 4.6 MPI	TMU [Telematics Unit]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2014	G 4.6 MPI	CODE [Transmitter Code Saving]				x		
US	GENESIS(BH)	2014	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	GENESIS(BH)	2014	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	GENESIS(BH)	2014	G 5.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	GENESIS(BH)	2014	G 5.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	GENESIS(BH)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS(BH)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	GENESIS(BH)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS(BH)	2014	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 5.0 GDI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 5.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(BH)	2014	G 5.0 GDI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2014	G 5.0 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
US	GENESIS(BH)	2014	G 5.0 GDI	AHLS [AHLS]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2014	G 5.0 GDI	AFLS [AFLS (HID)]	x	x	x	x	x	0021
US	GENESIS(BH)	2014	G 5.0 GDI	AFLS [AFLS (LED)]	x	x	x	x	x	0004, 0021
US	GENESIS(BH)	2014	G 5.0 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2014	G 5.0 GDI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0056, 0118
US	GENESIS(BH)	2014	G 5.0 GDI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2014	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			
US	GENESIS(BH)	2014	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
US	GENESIS(BH)	2014	G 5.0 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2014	G 5.0 GDI	IPM [Inter Panel Module (with SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2014	G 5.0 GDI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 5.0 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 5.0 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 5.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 5.0 GDI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 5.0 GDI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2014	G 5.0 GDI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2014	G 5.0 GDI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2014	G 5.0 GDI	OPTION [User Option]				x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2014	G 5.0 GDI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2014	G 5.0 GDI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2014	G 5.0 GDI	DIS [Multimedia]	x	x		x		
US	GENESIS(BH)	2014	G 5.0 GDI	TMU [Telematics Unit]	x	x	x			
US	GENESIS(BH)	2014	G 5.0 GDI	CODE [Transmitter Code Saving]				x		
US	GENESIS(BH)	2013	G 3.8 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
US	GENESIS(BH)	2013	G 3.8 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	GENESIS(BH)	2013	G 3.8 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	GENESIS(BH)	2013	G 3.8 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	GENESIS(BH)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS(BH)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	GENESIS(BH)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS(BH)	2013	G 3.8 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 3.8 GDI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 3.8 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(BH)	2013	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2013	G 3.8 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
US	GENESIS(BH)	2013	G 3.8 GDI	AHLS [AHLS]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2013	G 3.8 GDI	AFLS [AFLS (HID)]	x	x	x	x	x	0021
US	GENESIS(BH)	2013	G 3.8 GDI	AFLS [AFLS (LED)]	x	x	x	x	x	0004, 0021
US	GENESIS(BH)	2013	G 3.8 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2013	G 3.8 GDI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0056, 0118
US	GENESIS(BH)	2013	G 3.8 GDI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2013	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			
US	GENESIS(BH)	2013	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
US	GENESIS(BH)	2013	G 3.8 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2013	G 3.8 GDI	IPM [Inter Panel Module (With SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2013	G 3.8 GDI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 3.8 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 3.8 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 3.8 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 3.8 GDI	PSM [Power Seat Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2013	G 3.8 GDI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2013	G 3.8 GDI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2013	G 3.8 GDI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2013	G 3.8 GDI	OPTION [User Option]				x		
US	GENESIS(BH)	2013	G 3.8 GDI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 3.8 GDI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2013	G 3.8 GDI	DIS [Multimedia]	x	x		x		
US	GENESIS(BH)	2013	G 3.8 GDI	TMU [Telematics Unit]	x	x	x			
US	GENESIS(BH)	2013	G 3.8 GDI	CODE [Transmitter Code Saving]				x		
US	GENESIS(BH)	2013	G 4.6 MPI	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	GENESIS(BH)	2013	G 4.6 MPI	AT [Automatic Transaxle]	x	x	x	x		0114
US	GENESIS(BH)	2013	G 4.6 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	GENESIS(BH)	2013	G 4.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	GENESIS(BH)	2013	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS(BH)	2013	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	GENESIS(BH)	2013	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS(BH)	2013	G 4.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 4.6 MPI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 4.6 MPI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(BH)	2013	G 4.6 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2013	G 4.6 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
US	GENESIS(BH)	2013	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2013	G 4.6 MPI	AFLS [AFLS (HID)]	x	x	x	x	x	0021
US	GENESIS(BH)	2013	G 4.6 MPI	AFLS [AFLS (LED)]	x	x	x	x	x	0004, 0021
US	GENESIS(BH)	2013	G 4.6 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2013	G 4.6 MPI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0056, 0118
US	GENESIS(BH)	2013	G 4.6 MPI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2013	G 4.6 MPI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			
US	GENESIS(BH)	2013	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
US	GENESIS(BH)	2013	G 4.6 MPI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2013	G 4.6 MPI	IPM [Inter Panel Module (With SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2013	G 4.6 MPI	FAM [Front Area Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2013	G 4.6 MPI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 4.6 MPI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 4.6 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 4.6 MPI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 4.6 MPI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2013	G 4.6 MPI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2013	G 4.6 MPI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2013	G 4.6 MPI	OPTION [User Option]				x		
US	GENESIS(BH)	2013	G 4.6 MPI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 4.6 MPI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2013	G 4.6 MPI	DIS [Multimedia]	x	x		x		
US	GENESIS(BH)	2013	G 4.6 MPI	TMU [Telematics Unit]	x	x	x			
US	GENESIS(BH)	2013	G 4.6 MPI	CODE [Transmitter Code Saving]				x		
US	GENESIS(BH)	2013	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	GENESIS(BH)	2013	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	GENESIS(BH)	2013	G 5.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	GENESIS(BH)	2013	G 5.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	GENESIS(BH)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS(BH)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	GENESIS(BH)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS(BH)	2013	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 5.0 GDI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 5.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(BH)	2013	G 5.0 GDI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2013	G 5.0 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
US	GENESIS(BH)	2013	G 5.0 GDI	AHLS [AHLS]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2013	G 5.0 GDI	AFLS [AFLS (HID)]	x	x	x	x	x	0021
US	GENESIS(BH)	2013	G 5.0 GDI	AFLS [AFLS (LED)]	x	x	x	x	x	0004, 0021
US	GENESIS(BH)	2013	G 5.0 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2013	G 5.0 GDI	SMK [Smart Key Code Saving]	x	x	x	x	x	0027, 0056, 0118
US	GENESIS(BH)	2013	G 5.0 GDI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2013	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2013	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
US	GENESIS(BH)	2013	G 5.0 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2013	G 5.0 GDI	IPM [Inter Panel Module (With SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2013	G 5.0 GDI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 5.0 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 5.0 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 5.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 5.0 GDI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 5.0 GDI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2013	G 5.0 GDI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2013	G 5.0 GDI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2013	G 5.0 GDI	OPTION [User Option]				x		
US	GENESIS(BH)	2013	G 5.0 GDI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2013	G 5.0 GDI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2013	G 5.0 GDI	DIS [Multimedia]	x	x		x		
US	GENESIS(BH)	2013	G 5.0 GDI	TMU [Telematics Unit]	x	x	x			
US	GENESIS(BH)	2013	G 5.0 GDI	CODE [Transmitter Code Saving]				x		
US	GENESIS(BH)	2012	G 3.8 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
US	GENESIS(BH)	2012	G 3.8 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	GENESIS(BH)	2012	G 3.8 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	GENESIS(BH)	2012	G 3.8 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	GENESIS(BH)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS(BH)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	GENESIS(BH)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS(BH)	2012	G 3.8 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 3.8 GDI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 3.8 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(BH)	2012	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2012	G 3.8 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
US	GENESIS(BH)	2012	G 3.8 GDI	AFLS [AFLS (LED)]	x	x	x	x	x	0004, 0021
US	GENESIS(BH)	2012	G 3.8 GDI	AFLS [AFLS (HID)]	x	x	x	x	x	0021
US	GENESIS(BH)	2012	G 3.8 GDI	AHLS [AHLS]	x	x	x	x		0083, 0124

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2012	G 3.8 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2012	G 3.8 GDI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2012	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
US	GENESIS(BH)	2012	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			
US	GENESIS(BH)	2012	G 3.8 GDI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2012	G 3.8 GDI	IPM [Inter Panel Module (With SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2012	G 3.8 GDI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 3.8 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 3.8 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 3.8 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 3.8 GDI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 3.8 GDI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2012	G 3.8 GDI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2012	G 3.8 GDI	OPTION [User Option]				x		
US	GENESIS(BH)	2012	G 3.8 GDI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2012	G 3.8 GDI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 3.8 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2012	G 3.8 GDI	HEADUNIT [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
US	GENESIS(BH)	2012	G 3.8 GDI	VRS [Voice Recognition System]	x	x	x			0033
US	GENESIS(BH)	2012	G 3.8 GDI	TUNER_AMP [Tuner / Amplifier]	x	x	x			0033
US	GENESIS(BH)	2012	G 3.8 GDI	CODE [Transmitter Code Saving]				x		
US	GENESIS(BH)	2012	G 4.6 MPI	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	GENESIS(BH)	2012	G 4.6 MPI	AT [Automatic Transaxle]	x	x	x	x		0114
US	GENESIS(BH)	2012	G 4.6 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	GENESIS(BH)	2012	G 4.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	GENESIS(BH)	2012	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS(BH)	2012	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	GENESIS(BH)	2012	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS(BH)	2012	G 4.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 4.6 MPI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 4.6 MPI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(BH)	2012	G 4.6 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2012	G 4.6 MPI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
US	GENESIS(BH)	2012	G 4.6 MPI	AFLS [AFLS (LED)]	x	x	x	x	x	0004, 0021
US	GENESIS(BH)	2012	G 4.6 MPI	AFLS [AFLS (HID)]	x	x	x	x	x	0021
US	GENESIS(BH)	2012	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2012	G 4.6 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2012	G 4.6 MPI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2012	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
US	GENESIS(BH)	2012	G 4.6 MPI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			
US	GENESIS(BH)	2012	G 4.6 MPI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2012	G 4.6 MPI	IPM [Inter Panel Module (With SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2012	G 4.6 MPI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 4.6 MPI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 4.6 MPI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 4.6 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 4.6 MPI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 4.6 MPI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2012	G 4.6 MPI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2012	G 4.6 MPI	OPTION [User Option]				x		
US	GENESIS(BH)	2012	G 4.6 MPI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2012	G 4.6 MPI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 4.6 MPI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2012	G 4.6 MPI	HEADUNIT [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
US	GENESIS(BH)	2012	G 4.6 MPI	VRS [Voice Recognition System]	x	x	x			0033
US	GENESIS(BH)	2012	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	x	x	x			0033
US	GENESIS(BH)	2012	G 4.6 MPI	CODE [Transmitter Code Saving]				x		
US	GENESIS(BH)	2012	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	GENESIS(BH)	2012	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	GENESIS(BH)	2012	G 5.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	GENESIS(BH)	2012	G 5.0 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	GENESIS(BH)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS(BH)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	GENESIS(BH)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2012	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 5.0 GDI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 5.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(BH)	2012	G 5.0 GDI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2012	G 5.0 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079, 0080
US	GENESIS(BH)	2012	G 5.0 GDI	AFLS [AFLS (LED)]	x	x	x	x	x	0004, 0021
US	GENESIS(BH)	2012	G 5.0 GDI	AFLS [AFLS (HID)]	x	x	x	x	x	0021
US	GENESIS(BH)	2012	G 5.0 GDI	AHLS [AHLS]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2012	G 5.0 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2012	G 5.0 GDI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2012	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	x	x	x			
US	GENESIS(BH)	2012	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	x	x	x			
US	GENESIS(BH)	2012	G 5.0 GDI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2012	G 5.0 GDI	IPM [Inter Panel Module (With SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2012	G 5.0 GDI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 5.0 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 5.0 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 5.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 5.0 GDI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 5.0 GDI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2012	G 5.0 GDI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2012	G 5.0 GDI	OPTION [User Option]				x		
US	GENESIS(BH)	2012	G 5.0 GDI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2012	G 5.0 GDI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2012	G 5.0 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2012	G 5.0 GDI	HEADUNIT [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
US	GENESIS(BH)	2012	G 5.0 GDI	VRS [Voice Recognition System]	x	x	x			0033
US	GENESIS(BH)	2012	G 5.0 GDI	TUNER_AMP [Tuner / Amplifier]	x	x	x			0033
US	GENESIS(BH)	2012	G 5.0 GDI	CODE [Transmitter Code Saving]				x		
US	GENESIS(BH)	2011	G 3.3 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
US	GENESIS(BH)	2011	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	GENESIS(BH)	2011	G 3.3 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	GENESIS(BH)	2011	G 3.3 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2011	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	GENESIS(BH)	2011	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS(BH)	2011	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	GENESIS(BH)	2011	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS(BH)	2011	G 3.3 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.3 MPI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.3 MPI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(BH)	2011	G 3.3 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2011	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2011	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	GENESIS(BH)	2011	G 3.3 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2011	G 3.3 MPI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2011	G 3.3 MPI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2011	G 3.3 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.3 MPI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.3 MPI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.3 MPI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.3 MPI	IPM [Inter Panel Module (With SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2011	G 3.3 MPI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.3 MPI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2011	G 3.3 MPI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2011	G 3.3 MPI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2011	G 3.3 MPI	OPTION [User Option]				x		
US	GENESIS(BH)	2011	G 3.3 MPI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.3 MPI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2011	G 3.3 MPI	HEADUNIT [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
US	GENESIS(BH)	2011	G 3.3 MPI	TUNER_AMP [Tuner / Amplifier]	x	x	x			0033
US	GENESIS(BH)	2011	G 3.3 MPI	VRS [Voice Recognition System]	x	x	x			0033
US	GENESIS(BH)	2011	G 3.3 MPI	CODE [Transmitter Code Saving]				x		
US	GENESIS(BH)	2011	G 3.8 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
US	GENESIS(BH)	2011	G 3.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	GENESIS(BH)	2011	G 3.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2011	G 3.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	GENESIS(BH)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS(BH)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	GENESIS(BH)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS(BH)	2011	G 3.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.8 MPI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.8 MPI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(BH)	2011	G 3.8 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2011	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2011	G 3.8 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	GENESIS(BH)	2011	G 3.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2011	G 3.8 MPI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2011	G 3.8 MPI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2011	G 3.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.8 MPI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.8 MPI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.8 MPI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.8 MPI	IPM [Inter Panel Module (With SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2011	G 3.8 MPI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.8 MPI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2011	G 3.8 MPI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2011	G 3.8 MPI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2011	G 3.8 MPI	OPTION [User Option]				x		
US	GENESIS(BH)	2011	G 3.8 MPI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 3.8 MPI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2011	G 3.8 MPI	HEADUNIT [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
US	GENESIS(BH)	2011	G 3.8 MPI	TUNER_AMP [Tuner / Amplifier]	x	x	x			0033
US	GENESIS(BH)	2011	G 3.8 MPI	VRS [Voice Recognition System]	x	x	x			0033
US	GENESIS(BH)	2011	G 3.8 MPI	CODE [Transmitter Code Saving]				x		
US	GENESIS(BH)	2011	G 4.6 MPI	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	GENESIS(BH)	2011	G 4.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0019, 0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2011	G 4.6 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	GENESIS(BH)	2011	G 4.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	GENESIS(BH)	2011	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS(BH)	2011	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	GENESIS(BH)	2011	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS(BH)	2011	G 4.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 4.6 MPI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 4.6 MPI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(BH)	2011	G 4.6 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2011	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2011	G 4.6 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	GENESIS(BH)	2011	G 4.6 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2011	G 4.6 MPI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2011	G 4.6 MPI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2011	G 4.6 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 4.6 MPI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 4.6 MPI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 4.6 MPI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 4.6 MPI	IPM [Inter Panel Module (With SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2011	G 4.6 MPI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 4.6 MPI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2011	G 4.6 MPI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2011	G 4.6 MPI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2011	G 4.6 MPI	OPTION [User Option]				x		
US	GENESIS(BH)	2011	G 4.6 MPI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2011	G 4.6 MPI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2011	G 4.6 MPI	HEADUNIT [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
US	GENESIS(BH)	2011	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	x	x	x			0033
US	GENESIS(BH)	2011	G 4.6 MPI	VRS [Voice Recognition System]	x	x	x			0033
US	GENESIS(BH)	2011	G 4.6 MPI	CODE [Transmitter Code Saving]				x		
US	GENESIS(BH)	2010	G 3.3 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2010	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	GENESIS(BH)	2010	G 3.3 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	GENESIS(BH)	2010	G 3.3 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	GENESIS(BH)	2010	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS(BH)	2010	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	GENESIS(BH)	2010	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS(BH)	2010	G 3.3 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.3 MPI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.3 MPI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(BH)	2010	G 3.3 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2010	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2010	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	GENESIS(BH)	2010	G 3.3 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2010	G 3.3 MPI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2010	G 3.3 MPI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2010	G 3.3 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.3 MPI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.3 MPI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.3 MPI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.3 MPI	IPM [Inter Panel Module (With SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2010	G 3.3 MPI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.3 MPI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2010	G 3.3 MPI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2010	G 3.3 MPI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2010	G 3.3 MPI	OPTION [User Option]				x		
US	GENESIS(BH)	2010	G 3.3 MPI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.3 MPI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2010	G 3.3 MPI	HEADUNIT [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
US	GENESIS(BH)	2010	G 3.3 MPI	TUNER_AMP [Tuner / Amplifier]	x	x	x			0033
US	GENESIS(BH)	2010	G 3.3 MPI	VRS [Voice Recognition System]	x	x	x			0033
US	GENESIS(BH)	2010	G 3.3 MPI	CODE [Transmitter Code Saving]				x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2010	G 3.8 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
US	GENESIS(BH)	2010	G 3.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	GENESIS(BH)	2010	G 3.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	GENESIS(BH)	2010	G 3.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	GENESIS(BH)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS(BH)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	GENESIS(BH)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS(BH)	2010	G 3.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.8 MPI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.8 MPI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(BH)	2010	G 3.8 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2010	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2010	G 3.8 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	GENESIS(BH)	2010	G 3.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2010	G 3.8 MPI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2010	G 3.8 MPI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2010	G 3.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.8 MPI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.8 MPI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.8 MPI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.8 MPI	IPM [Inter Panel Module (With SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2010	G 3.8 MPI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.8 MPI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2010	G 3.8 MPI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2010	G 3.8 MPI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2010	G 3.8 MPI	OPTION [User Option]				x		
US	GENESIS(BH)	2010	G 3.8 MPI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 3.8 MPI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2010	G 3.8 MPI	HEADUNIT [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
US	GENESIS(BH)	2010	G 3.8 MPI	TUNER_AMP [Tuner / Amplifier]	x	x	x			0033
US	GENESIS(BH)	2010	G 3.8 MPI	VRS [Voice Recognition System]	x	x	x			0033

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2010	G 3.8 MPI	CODE [Transmitter Code Saving]				x		
US	GENESIS(BH)	2010	G 4.6 MPI	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	GENESIS(BH)	2010	G 4.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0019, 0114
US	GENESIS(BH)	2010	G 4.6 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	GENESIS(BH)	2010	G 4.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	GENESIS(BH)	2010	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099, 0102
US	GENESIS(BH)	2010	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	GENESIS(BH)	2010	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099, 0102
US	GENESIS(BH)	2010	G 4.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 4.6 MPI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 4.6 MPI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(BH)	2010	G 4.6 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2010	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2010	G 4.6 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	GENESIS(BH)	2010	G 4.6 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2010	G 4.6 MPI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2010	G 4.6 MPI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2010	G 4.6 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 4.6 MPI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 4.6 MPI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 4.6 MPI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 4.6 MPI	IPM [Inter Panel Module (With SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2010	G 4.6 MPI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 4.6 MPI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2010	G 4.6 MPI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2010	G 4.6 MPI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2010	G 4.6 MPI	OPTION [User Option]				x		
US	GENESIS(BH)	2010	G 4.6 MPI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2010	G 4.6 MPI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2010	G 4.6 MPI	HEADUNIT [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
US	GENESIS(BH)	2010	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	x	x	x			0033

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2010	G 4.6 MPI	VRS [Voice Recognition System]	x	x	x			0033
US	GENESIS(BH)	2010	G 4.6 MPI	CODE [Transmitter Code Saving]				x		
US	GENESIS(BH)	2009	G 3.3 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143
US	GENESIS(BH)	2009	G 3.3 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	GENESIS(BH)	2009	G 3.3 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	GENESIS(BH)	2009	G 3.3 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.3 MPI	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	GENESIS(BH)	2009	G 3.3 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.3 MPI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.3 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2009	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2009	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	GENESIS(BH)	2009	G 3.3 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2009	G 3.3 MPI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2009	G 3.3 MPI	IPM [Inter Panel Module (With SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2009	G 3.3 MPI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.3 MPI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.3 MPI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.3 MPI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.3 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.3 MPI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2009	G 3.3 MPI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2009	G 3.3 MPI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2009	G 3.3 MPI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2009	G 3.3 MPI	OPTION [User Option]				x		
US	GENESIS(BH)	2009	G 3.3 MPI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.3 MPI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2009	G 3.3 MPI	HEADUNIT [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
US	GENESIS(BH)	2009	G 3.3 MPI	TUNER_AMP [Tuner / Amplifier]	x	x	x			0033
US	GENESIS(BH)	2009	G 3.3 MPI	VRS [Voice Recognition System]	x	x	x			0033
US	GENESIS(BH)	2009	G 3.3 MPI	CODE [Transmitter Code Saving]				x		
US	GENESIS(BH)	2009	G 3.8 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2009	G 3.8 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	GENESIS(BH)	2009	G 3.8 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	GENESIS(BH)	2009	G 3.8 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.8 MPI	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	GENESIS(BH)	2009	G 3.8 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.8 MPI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.8 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2009	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2009	G 3.8 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	GENESIS(BH)	2009	G 3.8 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2009	G 3.8 MPI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2009	G 3.8 MPI	IPM [Inter Panel Module (with DIS)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2009	G 3.8 MPI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.8 MPI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.8 MPI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.8 MPI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.8 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.8 MPI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2009	G 3.8 MPI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2009	G 3.8 MPI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2009	G 3.8 MPI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2009	G 3.8 MPI	OPTION [User Option]				x		
US	GENESIS(BH)	2009	G 3.8 MPI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 3.8 MPI	IPM [Inter Panel Module (Non DIS)]	x	x	x		x	
US	GENESIS(BH)	2009	G 3.8 MPI	HEADUNIT [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
US	GENESIS(BH)	2009	G 3.8 MPI	TUNER_AMP [Tuner / Amplifier]	x	x	x			0033
US	GENESIS(BH)	2009	G 3.8 MPI	VRS [Voice Recognition System]	x	x	x			0033
US	GENESIS(BH)	2009	G 3.8 MPI	CODE [Transmitter Code Saving]				x		
US	GENESIS(BH)	2009	G 4.6 MPI	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	GENESIS(BH)	2009	G 4.6 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0019, 0114
US	GENESIS(BH)	2009	G 4.6 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0077, 0082, 0100
US	GENESIS(BH)	2009	G 4.6 MPI	EPB [Electric Parking Brake]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(BH)	2009	G 4.6 MPI	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	GENESIS(BH)	2009	G 4.6 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 4.6 MPI	EPS [Electric Hydraulic Power Steering]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 4.6 MPI	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	GENESIS(BH)	2009	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083, 0124
US	GENESIS(BH)	2009	G 4.6 MPI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021
US	GENESIS(BH)	2009	G 4.6 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	GENESIS(BH)	2009	G 4.6 MPI	SMK [Smart Key Code Saving]				x		
US	GENESIS(BH)	2009	G 4.6 MPI	IPM [Inter Panel Module (With SMK)]	x	x	x		x	0043, 0056, 0068, 0098
US	GENESIS(BH)	2009	G 4.6 MPI	FAM [Front Area Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 4.6 MPI	PSM [Power Seat Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 4.6 MPI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 4.6 MPI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 4.6 MPI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 4.6 MPI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(BH)	2009	G 4.6 MPI	FBWS [Front Back Warning System]	x	x	x	x		
US	GENESIS(BH)	2009	G 4.6 MPI	ECW [Electric Control Wiper]	x	x	x	x		
US	GENESIS(BH)	2009	G 4.6 MPI	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	GENESIS(BH)	2009	G 4.6 MPI	OPTION [User Option]				x		
US	GENESIS(BH)	2009	G 4.6 MPI	SCM [Steering Column Module]	x	x	x	x	x	
US	GENESIS(BH)	2009	G 4.6 MPI	IPM [Inter Panel Module (Non SMK)]	x	x	x		x	
US	GENESIS(BH)	2009	G 4.6 MPI	HEADUNIT [Head Unit]	x	x	x	x	x	0033, 0061, 0112, 0116, 0139, 0142, 0144
US	GENESIS(BH)	2009	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	x	x	x			0033
US	GENESIS(BH)	2009	G 4.6 MPI	VRS [Voice Recognition System]	x	x	x			0033
US	GENESIS(BH)	2009	G 4.6 MPI	CODE [Transmitter Code Saving]				x		
US	GENESIS(DH)	2016	G 3.8 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0143
US	GENESIS(DH)	2016	G 3.8 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	GENESIS(DH)	2016	G 3.8 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0076, 0085
US	GENESIS(DH)	2016	G 3.8 GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(DH)	2016	G 3.8 GDI	OCS [Occupant Classification Sensor]	x	x	x	x		
US	GENESIS(DH)	2016	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	GENESIS(DH)	2016	G 3.8 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 3.8 GDI	4WD [4WD Control]	x	x	x	x		
US	GENESIS(DH)	2016	G 3.8 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	GENESIS(DH)	2016	G 3.8 GDI	ECS [Electronic Control Suspension]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 3.8 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(DH)	2016	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	GENESIS(DH)	2016	G 3.8 GDI	PGS [Parking Guide System]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 3.8 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 3.8 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
US	GENESIS(DH)	2016	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	GENESIS(DH)	2016	G 3.8 GDI	AAF [Active Air Flap]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 3.8 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	GENESIS(DH)	2016	G 3.8 GDI	PSB [Pre - safe Seat Belt]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 3.8 GDI	AVN [Audio Video Navigation (with DIS)]	x			x		0116
US	GENESIS(DH)	2016	G 3.8 GDI	AVN [Audio Video Navigation (Non DIS)]	x			x		
US	GENESIS(DH)	2016	G 3.8 GDI	AMP [Amplifier]						0005
US	GENESIS(DH)	2016	G 3.8 GDI	HSWS [Haptic Steering Warning System]	x	x	x			
US	GENESIS(DH)	2016	G 3.8 GDI	DSS [Driver Seat Switch]	x	x	x	x		
US	GENESIS(DH)	2016	G 3.8 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	GENESIS(DH)	2016	G 3.8 GDI	HUD [Head Up Display]	x	x	x	x		
US	GENESIS(DH)	2016	G 3.8 GDI	PTM [Power Trunk Module]	x	x	x	x		
US	GENESIS(DH)	2016	G 3.8 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 3.8 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 3.8 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 3.8 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	GENESIS(DH)	2016	G 3.8 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
US	GENESIS(DH)	2016	G 3.8 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(DH)	2016	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	x	x	x			
US	GENESIS(DH)	2016	G 3.8 GDI	SLB [Seat Lumbar Bolster]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 3.8 GDI	CLU [Cluster Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(DH)	2016	G 3.8 GDI	CGW [Central Gateway]	x	x	x			0051
US	GENESIS(DH)	2016	G 3.8 GDI	I - BOX[I - BOX]	x	x	x			
US	GENESIS(DH)	2016	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	GENESIS(DH)	2016	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	GENESIS(DH)	2016	G 5.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0076, 0085
US	GENESIS(DH)	2016	G 5.0 GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	GENESIS(DH)	2016	G 5.0 GDI	OCS [Occupant Classification Sensor]	x	x	x	x		
US	GENESIS(DH)	2016	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	GENESIS(DH)	2016	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 5.0 GDI	4WD [4WD Control]	x	x	x	x		
US	GENESIS(DH)	2016	G 5.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	GENESIS(DH)	2016	G 5.0 GDI	ECS [Electronic Control Suspension]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 5.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(DH)	2016	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	GENESIS(DH)	2016	G 5.0 GDI	PGS [Parking Guide System]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 5.0 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 5.0 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
US	GENESIS(DH)	2016	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	GENESIS(DH)	2016	G 5.0 GDI	AAF [Active Air Flap]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 5.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	GENESIS(DH)	2016	G 5.0 GDI	PSB [Pre - safe Seat Belt]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 5.0 GDI	AVN [Audio Video Navigation (with DIS)]	x			x		0116
US	GENESIS(DH)	2016	G 5.0 GDI	AVN [Audio Video Navigation (Non DIS)]	x			x		
US	GENESIS(DH)	2016	G 5.0 GDI	AMP [Amplifier]						0005
US	GENESIS(DH)	2016	G 5.0 GDI	HSWS [Haptic Steering Warning System]	x	x	x			
US	GENESIS(DH)	2016	G 5.0 GDI	DSS [Driver Seat Switch]	x	x	x	x		
US	GENESIS(DH)	2016	G 5.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	GENESIS(DH)	2016	G 5.0 GDI	HUD [Head Up Display]	x	x	x	x		
US	GENESIS(DH)	2016	G 5.0 GDI	PTM [Power Trunk Module]	x	x	x	x		
US	GENESIS(DH)	2016	G 5.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 5.0 GDI	DDM [Driver Door Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(DH)	2016	G 5.0 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 5.0 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	GENESIS(DH)	2016	G 5.0 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
US	GENESIS(DH)	2016	G 5.0 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(DH)	2016	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	x	x	x			
US	GENESIS(DH)	2016	G 5.0 GDI	SLB [Seat Lumbar Bolster]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 5.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(DH)	2016	G 5.0 GDI	CGW [Central Gateway]	x	x	x			0051
US	GENESIS(DH)	2016	G 5.0 GDI	I - BOX [I - BOX]	x	x	x			
US	GENESIS(DH)	2015	G 3.8 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0143
US	GENESIS(DH)	2015	G 3.8 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	GENESIS(DH)	2015	G 3.8 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0076, 0085
US	GENESIS(DH)	2015	G 3.8 GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	GENESIS(DH)	2015	G 3.8 GDI	OCS [Occupant Classification Sensor]	x	x	x	x		
US	GENESIS(DH)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	GENESIS(DH)	2015	G 3.8 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 3.8 GDI	4WD [4WD Control]	x	x	x	x		
US	GENESIS(DH)	2015	G 3.8 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	GENESIS(DH)	2015	G 3.8 GDI	ECS [Electronic Control Suspension]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 3.8 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(DH)	2015	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	GENESIS(DH)	2015	G 3.8 GDI	PGS [Parking Guide System]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 3.8 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 3.8 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
US	GENESIS(DH)	2015	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	GENESIS(DH)	2015	G 3.8 GDI	AAF [Active Air Flap]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 3.8 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	GENESIS(DH)	2015	G 3.8 GDI	PSB [Pre - safe Seat Belt]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 3.8 GDI	AVN [Audio Video Navigation (with DIS)]	x			x		0116
US	GENESIS(DH)	2015	G 3.8 GDI	AVN [Audio Video Navigation (Non DIS)]	x			x		
US	GENESIS(DH)	2015	G 3.8 GDI	AMP [Amplifier]						0005

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(DH)	2015	G 3.8 GDI	HSWS [Haptic Steering Warning System]	x	x	x			
US	GENESIS(DH)	2015	G 3.8 GDI	DSS [Driver Seat Switch]	x	x	x	x		
US	GENESIS(DH)	2015	G 3.8 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	GENESIS(DH)	2015	G 3.8 GDI	HUD [Head Up Display]	x	x	x	x		
US	GENESIS(DH)	2015	G 3.8 GDI	PTM [Power Trunk Module]	x	x	x	x		
US	GENESIS(DH)	2015	G 3.8 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 3.8 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 3.8 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 3.8 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	GENESIS(DH)	2015	G 3.8 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
US	GENESIS(DH)	2015	G 3.8 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(DH)	2015	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	x	x	x			
US	GENESIS(DH)	2015	G 3.8 GDI	SLB [Seat Lumbar Bolster]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 3.8 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 3.8 GDI	CGW [Central Gateway]	x	x	x			0051
US	GENESIS(DH)	2015	G 3.8 GDI	I - BOX [I - BOX]	x	x	x			
US	GENESIS(DH)	2015	G 5.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	GENESIS(DH)	2015	G 5.0 GDI	AT [Automatic Transaxle]	x	x	x	x		0114
US	GENESIS(DH)	2015	G 5.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0076, 0085
US	GENESIS(DH)	2015	G 5.0 GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	GENESIS(DH)	2015	G 5.0 GDI	OCS [Occupant Classification Sensor]	x	x	x	x		
US	GENESIS(DH)	2015	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	GENESIS(DH)	2015	G 5.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 5.0 GDI	4WD [4WD Control]	x	x	x	x		
US	GENESIS(DH)	2015	G 5.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	GENESIS(DH)	2015	G 5.0 GDI	ECS [Electronic Control Suspension]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 5.0 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	GENESIS(DH)	2015	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	GENESIS(DH)	2015	G 5.0 GDI	PGS [Parking Guide System]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 5.0 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 5.0 GDI	LKAS [Lane Keeping Assist System]	x	x	x	x		
US	GENESIS(DH)	2015	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	GENESIS(DH)	2015	G 5.0 GDI	AAF [Active Air Flap]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 5.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	GENESIS(DH)	2015	G 5.0 GDI	PSB [Pre - safe Seat Belt]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 5.0 GDI	AVN [Audio Video Navigation (with DIS)]	x			x		0116
US	GENESIS(DH)	2015	G 5.0 GDI	AVN [Audio Video Navigation (Non DIS)]	x			x		
US	GENESIS(DH)	2015	G 5.0 GDI	AMP [Amplifier]						0005
US	GENESIS(DH)	2015	G 5.0 GDI	HSWS [Haptic Steering Warning System]	x	x	x			
US	GENESIS(DH)	2015	G 5.0 GDI	DSS [Driver Seat Switch]	x	x	x	x		
US	GENESIS(DH)	2015	G 5.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	GENESIS(DH)	2015	G 5.0 GDI	HUD [Head Up Display]	x	x	x	x		
US	GENESIS(DH)	2015	G 5.0 GDI	PTM [Power Trunk Module]	x	x	x	x		
US	GENESIS(DH)	2015	G 5.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 5.0 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 5.0 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 5.0 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	GENESIS(DH)	2015	G 5.0 GDI	SCM [Steering Column Module]	x	x	x	x	x	0131
US	GENESIS(DH)	2015	G 5.0 GDI	MFSW [Multi Function Switch]	x	x	x	x		
US	GENESIS(DH)	2015	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	x	x	x			
US	GENESIS(DH)	2015	G 5.0 GDI	SLB [Seat Lumbar Bolster]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 5.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	GENESIS(DH)	2015	G 5.0 GDI	CGW [Central Gateway]	x	x	x			0051
US	GENESIS(DH)	2015	G 5.0 GDI	I - BOX [I - BOX]	x	x	x			
US	IONIQ electric(AE EV)	2017	88KW	MCU [EV Motor Control System]	x	x	x	x	x	0038, 0046, 0072
US	IONIQ electric(AE EV)	2017	88KW	BMS [EV Battery System]	x	x	x	x	x	0119
US	IONIQ electric(AE EV)	2017	88KW	VCULDC [VCULDC]	x	x	x	x	x	0078, 0109
US	IONIQ electric(AE EV)	2017	88KW	EPB [Electric Parking Brake]	x	x	x	x	x	0014, 0018
US	IONIQ electric(AE EV)	2017	88KW	ESPAHB [ESP / AHB]	x	x	x	x	x	0057, 0066
US	IONIQ electric(AE EV)	2017	88KW	SCCAEB [SCC / AEB]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	IONIQ electric(AE EV)	2017	88KW	OCS [Occupant Classification System]	x	x	x	x		
US	IONIQ electric(AE EV)	2017	88KW	AIRBAG [Airbag (Event #2)]	x	x	x			
US	IONIQ electric(AE EV)	2017	88KW	AIRBAG [Airbag (Event #1)]	x	x	x			
US	IONIQ electric(AE EV)	2017	88KW	AIRCON [Air Conditioner]	x	x	x	x	x	
US	IONIQ electric(AE EV)	2017	88KW	OBC [On Board Charger]	x	x	x	x		
US	IONIQ electric(AE EV)	2017	88KW	CCM [Charging Control Module]	x	x	x	x		
US	IONIQ electric(AE EV)	2017	88KW	EPS [Motor Driven Power Steering]	x	x	x	x		
US	IONIQ electric(AE EV)	2017	88KW	PGS [Parking Guide System]	x	x	x	x		
US	IONIQ electric(AE EV)	2017	88KW	MFC [Multi Function Camera]	x	x	x	x		
US	IONIQ electric(AE EV)	2017	88KW	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016, 0017
US	IONIQ electric(AE EV)	2017	88KW	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016, 0017
US	IONIQ electric(AE EV)	2017	88KW	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	
US	IONIQ electric(AE EV)	2017	88KW	AAF [Active Air Flap]	x	x	x	x	x	
US	IONIQ electric(AE EV)	2017	88KW	ESHIFTER_BS [E - Shifter]	x	x	x	x	x	
US	IONIQ electric(AE EV)	2017	88KW	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	IONIQ electric(AE EV)	2017	88KW	AMP [Amplifier]						0005
US	IONIQ electric(AE EV)	2017	88KW	ADM [Assist Door Module]	x	x	x	x	x	
US	IONIQ electric(AE EV)	2017	88KW	CLU [Cluster Module]	x	x	x	x	x	
US	IONIQ electric(AE EV)	2017	88KW	DDM [Driver Door Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	IONIQ electric(AE EV)	2017	88KW	PSM [Power Seat Module]	×	×	×	×	×	0122
US	IONIQ electric(AE EV)	2017	88KW	IBU - TPMS [IBU - TPMS]	×	×	×			
US	IONIQ electric(AE EV)	2017	88KW	WPC [Wireless Power Charger]	×	×	×	×	×	
US	IONIQ electric(AE EV)	2017	88KW	IBU - BCM [IBU - BCM]	×	×	×	×	×	
US	IONIQ electric(AE EV)	2017	88KW	IGPM [Intergrated Gateway Power Module]	×	×	×	×	×	0051
US	IONIQ electric(AE EV)	2017	88KW	VESS [Virtual Engine Sound System]	×	×	×		×	
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	ENGINE [Engine Control]	×	×	×	×	×	0012, 0015, 0050, 0053, 0109, 0113, 0143
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	MCU [HEV Motor Control System]	×	×	×	×		0046, 0063, 0093
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	HCULDC [HCU / Low DC - DC Converter]	×	×	×	×	×	0047, 0048, 0049, 0074, 0078, 0111, 0129
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	BMS [HEV Battery System]	×	×	×	×	×	0001, 0119
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AT [Dual Clutch Transmission]	×	×	×	×		
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	SCCAEB [SCC / AEB]	×	×	×	×		
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	ESCAHB [ESC / AHB]	×	×	×	×	×	0057, 0066
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AIRBAG [Airbag (Event #1)]	×	×	×			
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AIRBAG [Airbag (Event #2)]	×	×	×			
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	OCS [Occupant Classification System]	×	×	×	×		
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AIRCON [Air Conditioner]	×	×	×	×	×	
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	EPS [Motor Driven Power Steering]	×	×	×	×		
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	PGS [Parking Guide System]	×	×	×	×		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	MFC [Multi Function Camera]	x	x	x	x		
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016, 0017
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016, 0017
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AAF - R [Active Air Flap - Right]	x				x	
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AAF - L [Active Air Flap - Left]	x	x	x	x	x	
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AMP [Amplifier]						0005
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	PSM [Power Seat Module]	x	x	x	x	x	0122
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	IBU - TPMS [Intergrated Body Control Unit - TPMS]	x	x	x			
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	IBU - BCM [Intergrated Body Control Unit - BCM]	x	x	x	x	x	
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	CLU [Cluster Module]	x	x	x	x	x	
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	ADM [Assist Door Module]	x	x	x	x	x	
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	WPC [Wireless Power Charger]	x	x	x	x	x	
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	DDM [Driver Door Module]	x	x	x	x	x	
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	IGPM [Intergrated Gateway Power Control Module]	x	x	x	x	x	0051
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	VESS [Virtual Engine Sound System]	x	x	x		x	
US	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	ENGINE [Engine Control]	x	x	x	x	x	0012, 0015, 0050, 0053, 0109, 0113, 0115, 0143
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AT [Automatic Transaxle]	x	x	x	x		0006, 0114
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	ODS [PODS - F]	x	x	x	x		
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	ODS [PODS - F]	x	x	x			
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	MCS [Multi - View Camera System]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	LDWS [Lane Departure Warning System]	x	x	x	x		
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AMP [Amplifier]						0005
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	PTG [Power Tail Gate]	x	x	x	x		0106
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	TMU [Telematics Unit]	x	x	x			
US	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x	x	0012, 0015, 0050, 0053, 0109, 0113, 0115, 0143
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x		0006, 0114
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	ODS [PODS - F]	x	x	x	x		
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	ODS [PODS - F]	x	x	x			
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	MCS [Multi - View Camera System]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0079
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AMP [Amplifier]						0005
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	PTG [Power Tail Gate]	x	x	x	x		0106
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	TMU [Telematics Unit]	x	x	x			
US	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	ODS [PODS - F]	x	x	x			
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	PTG [Power Tail Gate]	x	x	x	x		0106
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	TMU [Telematics Unit]	x	x	x			
US	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	ODS [PODS - F]	x	x	x			
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	ADM [Assist Door Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	PTG [Power Tail Gate]	x	x	x	x		0106
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	TMU [Telematics Unit]	x	x	x			
US	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	ODS [PODS - F]	x	x	x			
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	PTG [Power Tail Gate]	x	x	x	x		0106
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	TMU [Telematics Unit]	x	x	x			
US	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	ODS [PODS - F]	x	x	x			
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	PTG [Power Tail Gate]	x	x	x	x		0106
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	TMU [Telematics Unit]	x	x	x			
US	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	ODS [PODS - F]	x	x	x			
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	CLU [Cluster Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	TMU [Telematics Unit]	x	x	x			
US	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	ODS [PODS - F]	x	x	x			
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	TMU [Telematics Unit]	x	x	x			
US	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	ODS [PODS - F]	x	x	x			
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	TMU [Telematics Unit]	x	x	x			
US	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	ODS [PODS - F]	x	x	x			
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	DDM [Driver Door Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	TMU [Telematics Unit]	×	×	×			
US	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	CODE [Transmitter Code Saving]				×		0026
US	SANTAFE(CM)	2012	G 2.4 DOHC	ENGINE [Engine Control]	×	×	×	×	×	0015, 0053, 0092, 0097, 0109, 0113, 0143
US	SANTAFE(CM)	2012	G 2.4 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114
US	SANTAFE(CM)	2012	G 2.4 DOHC	ABSESC [ABS / ESC]	×	×	×	×	×	0062
US	SANTAFE(CM)	2012	G 2.4 DOHC	AIRBAG [Airbag (Event #2)]	×	×	×			
US	SANTAFE(CM)	2012	G 2.4 DOHC	AIRBAG [Airbag (Event #1)]	×	×	×			0099
US	SANTAFE(CM)	2012	G 2.4 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
US	SANTAFE(CM)	2012	G 2.4 DOHC	4WD [4WD Control]		×	×	×		
US	SANTAFE(CM)	2012	G 2.4 DOHC	EPS [Power Steering]		×	×	×		
US	SANTAFE(CM)	2012	G 2.4 DOHC	TPMS [Tire Pressure Monitoring System]	×	×	×		×	
US	SANTAFE(CM)	2012	G 2.4 DOHC	IMMO [Immobilizer]				×		0081, 0084, 0094, 0105, 0127
US	SANTAFE(CM)	2012	G 2.4 DOHC	SMK [Smart Key Unit]	×	×	×	×	×	0056, 0098, 0118, 0133
US	SANTAFE(CM)	2012	G 2.4 DOHC	SMK [Smart Key Unit]	×	×	×	×	×	0043, 0056, 0098, 0118
US	SANTAFE(CM)	2012	G 2.4 DOHC	SMKCODE [Smart Key Code Saving]				×		
US	SANTAFE(CM)	2012	G 2.4 DOHC	PDM [Power Distribution Module]	×	×	×	×	×	
US	SANTAFE(CM)	2012	G 2.4 DOHC	PDM [Power Distribution Module]	×	×	×	×	×	0042
US	SANTAFE(CM)	2012	G 2.4 DOHC	BCM [Body Control Module]	×			×	×	
US	SANTAFE(CM)	2012	G 2.4 DOHC	CODE [Transmitter Code Saving]				×		0026
US	SANTAFE(CM)	2012	G 3.5 DOHC	ENGINE [Engine Control]	×	×	×	×	×	0015, 0053, 0109, 0140, 0143
US	SANTAFE(CM)	2012	G 3.5 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114
US	SANTAFE(CM)	2012	G 3.5 DOHC	ABSESC [ABS / ESC]	×	×	×	×	×	0062
US	SANTAFE(CM)	2012	G 3.5 DOHC	AIRBAG [Airbag (Event #2)]	×	×	×			
US	SANTAFE(CM)	2012	G 3.5 DOHC	AIRBAG [Airbag (Event #1)]	×	×	×			0099
US	SANTAFE(CM)	2012	G 3.5 DOHC	AIRCON [Air Conditioner]	×	×	×	×	×	
US	SANTAFE(CM)	2012	G 3.5 DOHC	4WD [4WD Control]		×	×	×		
US	SANTAFE(CM)	2012	G 3.5 DOHC	EPS [Power Steering]		×	×	×		
US	SANTAFE(CM)	2012	G 3.5 DOHC	TPMS [Tire Pressure Monitoring System]	×	×	×		×	
US	SANTAFE(CM)	2012	G 3.5 DOHC	IMMO [Immobilizer]				×		0081, 0084, 0094, 0105, 0127
US	SANTAFE(CM)	2012	G 3.5 DOHC	SMK [Smart Key Unit]	×	×	×	×	×	0056, 0098, 0118, 0133

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE(CM)	2012	G 3.5 DOHC	SMK [Smart Key Unit]	x	x	x	x	x	0043, 0056, 0098, 0118
US	SANTAFE(CM)	2012	G 3.5 DOHC	SMKCODE [Smart Key Code Saving]				x		
US	SANTAFE(CM)	2012	G 3.5 DOHC	PDM [Power Distribution Module]	x	x	x	x	x	
US	SANTAFE(CM)	2012	G 3.5 DOHC	PDM [Power Distribution Module]	x	x	x	x	x	0042
US	SANTAFE(CM)	2012	G 3.5 DOHC	BCM [Body Control Module]	x			x	x	
US	SANTAFE(CM)	2012	G 3.5 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE(CM)	2011	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0097, 0109, 0113, 0143
US	SANTAFE(CM)	2011	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE(CM)	2011	G 2.4 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SANTAFE(CM)	2011	G 2.4 DOHC	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SANTAFE(CM)	2011	G 2.4 DOHC	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	SANTAFE(CM)	2011	G 2.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE(CM)	2011	G 2.4 DOHC	4WD [4WD Control]		x	x	x		
US	SANTAFE(CM)	2011	G 2.4 DOHC	EPS [Power Steering]		x	x	x		
US	SANTAFE(CM)	2011	G 2.4 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	SANTAFE(CM)	2011	G 2.4 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SANTAFE(CM)	2011	G 2.4 DOHC	BCM [Body Control Module]	x			x	x	
US	SANTAFE(CM)	2011	G 2.4 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE(CM)	2011	G 3.5 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0140, 0143
US	SANTAFE(CM)	2011	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE(CM)	2011	G 3.5 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SANTAFE(CM)	2011	G 3.5 DOHC	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SANTAFE(CM)	2011	G 3.5 DOHC	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	SANTAFE(CM)	2011	G 3.5 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE(CM)	2011	G 3.5 DOHC	4WD [4WD Control]		x	x	x		
US	SANTAFE(CM)	2011	G 3.5 DOHC	EPS [Power Steering]		x	x	x		
US	SANTAFE(CM)	2011	G 3.5 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	SANTAFE(CM)	2011	G 3.5 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SANTAFE(CM)	2011	G 3.5 DOHC	BCM [Body Control Module]	x			x	x	
US	SANTAFE(CM)	2011	G 3.5 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE(CM)	2010	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0097, 0109, 0113, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE(CM)	2010	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE(CM)	2010	G 2.4 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SANTAFE(CM)	2010	G 2.4 DOHC	AIRBAG [Event #2]	x	x	x			
US	SANTAFE(CM)	2010	G 2.4 DOHC	AIRBAG [Event #1]	x	x	x			0099
US	SANTAFE(CM)	2010	G 2.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE(CM)	2010	G 2.4 DOHC	4WD [4WD Control]		x	x	x		
US	SANTAFE(CM)	2010	G 2.4 DOHC	EPS [Power Steering]		x	x	x		
US	SANTAFE(CM)	2010	G 2.4 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	SANTAFE(CM)	2010	G 2.4 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SANTAFE(CM)	2010	G 2.4 DOHC	BCM [Body Control Module]	x			x	x	
US	SANTAFE(CM)	2010	G 2.4 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE(CM)	2010	G 3.5 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0140, 0143
US	SANTAFE(CM)	2010	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE(CM)	2010	G 3.5 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SANTAFE(CM)	2010	G 3.5 DOHC	AIRBAG [Event #2]	x	x	x			
US	SANTAFE(CM)	2010	G 3.5 DOHC	AIRBAG [Event #1]	x	x	x			0099
US	SANTAFE(CM)	2010	G 3.5 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE(CM)	2010	G 3.5 DOHC	4WD [4WD Control]		x	x	x		
US	SANTAFE(CM)	2010	G 3.5 DOHC	EPS [Power Steering]		x	x	x		
US	SANTAFE(CM)	2010	G 3.5 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	SANTAFE(CM)	2010	G 3.5 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SANTAFE(CM)	2010	G 3.5 DOHC	BCM [Body Control Module]	x			x	x	
US	SANTAFE(CM)	2010	G 3.5 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE(CM)	2009	G 2.7 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	SANTAFE(CM)	2009	G 2.7 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	SANTAFE(CM)	2009	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE(CM)	2009	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(CM)	2009	G 2.7 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SANTAFE(CM)	2009	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	SANTAFE(CM)	2009	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE(CM)	2009	G 2.7 DOHC	4WD [4WD Control]		x	x	x		
US	SANTAFE(CM)	2009	G 2.7 DOHC	4WD [4WD Control]		x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE(CM)	2009	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	SANTAFE(CM)	2009	G 2.7 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SANTAFE(CM)	2009	G 2.7 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	SANTAFE(CM)	2009	G 2.7 DOHC	BCM [Body Control Module]	x			x	x	
US	SANTAFE(CM)	2009	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE(CM)	2009	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	SANTAFE(CM)	2009	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	SANTAFE(CM)	2009	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE(CM)	2009	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(CM)	2009	G 3.3 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SANTAFE(CM)	2009	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	SANTAFE(CM)	2009	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE(CM)	2009	G 3.3 DOHC	4WD [4WD Control]		x	x	x		
US	SANTAFE(CM)	2009	G 3.3 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(CM)	2009	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	SANTAFE(CM)	2009	G 3.3 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SANTAFE(CM)	2009	G 3.3 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	SANTAFE(CM)	2009	G 3.3 DOHC	BCM [Body Control Module]	x			x	x	
US	SANTAFE(CM)	2009	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE(CM)	2008	G 2.7 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	SANTAFE(CM)	2008	G 2.7 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	SANTAFE(CM)	2008	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE(CM)	2008	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(CM)	2008	G 2.7 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SANTAFE(CM)	2008	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	SANTAFE(CM)	2008	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE(CM)	2008	G 2.7 DOHC	4WD [4WD Control]		x	x	x		
US	SANTAFE(CM)	2008	G 2.7 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(CM)	2008	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	SANTAFE(CM)	2008	G 2.7 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE(CM)	2008	G 2.7 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	SANTAFE(CM)	2008	G 2.7 DOHC	BCM [Body Control Module]	x			x	x	
US	SANTAFE(CM)	2008	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE(CM)	2008	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	SANTAFE(CM)	2008	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	SANTAFE(CM)	2008	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE(CM)	2008	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(CM)	2008	G 3.3 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SANTAFE(CM)	2008	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	SANTAFE(CM)	2008	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE(CM)	2008	G 3.3 DOHC	4WD [4WD Control]		x	x	x		
US	SANTAFE(CM)	2008	G 3.3 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(CM)	2008	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	SANTAFE(CM)	2008	G 3.3 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SANTAFE(CM)	2008	G 3.3 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	SANTAFE(CM)	2008	G 3.3 DOHC	BCM [Body Control Module]	x			x	x	
US	SANTAFE(CM)	2008	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE(CM)	2007	G 2.7 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	SANTAFE(CM)	2007	G 2.7 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	SANTAFE(CM)	2007	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE(CM)	2007	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(CM)	2007	G 2.7 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SANTAFE(CM)	2007	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	SANTAFE(CM)	2007	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE(CM)	2007	G 2.7 DOHC	4WD [4WD Control]		x	x	x		
US	SANTAFE(CM)	2007	G 2.7 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(CM)	2007	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	SANTAFE(CM)	2007	G 2.7 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SANTAFE(CM)	2007	G 2.7 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	SANTAFE(CM)	2007	G 2.7 DOHC	BCM [Body Control Module]	x			x	x	
US	SANTAFE(CM)	2007	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE(CM)	2007	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	SANTAFE(CM)	2007	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	SANTAFE(CM)	2007	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE(CM)	2007	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(CM)	2007	G 3.3 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SANTAFE(CM)	2007	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	SANTAFE(CM)	2007	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE(CM)	2007	G 3.3 DOHC	4WD [4WD Control]		x	x	x		
US	SANTAFE(CM)	2007	G 3.3 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(CM)	2007	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	SANTAFE(CM)	2007	G 3.3 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SANTAFE(CM)	2007	G 3.3 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	SANTAFE(CM)	2007	G 3.3 DOHC	BCM [Body Control Module]	x			x	x	
US	SANTAFE(CM)	2007	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE(NC)	2017	G 3.3 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0143
US	SANTAFE(NC)	2017	G 3.3 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE(NC)	2017	G 3.3 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
US	SANTAFE(NC)	2017	G 3.3 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	SANTAFE(NC)	2017	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SANTAFE(NC)	2017	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SANTAFE(NC)	2017	G 3.3 GDI	ODS [PODS - F]	x	x	x			
US	SANTAFE(NC)	2017	G 3.3 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE(NC)	2017	G 3.3 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	SANTAFE(NC)	2017	G 3.3 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SANTAFE(NC)	2017	G 3.3 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	SANTAFE(NC)	2017	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SANTAFE(NC)	2017	G 3.3 GDI	MCS [Multi - View Camera System]	x	x	x	x	x	
US	SANTAFE(NC)	2017	G 3.3 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		
US	SANTAFE(NC)	2017	G 3.3 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SANTAFE(NC)	2017	G 3.3 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SANTAFE(NC)	2017	G 3.3 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	0021

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE(NC)	2017	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
US	SANTAFE(NC)	2017	G 3.3 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SANTAFE(NC)	2017	G 3.3 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SANTAFE(NC)	2017	G 3.3 GDI	AMP [Amplifier]						0005
US	SANTAFE(NC)	2017	G 3.3 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SANTAFE(NC)	2017	G 3.3 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SANTAFE(NC)	2017	G 3.3 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SANTAFE(NC)	2017	G 3.3 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SANTAFE(NC)	2017	G 3.3 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SANTAFE(NC)	2017	G 3.3 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SANTAFE(NC)	2017	G 3.3 GDI	PTG [Power Tail Gate]	x	x	x	x		0106
US	SANTAFE(NC)	2017	G 3.3 GDI	PTG [Power Tail Gate]	x	x	x	x		
US	SANTAFE(NC)	2017	G 3.3 GDI	TMU [Telematics Unit]	x	x	x			
US	SANTAFE(NC)	2017	G 3.3 GDI	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE(NC)	2016	G 3.3 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0143
US	SANTAFE(NC)	2016	G 3.3 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE(NC)	2016	G 3.3 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	SANTAFE(NC)	2016	G 3.3 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
US	SANTAFE(NC)	2016	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SANTAFE(NC)	2016	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SANTAFE(NC)	2016	G 3.3 GDI	ODS [PODS - F]	x	x	x			
US	SANTAFE(NC)	2016	G 3.3 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE(NC)	2016	G 3.3 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	SANTAFE(NC)	2016	G 3.3 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SANTAFE(NC)	2016	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SANTAFE(NC)	2016	G 3.3 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SANTAFE(NC)	2016	G 3.3 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SANTAFE(NC)	2016	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
US	SANTAFE(NC)	2016	G 3.3 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SANTAFE(NC)	2016	G 3.3 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SANTAFE(NC)	2016	G 3.3 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SANTAFE(NC)	2016	G 3.3 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SANTAFE(NC)	2016	G 3.3 GDI	CLU [Cluster Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE(NC)	2016	G 3.3 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SANTAFE(NC)	2016	G 3.3 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SANTAFE(NC)	2016	G 3.3 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SANTAFE(NC)	2016	G 3.3 GDI	PTG [Power Tail Gate]	x	x	x	x		
US	SANTAFE(NC)	2016	G 3.3 GDI	TMU [Telematics Unit]	x	x	x			
US	SANTAFE(NC)	2016	G 3.3 GDI	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE(NC)	2015	G 3.3 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0143
US	SANTAFE(NC)	2015	G 3.3 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE(NC)	2015	G 3.3 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	SANTAFE(NC)	2015	G 3.3 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
US	SANTAFE(NC)	2015	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SANTAFE(NC)	2015	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SANTAFE(NC)	2015	G 3.3 GDI	ODS [PODS - F]	x	x	x			
US	SANTAFE(NC)	2015	G 3.3 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE(NC)	2015	G 3.3 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	SANTAFE(NC)	2015	G 3.3 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SANTAFE(NC)	2015	G 3.3 GDI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
US	SANTAFE(NC)	2015	G 3.3 GDI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
US	SANTAFE(NC)	2015	G 3.3 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SANTAFE(NC)	2015	G 3.3 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SANTAFE(NC)	2015	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
US	SANTAFE(NC)	2015	G 3.3 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SANTAFE(NC)	2015	G 3.3 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SANTAFE(NC)	2015	G 3.3 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SANTAFE(NC)	2015	G 3.3 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SANTAFE(NC)	2015	G 3.3 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SANTAFE(NC)	2015	G 3.3 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SANTAFE(NC)	2015	G 3.3 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SANTAFE(NC)	2015	G 3.3 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SANTAFE(NC)	2015	G 3.3 GDI	PTG [Power Tail Gate]	x	x	x	x		
US	SANTAFE(NC)	2015	G 3.3 GDI	TMU [Telematics Unit]	x	x	x			
US	SANTAFE(NC)	2015	G 3.3 GDI	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE(NC)	2014	G 3.3 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0143
US	SANTAFE(NC)	2014	G 3.3 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE(NC)	2014	G 3.3 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	SANTAFE(NC)	2014	G 3.3 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
US	SANTAFE(NC)	2014	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SANTAFE(NC)	2014	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SANTAFE(NC)	2014	G 3.3 GDI	ODS [PODS - F]	x	x	x			
US	SANTAFE(NC)	2014	G 3.3 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE(NC)	2014	G 3.3 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	SANTAFE(NC)	2014	G 3.3 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SANTAFE(NC)	2014	G 3.3 GDI	TPMS [Tire Pressure Monitoring (High)]	x	x	x		x	
US	SANTAFE(NC)	2014	G 3.3 GDI	TPMS [Tire Pressure Monitoring (Low)]	x	x	x		x	
US	SANTAFE(NC)	2014	G 3.3 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SANTAFE(NC)	2014	G 3.3 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SANTAFE(NC)	2014	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
US	SANTAFE(NC)	2014	G 3.3 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SANTAFE(NC)	2014	G 3.3 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SANTAFE(NC)	2014	G 3.3 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SANTAFE(NC)	2014	G 3.3 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SANTAFE(NC)	2014	G 3.3 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SANTAFE(NC)	2014	G 3.3 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SANTAFE(NC)	2014	G 3.3 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SANTAFE(NC)	2014	G 3.3 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SANTAFE(NC)	2014	G 3.3 GDI	PTG [Power Tail Gate]	x	x	x	x		
US	SANTAFE(NC)	2014	G 3.3 GDI	TMU [Telematics Unit]	x	x	x			
US	SANTAFE(NC)	2014	G 3.3 GDI	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE(NC)	2013	G 3.3 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0143
US	SANTAFE(NC)	2013	G 3.3 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SANTAFE(NC)	2013	G 3.3 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	SANTAFE(NC)	2013	G 3.3 GDI	EPB [Electric Parking Brake]	x	x	x	x	x	0037
US	SANTAFE(NC)	2013	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SANTAFE(NC)	2013	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE(NC)	2013	G 3.3 GDI	ODS [PODS - F]	x	x	x			
US	SANTAFE(NC)	2013	G 3.3 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SANTAFE(NC)	2013	G 3.3 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	SANTAFE(NC)	2013	G 3.3 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SANTAFE(NC)	2013	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SANTAFE(NC)	2013	G 3.3 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SANTAFE(NC)	2013	G 3.3 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SANTAFE(NC)	2013	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	
US	SANTAFE(NC)	2013	G 3.3 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SANTAFE(NC)	2013	G 3.3 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SANTAFE(NC)	2013	G 3.3 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SANTAFE(NC)	2013	G 3.3 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SANTAFE(NC)	2013	G 3.3 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SANTAFE(NC)	2013	G 3.3 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SANTAFE(NC)	2013	G 3.3 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SANTAFE(NC)	2013	G 3.3 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SANTAFE(NC)	2013	G 3.3 GDI	PTG [Power Tail Gate]	x	x	x	x		
US	SANTAFE(NC)	2013	G 3.3 GDI	TMU [Telematics Unit]	x	x	x			
US	SANTAFE(NC)	2013	G 3.3 GDI	CODE [Transmitter Code Saving]				x		0026
US	SANTAFE(SM)	2006	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	SANTAFE(SM)	2006	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SANTAFE(SM)	2006	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(SM)	2006	G 2.4 DOHC	TCS [Traction Control System]	x	x	x	x	x	0062
US	SANTAFE(SM)	2006	G 2.4 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SANTAFE(SM)	2006	G 2.4 DOHC	ABS [2WD]	x	x	x	x	x	0062
US	SANTAFE(SM)	2006	G 2.4 DOHC	ABS [2WD]		x	x	x	x	0062
US	SANTAFE(SM)	2006	G 2.4 DOHC	ABS [4WD]	x	x	x	x	x	0062
US	SANTAFE(SM)	2006	G 2.4 DOHC	ABS [4WD]		x	x	x	x	0062
US	SANTAFE(SM)	2006	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
US	SANTAFE(SM)	2006	G 2.4 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(SM)	2006	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	SANTAFE(SM)	2006	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0109, 0110, 0113
US	SANTAFE(SM)	2006	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SANTAFE(SM)	2006	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE(SM)	2006	G 2.7 DOHC	TCS [Traction Control System]	x	x	x	x	x	0062
US	SANTAFE(SM)	2006	G 2.7 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SANTAFE(SM)	2006	G 2.7 DOHC	ABS [2WD]	x	x	x	x	x	0062
US	SANTAFE(SM)	2006	G 2.7 DOHC	ABS [2WD]		x	x	x	x	0062
US	SANTAFE(SM)	2006	G 2.7 DOHC	ABS [4WD]	x	x	x	x	x	0062
US	SANTAFE(SM)	2006	G 2.7 DOHC	ABS [4WD]		x	x	x	x	0062
US	SANTAFE(SM)	2006	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
US	SANTAFE(SM)	2006	G 2.7 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(SM)	2006	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	SANTAFE(SM)	2006	G 3.5 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	SANTAFE(SM)	2006	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(SM)	2006	G 3.5 DOHC	TCS [Traction Control System]	x	x	x	x	x	0062
US	SANTAFE(SM)	2006	G 3.5 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SANTAFE(SM)	2006	G 3.5 DOHC	ABS [2WD]	x	x	x	x	x	0062
US	SANTAFE(SM)	2006	G 3.5 DOHC	ABS [2WD]		x	x	x	x	0062
US	SANTAFE(SM)	2006	G 3.5 DOHC	ABS [4WD]	x	x	x	x	x	0062
US	SANTAFE(SM)	2006	G 3.5 DOHC	ABS [4WD]		x	x	x	x	0062
US	SANTAFE(SM)	2006	G 3.5 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
US	SANTAFE(SM)	2006	G 3.5 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(SM)	2006	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	SANTAFE(SM)	2005	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	SANTAFE(SM)	2005	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SANTAFE(SM)	2005	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(SM)	2005	G 2.4 DOHC	TCS [Traction Control System]	x	x	x	x	x	0062
US	SANTAFE(SM)	2005	G 2.4 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SANTAFE(SM)	2005	G 2.4 DOHC	ABS [2WD]	x	x	x	x	x	0062
US	SANTAFE(SM)	2005	G 2.4 DOHC	ABS [2WD]		x	x	x	x	0062
US	SANTAFE(SM)	2005	G 2.4 DOHC	ABS [4WD]	x	x	x	x	x	0062
US	SANTAFE(SM)	2005	G 2.4 DOHC	ABS [4WD]		x	x	x	x	0062
US	SANTAFE(SM)	2005	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
US	SANTAFE(SM)	2005	G 2.4 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(SM)	2005	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0109, 0110, 0113
US	SANTAFE(SM)	2005	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SANTAFE(SM)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(SM)	2005	G 2.7 DOHC	TCS [Traction Control System]	x	x	x	x	x	0062
US	SANTAFE(SM)	2005	G 2.7 DOHC	TCS [Traction Control System]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE(SM)	2005	G 2.7 DOHC	ABS [2WD]	x	x	x	x	x	0062
US	SANTAFE(SM)	2005	G 2.7 DOHC	ABS [2WD]		x	x	x	x	0062
US	SANTAFE(SM)	2005	G 2.7 DOHC	ABS [4WD]	x	x	x	x	x	0062
US	SANTAFE(SM)	2005	G 2.7 DOHC	ABS [4WD]		x	x	x	x	0062
US	SANTAFE(SM)	2005	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
US	SANTAFE(SM)	2005	G 2.7 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(SM)	2005	G 3.5 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	SANTAFE(SM)	2005	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(SM)	2005	G 3.5 DOHC	TCS [Traction Control System]	x	x	x	x	x	0062
US	SANTAFE(SM)	2005	G 3.5 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SANTAFE(SM)	2005	G 3.5 DOHC	ABS [2WD]	x	x	x	x	x	0062
US	SANTAFE(SM)	2005	G 3.5 DOHC	ABS [2WD]		x	x	x	x	0062
US	SANTAFE(SM)	2005	G 3.5 DOHC	ABS [4WD]	x	x	x	x	x	0062
US	SANTAFE(SM)	2005	G 3.5 DOHC	ABS [4WD]		x	x	x	x	0062
US	SANTAFE(SM)	2005	G 3.5 DOHC	AIRBAG [Airbag Control]	x	x	x			0104
US	SANTAFE(SM)	2005	G 3.5 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(SM)	2004	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	SANTAFE(SM)	2004	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SANTAFE(SM)	2004	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(SM)	2004	G 2.4 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SANTAFE(SM)	2004	G 2.4 DOHC	ABS [2WD]		x	x	x	x	0062
US	SANTAFE(SM)	2004	G 2.4 DOHC	ABS [4WD]		x	x	x	x	0062
US	SANTAFE(SM)	2004	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	SANTAFE(SM)	2004	G 2.4 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(SM)	2004	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0110, 0113
US	SANTAFE(SM)	2004	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SANTAFE(SM)	2004	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(SM)	2004	G 2.7 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SANTAFE(SM)	2004	G 2.7 DOHC	ABS [2WD]		x	x	x	x	0062
US	SANTAFE(SM)	2004	G 2.7 DOHC	ABS [4WD]		x	x	x	x	0062
US	SANTAFE(SM)	2004	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	SANTAFE(SM)	2004	G 2.7 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(SM)	2004	G 3.5 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	SANTAFE(SM)	2004	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(SM)	2004	G 3.5 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SANTAFE(SM)	2004	G 3.5 DOHC	ABS [2WD]		x	x	x	x	0062
US	SANTAFE(SM)	2004	G 3.5 DOHC	ABS [4WD]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE(SM)	2004	G 3.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	SANTAFE(SM)	2004	G 3.5 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(SM)	2003	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	SANTAFE(SM)	2003	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SANTAFE(SM)	2003	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(SM)	2003	G 2.4 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SANTAFE(SM)	2003	G 2.4 DOHC	ABS [2WD]		x	x	x	x	0062
US	SANTAFE(SM)	2003	G 2.4 DOHC	ABS [4WD]		x	x	x	x	0062
US	SANTAFE(SM)	2003	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	SANTAFE(SM)	2003	G 2.4 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(SM)	2003	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0110, 0113
US	SANTAFE(SM)	2003	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SANTAFE(SM)	2003	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(SM)	2003	G 2.7 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SANTAFE(SM)	2003	G 2.7 DOHC	ABS [2WD]		x	x	x	x	0062
US	SANTAFE(SM)	2003	G 2.7 DOHC	ABS [4WD]		x	x	x	x	0062
US	SANTAFE(SM)	2003	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	SANTAFE(SM)	2003	G 2.7 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(SM)	2003	G 3.5 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	SANTAFE(SM)	2003	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(SM)	2003	G 3.5 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SANTAFE(SM)	2003	G 3.5 DOHC	ABS [2WD]		x	x	x	x	0062
US	SANTAFE(SM)	2003	G 3.5 DOHC	ABS [4WD]		x	x	x	x	0062
US	SANTAFE(SM)	2003	G 3.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	SANTAFE(SM)	2003	G 3.5 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(SM)	2002	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	SANTAFE(SM)	2002	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SANTAFE(SM)	2002	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(SM)	2002	G 2.4 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SANTAFE(SM)	2002	G 2.4 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SANTAFE(SM)	2002	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	SANTAFE(SM)	2002	G 2.4 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(SM)	2002	G 2.7 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0110, 0113
US	SANTAFE(SM)	2002	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SANTAFE(SM)	2002	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(SM)	2002	G 2.7 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SANTAFE(SM)	2002	G 2.7 DOHC	ABS [2WD]		x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SANTAFE(SM)	2002	G 2.7 DOHC	ABS [4WD]		x	x	x	x	0062
US	SANTAFE(SM)	2002	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	SANTAFE(SM)	2002	G 2.7 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(SM)	2001	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	SANTAFE(SM)	2001	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SANTAFE(SM)	2001	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(SM)	2001	G 2.4 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SANTAFE(SM)	2001	G 2.4 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SANTAFE(SM)	2001	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	SANTAFE(SM)	2001	G 2.4 DOHC	4WD [4WD Control]		x	x			
US	SANTAFE(SM)	2001	G 2.7 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0110, 0113
US	SANTAFE(SM)	2001	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SANTAFE(SM)	2001	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SANTAFE(SM)	2001	G 2.7 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SANTAFE(SM)	2001	G 2.7 DOHC	ABS [Anti - Lock Brake (2WD)]		x	x	x	x	0062
US	SANTAFE(SM)	2001	G 2.7 DOHC	ABS [Anti - Lock Brake (4WD)]		x	x	x	x	0062
US	SANTAFE(SM)	2001	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	SANTAFE(SM)	2001	G 2.7 DOHC	4WD [4WD Control]		x	x			
US	SCOUPE(L1)	1996	G 1.5 SOHC	ENGINE [Engine Control (Turbo)]		x	x	x	x	
US	SCOUPE(L1)	1996	G 1.5 SOHC	ENGINE [Engine Control (California)]		x	x	x	x	
US	SCOUPE(L1)	1996	G 1.5 SOHC	ENGINE [Engine Control (Federal)]		x	x	x	x	
US	SCOUPE(L1)	1995	G 1.5 SOHC	ENGINE [Engine Control (Turbo)]		x	x	x	x	
US	SCOUPE(L1)	1995	G 1.5 SOHC	ENGINE [Engine Control (California)]		x	x	x	x	
US	SCOUPE(L1)	1995	G 1.5 SOHC	ENGINE [Engine Control (Federal)]		x	x	x	x	
US	SCOUPE(L1)	1994	G 1.5 SOHC	ENGINE [Engine Control (Turbo)]		x	x	x	x	
US	SCOUPE(L1)	1994	G 1.5 SOHC	ENGINE [Engine Control (California)]		x	x	x	x	
US	SCOUPE(L1)	1994	G 1.5 SOHC	ENGINE [Engine Control (Federal)]		x	x	x	x	
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	ENGINE [Engine Control]	x	x	x	x	x	0012, 0015, 0050, 0053, 0109, 0113, 0143
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	MCU [HEV Motor Control System]	x	x	x	x		0046, 0093
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	HCULDC [HCU / LDC]	x	x	x	x	x	0030, 0048, 0049, 0078
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	BMS [HEV Battery System]	x	x	x	x	x	0119
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	AT [Automatic Transaxle]	x	x	x	x		0036, 0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	ESCAHB [ESC / AHB]	x	x	x	x	x	0057, 0062, 0066
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	EPB [Electric Parking Brake]	x	x	x	x	x	
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	ODS [Weight Classification System]	x	x	x	x		
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	SCC [Smart Cruise Control]	x	x	x	x		
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	TPMS [Tire Pressure Monitoring]	x	x	x			
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	LDWS [Lane Departure Warning System]	x	x	x	x		0120, 0121
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	AAF [Active Air Flap]	x	x	x	x	x	
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	AMP [Amplifier]						0005
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	ADM [Assist Door Module]	x	x	x	x	x	
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	DDM [Driver Door Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	BCM [Body Control Module]	×	×	×	×	×	
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	SJB [Smart Junction Block]	×	×	×	×	×	0117
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	CGW [Central Gateway]	×	×	×			0051
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	TMU [Telematics Unit]	×	×	×			
US	SONATA HEV(LF HEV)	2017	G 2.0 HEV	VESS [Virtual Engine Sound System]	×	×	×		×	
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	ENGINE [Engine Control]	×	×	×	×	×	0012, 0015, 0050, 0053, 0109, 0113, 0143
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	MCU [HEV Motor Control System]	×	×	×	×		0046, 0093
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	HCULDC [HCU / LDC]	×	×	×	×	×	0030, 0048, 0049, 0078
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	BMS [HEV Battery System]	×	×	×	×	×	0119
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	AT [Automatic Transaxle]	×	×	×	×		0036, 0114
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	ESCAHB [ESC / AHB]	×	×	×	×	×	0057, 0062, 0066
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	EPB [Electric Parking Brake]	×	×	×	×	×	
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	AIRBAG [Airbag (Event #1)]	×	×	×			
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	AIRBAG [Airbag (Event #2)]	×	×	×			
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	ODS [Weight Classification System]	×	×	×	×		
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	AIRCON [Air Conditioner]	×	×	×	×	×	
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	EPS [Motor Driven Power Steering]	×	×	×	×		0086
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	SCC [Smart Cruise Control]	×	×	×	×		
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	TPMS [Tire Pressure Monitoring]	×	×	×			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	LDWS [Lane Departure Warning System]	x	x	x	x		0120, 0121
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	AAF [Active Air Flap]	x	x	x	x	x	
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	AMP [Amplifier]						0005
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	ADM [Assist Door Module]	x	x	x	x	x	
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	DDM [Driver Door Module]	x	x	x	x	x	
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	CGW [Central Gateway]	x	x	x			0051
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	TMU [Telematics Unit]	x	x	x			
US	SONATA HEV(LF HEV)	2016	G 2.0 HEV	VESS [Virtual Engine Sound System]	x	x	x		x	
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0052, 0109, 0113, 0143
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	MCU [HEV Motor System]	x	x	x	x	x	0046, 0093
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	HCU [HEV Control System]	x	x	x	x		0030, 0048, 0049, 0078
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	BMS [HEV Battery System]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	LDC [Low DC / DC Converter]	×	×	×	×		
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AT [Automatic Transaxle]	×	×	×	×	×	0036, 0114
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	ABSESC [ABS / ESC]	×	×	×	×	×	0062, 0085
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AHB [Active Hydraulic Booster]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	ODS [Weight Classification System]	×	×	×	×		0141
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AIRBAG [Airbag (Event #2)]	×	×	×			
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AIRBAG [Airbag (Event #1)]	×	×	×			
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AIRCON [Air Conditioner]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	EPS [Power Steering]	×	×	×	×		0086
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	TPMS [Tire Pressure Monitoring]	×	×	×		×	
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AAF [Active Air Flap]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	IMMO [Immobilizer]				×		0081, 0084, 0094, 0105, 0127
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	SMK [Smart Key Unit]	×	×	×	×	×	0056, 0098, 0118, 0133
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	SMKCODE [Smart Key Code Saving]				×		
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	PDM [Power Distribution Module]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	CLU [Cluster Module]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	BCM [Body Control Module]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	SJB [Smart Junction Block]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	TMU [Telematics Unit]	×	×	×			
US	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	CODE [Transmitter Code Saving]				×		0026
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	ENGINE [Engine Control]	×	×	×	×		0012, 0015, 0052, 0109, 0113, 0143
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	MCU [HEV Motor System]	×	×	×	×	×	0046, 0093
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	HCU [HEV Control System]	×	×	×	×		0030, 0048, 0049, 0078
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	BMS [HEV Battery System]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	LDC [Low DC / DC Converter]	×	×	×	×		
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AT [Automatic Transaxle]	×	×	×	×	×	0036, 0114
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	ABSESC [ABS / ESC]	×	×	×	×	×	0062, 0085
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AHB [Active Hydraulic Booster]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	ODS [Weight Classification System]	×	×	×	×		0141
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AIRBAG [Airbag (Event #2)]	×	×	×			
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AIRBAG [Airbag (Event #1)]	×	×	×			
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AIRCON [Air Conditioner]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	EPS [Power Steering]	×	×	×	×		0086
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	TPMS [Tire Pressure Monitoring]	×	×	×		×	
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AAF [Active Air Flap]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	IMMO [Immobilizer]				×		0081, 0084, 0094, 0105, 0127

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	SMK [Smart Key Unit]	×	×	×	×	×	0056, 0098, 0118, 0133
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	SMKCODE [Smart Key Code Saving]				×		
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	PDM [Power Distribution Module]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	CLU [Cluster Module]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	BCM [Body Control Module]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	SJB [Smart Junction Block]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	TMU [Telematics Unit]	×	×	×			
US	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	CODE [Transmitter Code Saving]				×		0026
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	ENGINE [Engine Control]	×	×	×	×		0012, 0015, 0052, 0109, 0113, 0143
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	MCU [HEV Motor System]	×	×	×	×	×	0046, 0093
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	HCU [HEV Control System]	×	×	×	×		0030, 0048, 0049, 0078
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	BMS [HEV Battery System]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	LDC [Low DC / DC Converter]	×	×	×	×		
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	AT [Automatic Transaxle]	×	×	×	×	×	0036, 0114
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	ABSESC [ABS / ESC]	×	×	×	×	×	0062, 0085
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	AHB [Active Hydraulic Booster]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	ODS [Weight Classification System]	×	×	×	×		0141
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	AIRBAG [Airbag (Event #2)]	×	×	×			
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	AIRBAG [Airbag (Event #1)]	×	×	×			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	EPS [Power Steering]	x	x	x	x		0086
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	AHLS [Auto Headlamp Leveling System]	x	x	x	x		0083
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	AAF [Active Air Flap]	x	x	x	x	x	
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	SMKCODE [Smart Key Code Saving]				x		
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	PDM [Power Distribution Module]	x	x	x	x	x	
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	SJB [Smart Junction Block]	x	x	x	x	x	
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	TMU [Telematics Unit]	x	x	x			
US	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	CODE [Transmitter Code Saving]				x		0026
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0052, 0109, 0113, 0143
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	MCU [HEV Motor System]	x	x	x	x	x	0046, 0093
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	HCU [HEV Control System]	x	x	x	x		0030, 0048, 0049, 0078
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	BMS [HEV Battery System]	x	x	x	x	x	
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	LDC [Low DC / DC Converter]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	AT [Automatic Transaxle]	×	×	×	×	×	0036, 0114
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	ABSESC [ABS / ESC]	×	×	×	×	×	0062, 0085
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	AHB [Active Hydraulic Booster]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	ODS [Weight Classification System]	×	×	×	×		0141
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	AIRBAG [Airbag (Event #2)]	×	×	×			
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	AIRBAG [Airbag (Event #1)]	×	×	×			
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	AIRCON [Air Conditioner]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	EPS [Power Steering]	×	×	×	×		0086, 0088
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	EPS [Power Steering]	×	×	×	×		0086
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	TPMS [Tire Pressure Monitoring]	×	×	×		×	
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	AAF [Active Air Flap]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	IMMO [Immobilizer]				×		0081, 0084, 0094, 0105, 0127
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	SMK [Smart Key Unit]	×	×	×	×	×	0056, 0098, 0118, 0133
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	SMKCODE [Smart Key Code Saving]				×		
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	PDM [Power Distribution Module]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	CLU [Cluster Module]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	BCM [Body Control Module]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	SJB [Smart Junction Block]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	TMU [Telematics Unit]	×	×	×			
US	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	CODE [Transmitter Code Saving]				×		0026
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	ENGINE [Engine Control]	×	×	×	×		0012, 0015, 0052, 0109, 0113, 0143
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	MCU [HEV Motor System]	×	×	×	×	×	0046, 0093
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	HCU [HEV Control System]	×	×	×	×		0030, 0048, 0049, 0078
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	BMS [HEV Battery System]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	LDC [Low DC / DC Converter]	×	×	×	×		
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	AT [Automatic Transaxle]	×	×	×	×	×	0036, 0114
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	ABSESC [ABS / ESC]	×	×	×	×	×	0062, 0085
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	AHB [Active Hydraulic Booster]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	ODS [Weight Classification System]	×	×	×	×		0141
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	AIRBAG [Airbag (Event #2)]	×	×	×			
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	AIRBAG [Airbag (Event #1)]	×	×	×			
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	AIRCON [Air Conditioner]	×	×	×	×	×	
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	EPS [Motor Driven Power Steering]	×	×	×	×		0086, 0088
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	EPS [Motor Driven Power Steering]	×	×	×	×		0086
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	TPMS [Tire Pressure Monitoring]	×	×	×		×	
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	AHLS [Auto Headlamp Leveling System]	×	×	×	×		0083
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	AAF [Active Air Flap]	×	×	×	×	×	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	PDM [Power Distribution Module]	x	x	x	x	x	
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	SMKCODE [Smart Key Code Saving]				x		
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	SJB [Smart Junction Block]	x	x	x	x	x	
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	CODE [Transmitter Code Saving]				x		0026
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	ENGINE [Engine Control]	x	x	x	x	x	0012, 0015, 0050, 0053, 0109, 0113, 0143
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	MCU [HEV Motor Control System]	x	x	x	x		0046, 0093
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	HCULDC [HCU / LDC]	x	x	x	x	x	0030, 0048, 0049, 0078
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	BMS [HEV Battery System]	x	x	x	x	x	0119
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	AT [Automatic Transaxle]	x	x	x	x		0036, 0114
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	ESCAHB [ESP / AHB]	x	x	x	x	x	0057, 0062, 0066
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	EPB [Electric Parking Brake]	x	x	x	x	x	
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	ODS [Weight Classification System]	x	x	x	x		
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	OBC [On Board Charger]	x	x	x	x		
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	SCC [Smart Cruise Control]	x	x	x	x		
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	TPMS [Tire Pressure Monitoring System]	x	x	x			
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	LDWS [Lane Departure Warning System]	x	x	x	x		0120, 0121
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	AAF [Active Air Flap]	x	x	x	x	x	
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	AMP [Amplifier]						0005
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	ADM [Assist Door Module]	x	x	x	x	x	
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	DDM [Driver Door Module]	x	x	x	x	x	
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	CGW [Central Gateway]	x	x	x			0051
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	TMU [Telematics Unit]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	VESS [Virtual Engine Sound System]	x	x	x		x	
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	ENGINE [Engine Control]	x	x	x	x	x	0012, 0015, 0050, 0053, 0109, 0113, 0143
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	MCU [HEV Motor Control System]	x	x	x	x		0046, 0093
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	HCULDC [HCU / LDC]	x	x	x	x	x	0030, 0048, 0049, 0078
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	BMS [HEV Battery System]	x	x	x	x	x	0119
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	AT [Automatic Transaxle]	x	x	x	x		0036, 0114
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	ESCAHB [ESP / AHB]	x	x	x	x	x	0057, 0062, 0066
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	EPB [Electric Parking Brake]	x	x	x	x	x	
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	ODS [Weight Classification System]	x	x	x	x		
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	OBC [On Board Charger]	x	x	x	x		
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	SCC [Smart Cruise Control]	x	x	x	x		
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	TPMS [Tire Pressure Monitoring System]	x	x	x			
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	LDWS [Lane Departure Warning System]	x	x	x	x		0120, 0121
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	AAF [Active Air Flap]	x	x	x	x	x	
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	AMP [Amplifier]						0005
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	ADM [Assist Door Module]	x	x	x	x	x	
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	DDM [Driver Door Module]	x	x	x	x	x	
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	CGW [Central Gateway]	x	x	x			0051
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	TMU [Telematics Unit]	x	x	x			
US	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	VESS [Virtual Engine Sound System]	x	x	x		x	
US	SONATA(EF)	2005	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	SONATA(EF)	2005	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(EF)	2005	G 2.4 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(EF)	2005	G 2.4 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(EF)	2005	G 2.4 DOHC	AIRBAG [Airbag Control]		x	x			
US	SONATA(EF)	2005	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	SONATA(EF)	2005	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0109, 0110, 0113
US	SONATA(EF)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(EF)	2005	G 2.7 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(EF)	2005	G 2.7 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(EF)	2005	G 2.7 DOHC	AIRBAG [Airbag Control]		x	x			
US	SONATA(EF)	2005	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(EF)	2004	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	SONATA(EF)	2004	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(EF)	2004	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SONATA(EF)	2004	G 2.4 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(EF)	2004	G 2.4 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(EF)	2004	G 2.4 DOHC	AIRBAG [Airbag Control]		x	x			
US	SONATA(EF)	2004	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	SONATA(EF)	2004	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0110, 0113
US	SONATA(EF)	2004	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(EF)	2004	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SONATA(EF)	2004	G 2.7 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(EF)	2004	G 2.7 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(EF)	2004	G 2.7 DOHC	AIRBAG [Airbag Control]		x	x			
US	SONATA(EF)	2004	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	SONATA(EF)	2003	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	SONATA(EF)	2003	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(EF)	2003	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SONATA(EF)	2003	G 2.4 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(EF)	2003	G 2.4 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(EF)	2003	G 2.4 DOHC	AIRBAG [Airbag Control]		x	x			
US	SONATA(EF)	2003	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	SONATA(EF)	2003	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0110, 0113
US	SONATA(EF)	2003	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(EF)	2003	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SONATA(EF)	2003	G 2.7 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(EF)	2003	G 2.7 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(EF)	2003	G 2.7 DOHC	AIRBAG [Airbag Control]		x	x			
US	SONATA(EF)	2003	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	SONATA(EF)	2002	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	SONATA(EF)	2002	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(EF)	2002	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SONATA(EF)	2002	G 2.4 DOHC	ABS [February15 / 2002~ (Bosch)]		x	x	x	x	0062
US	SONATA(EF)	2002	G 2.4 DOHC	ABS [~February15 / 2002 (ITT)]		x	x	x	x	0062
US	SONATA(EF)	2002	G 2.4 DOHC	AIRBAG [Airbag Control]		x	x			
US	SONATA(EF)	2002	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	SONATA(EF)	2002	G 2.7 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0110, 0113
US	SONATA(EF)	2002	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(EF)	2002	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SONATA(EF)	2002	G 2.7 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(EF)	2002	G 2.7 DOHC	ABS [February15 / 2002~ (Bosch)]		x	x	x	x	0062
US	SONATA(EF)	2002	G 2.7 DOHC	ABS [~February15 / 2002 (ITT)]		x	x	x	x	0062
US	SONATA(EF)	2002	G 2.7 DOHC	AIRBAG [Airbag Control]		x	x			
US	SONATA(EF)	2002	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	SONATA(EF)	2001	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	SONATA(EF)	2001	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(EF)	2001	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SONATA(EF)	2001	G 2.4 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(EF)	2001	G 2.4 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(EF)	2001	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	SONATA(EF)	2001	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	SONATA(EF)	2001	G 2.5 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0110, 0113
US	SONATA(EF)	2001	G 2.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(EF)	2001	G 2.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SONATA(EF)	2001	G 2.5 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(EF)	2001	G 2.5 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(EF)	2001	G 2.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	SONATA(EF)	2001	G 2.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	SONATA(EF)	2000	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	SONATA(EF)	2000	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(EF)	2000	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SONATA(EF)	2000	G 2.4 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(EF)	2000	G 2.4 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(EF)	2000	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	SONATA(EF)	2000	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	SONATA(EF)	2000	G 2.5 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0110, 0113
US	SONATA(EF)	2000	G 2.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(EF)	2000	G 2.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SONATA(EF)	2000	G 2.5 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(EF)	2000	G 2.5 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(EF)	2000	G 2.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	SONATA(EF)	2000	G 2.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	SONATA(EF)	1999	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	SONATA(EF)	1999	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(EF)	1999	G 2.4 DOHC	AT [Automatic Transaxle]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(EF)	1999	G 2.4 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(EF)	1999	G 2.4 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(EF)	1999	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	SONATA(EF)	1999	G 2.4 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	SONATA(EF)	1999	G 2.5 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0110, 0113
US	SONATA(EF)	1999	G 2.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(EF)	1999	G 2.5 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	SONATA(EF)	1999	G 2.5 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(EF)	1999	G 2.5 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(EF)	1999	G 2.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	SONATA(EF)	1999	G 2.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	SONATA(LFA)	2017	G 1.6 T-GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	SONATA(LFA)	2017	G 1.6 T-GDI	AT [Dual Clutch Transmission]	x	x	x	x		
US	SONATA(LFA)	2017	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	x	x	x	x		
US	SONATA(LFA)	2017	G 1.6 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(LFA)	2017	G 1.6 T-GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 1.6 T-GDI	OCS [Occupant Classification System]	x	x	x	x		
US	SONATA(LFA)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA(LFA)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(LFA)	2017	G 1.6 T-GDI	AIRCON [FATC / MTC]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA(LFA)	2017	G 1.6 T-GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	SONATA(LFA)	2017	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	SONATA(LFA)	2017	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	x	x	x	x		
US	SONATA(LFA)	2017	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SONATA(LFA)	2017	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SONATA(LFA)	2017	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	SONATA(LFA)	2017	G 1.6 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SONATA(LFA)	2017	G 1.6 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SONATA(LFA)	2017	G 1.6 T-GDI	AMP [Amplifier]						0005
US	SONATA(LFA)	2017	G 1.6 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 1.6 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(LFA)	2017	G 1.6 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 1.6 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 1.6 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 1.6 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SONATA(LFA)	2017	G 1.6 T-GDI	TMU [Telematics Unit]	x	x	x			
US	SONATA(LFA)	2017	G 1.6 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	SONATA(LFA)	2017	G 2.0 T-GDI	ENGINE [Engine Control]	x	x	x	x	x	0012, 0015, 0050, 0053, 0109, 0113, 0115, 0143
US	SONATA(LFA)	2017	G 2.0 T-GDI	AT [Automatic Transaxle]	x	x	x	x		0006, 0114
US	SONATA(LFA)	2017	G 2.0 T-GDI	AEB [Autonomous Emergency Braking System]	x	x	x	x		
US	SONATA(LFA)	2017	G 2.0 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(LFA)	2017	G 2.0 T-GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 2.0 T-GDI	OCS [Occupant Classification System]	x	x	x	x		
US	SONATA(LFA)	2017	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA(LFA)	2017	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(LFA)	2017	G 2.0 T-GDI	AIRCON [FATC / MTC]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA(LFA)	2017	G 2.0 T-GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	SONATA(LFA)	2017	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	SONATA(LFA)	2017	G 2.0 T-GDI	LDWS [Lane Departure Warning System]	x	x	x	x		
US	SONATA(LFA)	2017	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SONATA(LFA)	2017	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SONATA(LFA)	2017	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	SONATA(LFA)	2017	G 2.0 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SONATA(LFA)	2017	G 2.0 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SONATA(LFA)	2017	G 2.0 T-GDI	AMP [Amplifier]						0005
US	SONATA(LFA)	2017	G 2.0 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 2.0 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SONATA(LFA)	2017	G 2.0 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 2.0 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 2.0 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 2.0 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SONATA(LFA)	2017	G 2.0 T-GDI	TMU [Telematics Unit]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(LFA)	2017	G 2.0 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	SONATA(LFA)	2017	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x	x	0012, 0015, 0050, 0053, 0109, 0113, 0115, 0143
US	SONATA(LFA)	2017	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x		0006, 0114
US	SONATA(LFA)	2017	G 2.4 GDI	AEB [Autonomous Emergency Braking System]	x	x	x	x		
US	SONATA(LFA)	2017	G 2.4 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(LFA)	2017	G 2.4 GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 2.4 GDI	OCS [Occupant Classification System]	x	x	x	x		
US	SONATA(LFA)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA(LFA)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(LFA)	2017	G 2.4 GDI	AIRCON [FATC / MTC]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 2.4 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA(LFA)	2017	G 2.4 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	SONATA(LFA)	2017	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	SONATA(LFA)	2017	G 2.4 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		
US	SONATA(LFA)	2017	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SONATA(LFA)	2017	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SONATA(LFA)	2017	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	SONATA(LFA)	2017	G 2.4 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SONATA(LFA)	2017	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SONATA(LFA)	2017	G 2.4 GDI	AMP [Amplifier]						0005
US	SONATA(LFA)	2017	G 2.4 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 2.4 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SONATA(LFA)	2017	G 2.4 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 2.4 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(LFA)	2017	G 2.4 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SONATA(LFA)	2017	G 2.4 GDI	TMU [Telematics Unit]	x	x	x			
US	SONATA(LFA)	2017	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
US	SONATA(LFA)	2016	G 1.6 T-GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	SONATA(LFA)	2016	G 1.6 T-GDI	AT [Dual Clutch Transmission]	x	x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(LFA)	2016	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	x	x	x	x		
US	SONATA(LFA)	2016	G 1.6 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(LFA)	2016	G 1.6 T-GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
US	SONATA(LFA)	2016	G 1.6 T-GDI	OCS [Occupant Classification System]	x	x	x	x		
US	SONATA(LFA)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA(LFA)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(LFA)	2016	G 1.6 T-GDI	AIRCON [FATC / MTC]	x	x	x	x	x	
US	SONATA(LFA)	2016	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA(LFA)	2016	G 1.6 T-GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	SONATA(LFA)	2016	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	SONATA(LFA)	2016	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	x	x	x	x		
US	SONATA(LFA)	2016	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SONATA(LFA)	2016	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SONATA(LFA)	2016	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	SONATA(LFA)	2016	G 1.6 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SONATA(LFA)	2016	G 1.6 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SONATA(LFA)	2016	G 1.6 T-GDI	AMP [Amplifier]						0005
US	SONATA(LFA)	2016	G 1.6 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(LFA)	2016	G 1.6 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SONATA(LFA)	2016	G 1.6 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2016	G 1.6 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2016	G 1.6 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(LFA)	2016	G 1.6 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SONATA(LFA)	2016	G 1.6 T-GDI	TMU [Telematics Unit]	x	x	x			
US	SONATA(LFA)	2016	G 1.6 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	SONATA(LFA)	2016	G 2.0 T-GDI	ENGINE [Engine Control]	x	x	x	x	x	0012, 0015, 0050, 0053, 0109, 0113, 0115, 0143
US	SONATA(LFA)	2016	G 2.0 T-GDI	AT [Automatic Transaxle]	x	x	x	x		0006, 0114
US	SONATA(LFA)	2016	G 2.0 T-GDI	AEB [Autonomous Emergency Braking System]	x	x	x	x		
US	SONATA(LFA)	2016	G 2.0 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(LFA)	2016	G 2.0 T-GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(LFA)	2016	G 2.0 T-GDI	OCS [Occupant Classification System]	x	x	x	x		
US	SONATA(LFA)	2016	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA(LFA)	2016	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(LFA)	2016	G 2.0 T-GDI	AIRCON [FATC / MTC]	x	x	x	x	x	
US	SONATA(LFA)	2016	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA(LFA)	2016	G 2.0 T-GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	SONATA(LFA)	2016	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	SONATA(LFA)	2016	G 2.0 T-GDI	LDWS [Lane Departure Warning System]	x	x	x	x		
US	SONATA(LFA)	2016	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SONATA(LFA)	2016	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SONATA(LFA)	2016	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	SONATA(LFA)	2016	G 2.0 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SONATA(LFA)	2016	G 2.0 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SONATA(LFA)	2016	G 2.0 T-GDI	AMP [Amplifier]						0005
US	SONATA(LFA)	2016	G 2.0 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(LFA)	2016	G 2.0 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SONATA(LFA)	2016	G 2.0 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2016	G 2.0 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2016	G 2.0 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(LFA)	2016	G 2.0 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SONATA(LFA)	2016	G 2.0 T-GDI	TMU [Telematics Unit]	x	x	x			
US	SONATA(LFA)	2016	G 2.0 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	SONATA(LFA)	2016	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x	x	0012, 0015, 0050, 0053, 0109, 0113, 0115, 0143
US	SONATA(LFA)	2016	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x		0006, 0114
US	SONATA(LFA)	2016	G 2.4 GDI	AEB [Autonomous Emergency Braking System]	x	x	x	x		
US	SONATA(LFA)	2016	G 2.4 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(LFA)	2016	G 2.4 GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
US	SONATA(LFA)	2016	G 2.4 GDI	OCS [Occupant Classification System]	x	x	x	x		
US	SONATA(LFA)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA(LFA)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(LFA)	2016	G 2.4 GDI	AIRCON [FATC / MTC]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(LFA)	2016	G 2.4 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA(LFA)	2016	G 2.4 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	SONATA(LFA)	2016	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	SONATA(LFA)	2016	G 2.4 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		
US	SONATA(LFA)	2016	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SONATA(LFA)	2016	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SONATA(LFA)	2016	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	SONATA(LFA)	2016	G 2.4 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SONATA(LFA)	2016	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SONATA(LFA)	2016	G 2.4 GDI	AMP [Amplifier]						0005
US	SONATA(LFA)	2016	G 2.4 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(LFA)	2016	G 2.4 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SONATA(LFA)	2016	G 2.4 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2016	G 2.4 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2016	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(LFA)	2016	G 2.4 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SONATA(LFA)	2016	G 2.4 GDI	TMU [Telematics Unit]	x	x	x			
US	SONATA(LFA)	2016	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
US	SONATA(LFA)	2015	G 1.6 T-GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	SONATA(LFA)	2015	G 1.6 T-GDI	AT [Dual Clutch Transmission]	x	x	x	x		
US	SONATA(LFA)	2015	G 1.6 T-GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 1.6 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(LFA)	2015	G 1.6 T-GDI	OCS [Occupant Classification System]	x	x	x	x		
US	SONATA(LFA)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(LFA)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA(LFA)	2015	G 1.6 T-GDI	AIRCON [FATC / MTC]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA(LFA)	2015	G 1.6 T-GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	SONATA(LFA)	2015	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	SONATA(LFA)	2015	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SONATA(LFA)	2015	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(LFA)	2015	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0120, 0121
US	SONATA(LFA)	2015	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	SONATA(LFA)	2015	G 1.6 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SONATA(LFA)	2015	G 1.6 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SONATA(LFA)	2015	G 1.6 T-GDI	AMP [Amplifier]						0005
US	SONATA(LFA)	2015	G 1.6 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 1.6 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SONATA(LFA)	2015	G 1.6 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SONATA(LFA)	2015	G 1.6 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 1.6 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 1.6 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 1.6 T-GDI	TMU [Telematics Unit]	x	x	x			
US	SONATA(LFA)	2015	G 1.6 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	SONATA(LFA)	2015	G 2.0 T-GDI	ENGINE [Engine Control]	x	x	x	x	x	0012, 0015, 0050, 0053, 0109, 0113, 0115, 0143
US	SONATA(LFA)	2015	G 2.0 T-GDI	AT [Automatic Transaxle]	x	x	x	x		0006, 0114
US	SONATA(LFA)	2015	G 2.0 T-GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 2.0 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(LFA)	2015	G 2.0 T-GDI	OCS [Occupant Classification System]	x	x	x	x		
US	SONATA(LFA)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(LFA)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA(LFA)	2015	G 2.0 T-GDI	AIRCON [FATC / MTC]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA(LFA)	2015	G 2.0 T-GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	SONATA(LFA)	2015	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	SONATA(LFA)	2015	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SONATA(LFA)	2015	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SONATA(LFA)	2015	G 2.0 T-GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0120, 0121
US	SONATA(LFA)	2015	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	SONATA(LFA)	2015	G 2.0 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SONATA(LFA)	2015	G 2.0 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SONATA(LFA)	2015	G 2.0 T-GDI	AMP [Amplifier]						0005

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(LFA)	2015	G 2.0 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 2.0 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SONATA(LFA)	2015	G 2.0 T-GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SONATA(LFA)	2015	G 2.0 T-GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 2.0 T-GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 2.0 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 2.0 T-GDI	TMU [Telematics Unit]	x	x	x			
US	SONATA(LFA)	2015	G 2.0 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	SONATA(LFA)	2015	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x	x	0012, 0015, 0050, 0053, 0109, 0113, 0115, 0143
US	SONATA(LFA)	2015	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x		0006, 0114
US	SONATA(LFA)	2015	G 2.4 GDI	EPB [Electronic Parking Brake]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 2.4 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(LFA)	2015	G 2.4 GDI	OCS [Occupant Classification System]	x	x	x	x		
US	SONATA(LFA)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(LFA)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA(LFA)	2015	G 2.4 GDI	AIRCON [FATC / MTC]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 2.4 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA(LFA)	2015	G 2.4 GDI	SCC [Smart Cruise Control]	x	x	x	x		
US	SONATA(LFA)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	SONATA(LFA)	2015	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	SONATA(LFA)	2015	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	SONATA(LFA)	2015	G 2.4 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		0120, 0121
US	SONATA(LFA)	2015	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	SONATA(LFA)	2015	G 2.4 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	SONATA(LFA)	2015	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	SONATA(LFA)	2015	G 2.4 GDI	AMP [Amplifier]						0005
US	SONATA(LFA)	2015	G 2.4 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 2.4 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	SONATA(LFA)	2015	G 2.4 GDI	PSM [Power Seat Module]	x	x	x	x	x	0122
US	SONATA(LFA)	2015	G 2.4 GDI	ADM [Assist Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 2.4 GDI	DDM [Driver Door Module]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(LFA)	2015	G 2.4 GDI	TMU [Telematics Unit]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(LFA)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
US	SONATA(NF)	2010	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
US	SONATA(NF)	2010	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SONATA(NF)	2010	G 2.4 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(NF)	2010	G 2.4 DOHC	ODS [Weight Classification]	x	x	x	x		0141
US	SONATA(NF)	2010	G 2.4 DOHC	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	SONATA(NF)	2010	G 2.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(NF)	2010	G 2.4 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	SONATA(NF)	2010	G 2.4 DOHC	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SONATA(NF)	2010	G 2.4 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SONATA(NF)	2010	G 2.4 DOHC	BCM [Body Control Module]	x			x	x	
US	SONATA(NF)	2010	G 2.4 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SONATA(NF)	2010	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	SONATA(NF)	2010	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SONATA(NF)	2010	G 3.3 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(NF)	2010	G 3.3 DOHC	ODS [Weight Classification]	x	x	x	x		0141
US	SONATA(NF)	2010	G 3.3 DOHC	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	SONATA(NF)	2010	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(NF)	2010	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	SONATA(NF)	2010	G 3.3 DOHC	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SONATA(NF)	2010	G 3.3 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SONATA(NF)	2010	G 3.3 DOHC	BCM [Body Control Module]	x			x	x	
US	SONATA(NF)	2010	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SONATA(NF)	2009	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
US	SONATA(NF)	2009	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SONATA(NF)	2009	G 2.4 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(NF)	2009	G 2.4 DOHC	ODS [Weight Classification]	x	x	x	x		0141
US	SONATA(NF)	2009	G 2.4 DOHC	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	SONATA(NF)	2009	G 2.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(NF)	2009	G 2.4 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	SONATA(NF)	2009	G 2.4 DOHC	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SONATA(NF)	2009	G 2.4 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(NF)	2009	G 2.4 DOHC	BCM [Body Control Module]	x			x	x	
US	SONATA(NF)	2009	G 2.4 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SONATA(NF)	2009	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	SONATA(NF)	2009	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SONATA(NF)	2009	G 3.3 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(NF)	2009	G 3.3 DOHC	ODS [Weight Classification]	x	x	x	x		0141
US	SONATA(NF)	2009	G 3.3 DOHC	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	SONATA(NF)	2009	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(NF)	2009	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	SONATA(NF)	2009	G 3.3 DOHC	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SONATA(NF)	2009	G 3.3 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SONATA(NF)	2009	G 3.3 DOHC	BCM [Body Control Module]	x			x	x	
US	SONATA(NF)	2009	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SONATA(NF)	2008	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
US	SONATA(NF)	2008	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113
US	SONATA(NF)	2008	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SONATA(NF)	2008	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(NF)	2008	G 2.4 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(NF)	2008	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
US	SONATA(NF)	2008	G 2.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(NF)	2008	G 2.4 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	SONATA(NF)	2008	G 2.4 DOHC	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SONATA(NF)	2008	G 2.4 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SONATA(NF)	2008	G 2.4 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	SONATA(NF)	2008	G 2.4 DOHC	BCM [Body Control Module]	x			x	x	
US	SONATA(NF)	2008	G 2.4 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SONATA(NF)	2008	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	SONATA(NF)	2008	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	SONATA(NF)	2008	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SONATA(NF)	2008	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(NF)	2008	G 3.3 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(NF)	2008	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0102

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(NF)	2008	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(NF)	2008	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	SONATA(NF)	2008	G 3.3 DOHC	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SONATA(NF)	2008	G 3.3 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SONATA(NF)	2008	G 3.3 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	SONATA(NF)	2008	G 3.3 DOHC	BCM [Body Control Module]	x			x	x	
US	SONATA(NF)	2008	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SONATA(NF)	2007	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
US	SONATA(NF)	2007	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113
US	SONATA(NF)	2007	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SONATA(NF)	2007	G 2.4 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(NF)	2007	G 2.4 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(NF)	2007	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
US	SONATA(NF)	2007	G 2.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(NF)	2007	G 2.4 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	SONATA(NF)	2007	G 2.4 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	SONATA(NF)	2007	G 2.4 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SONATA(NF)	2007	G 2.4 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	SONATA(NF)	2007	G 2.4 DOHC	BCM [Body Control Module]	x			x	x	
US	SONATA(NF)	2007	G 2.4 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SONATA(NF)	2007	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	SONATA(NF)	2007	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	SONATA(NF)	2007	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SONATA(NF)	2007	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(NF)	2007	G 3.3 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(NF)	2007	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
US	SONATA(NF)	2007	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(NF)	2007	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	SONATA(NF)	2007	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	SONATA(NF)	2007	G 3.3 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(NF)	2007	G 3.3 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	SONATA(NF)	2007	G 3.3 DOHC	BCM [Body Control Module]	x			x	x	
US	SONATA(NF)	2007	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SONATA(NF)	2006	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
US	SONATA(NF)	2006	G 2.4 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113
US	SONATA(NF)	2006	G 2.4 DOHC	AT [5 - Speed]	x	x	x	x	x	
US	SONATA(NF)	2006	G 2.4 DOHC	AT [4 - Speed]	x	x	x	x	x	
US	SONATA(NF)	2006	G 2.4 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(NF)	2006	G 2.4 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
US	SONATA(NF)	2006	G 2.4 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(NF)	2006	G 2.4 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	SONATA(NF)	2006	G 2.4 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	SONATA(NF)	2006	G 2.4 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SONATA(NF)	2006	G 2.4 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	SONATA(NF)	2006	G 2.4 DOHC	BCM [Body Control Module]	x			x	x	
US	SONATA(NF)	2006	G 2.4 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SONATA(NF)	2006	G 3.3 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	SONATA(NF)	2006	G 3.3 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	SONATA(NF)	2006	G 3.3 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	SONATA(NF)	2006	G 3.3 DOHC	AIRBAG [Airbag Control]	x	x	x			0102
US	SONATA(NF)	2006	G 3.3 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(NF)	2006	G 3.3 DOHC	EPS [Electronic Power Steering]		x	x	x		
US	SONATA(NF)	2006	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	SONATA(NF)	2006	G 3.3 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	SONATA(NF)	2006	G 3.3 DOHC	BCM [Body Control Module]	x			x	x	
US	SONATA(NF)	2006	G 3.3 DOHC	CODE [Transmitter Code Saving]				x		0026
US	SONATA(Y2)	1994	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y2)	1994	G 2.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y2)	1994	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y2)	1994	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		
US	SONATA(Y2)	1994	G 3.0 SOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y2)	1994	G 3.0 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y2)	1994	G 3.0 SOHC	AIRBAG [Airbag Control]		x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(Y2)	1994	G 3.0 SOHC	IMMO [Immobilizer]		x	x	x		
US	SONATA(Y2)	1993	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y2)	1993	G 2.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y2)	1993	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y2)	1993	G 3.0 SOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y2)	1993	G 3.0 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y2)	1993	G 3.0 SOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y2)	1992	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y2)	1992	G 2.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y2)	1992	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y2)	1992	G 3.0 SOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y2)	1992	G 3.0 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y2)	1992	G 3.0 SOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y2)	1991	G 2.4 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y2)	1991	G 2.4 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y2)	1991	G 2.4 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y2)	1991	G 3.0 SOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y2)	1991	G 3.0 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y2)	1991	G 3.0 SOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y2)	1990	G 2.4 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y2)	1990	G 2.4 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y2)	1990	G 2.4 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y2)	1990	G 3.0 SOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y2)	1990	G 3.0 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y2)	1990	G 3.0 SOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y2)	1989	G 2.4 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y2)	1989	G 2.4 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y2)	1989	G 2.4 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y2)	1989	G 3.0 SOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y2)	1989	G 3.0 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y2)	1989	G 3.0 SOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y3)	1998	G 2.0 DOHC	ENGINE [Engine Control]		x	x	x	x	
US	SONATA(Y3)	1998	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y3)	1998	G 2.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y3)	1998	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y3)	1998	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		
US	SONATA(Y3)	1998	G 3.0 SOHC	ENGINE [Engine Control]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(Y3)	1998	G 3.0 SOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y3)	1998	G 3.0 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y3)	1998	G 3.0 SOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y3)	1998	G 3.0 SOHC	IMMO [Immobilizer]		x	x	x		
US	SONATA(Y3)	1997	G 2.0 DOHC	ENGINE [Engine Control]		x	x	x	x	
US	SONATA(Y3)	1997	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y3)	1997	G 2.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y3)	1997	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y3)	1997	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		
US	SONATA(Y3)	1997	G 3.0 SOHC	ENGINE [Engine Control]		x	x	x	x	
US	SONATA(Y3)	1997	G 3.0 SOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y3)	1997	G 3.0 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y3)	1997	G 3.0 SOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y3)	1997	G 3.0 SOHC	IMMO [Immobilizer]		x	x	x		
US	SONATA(Y3)	1996	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y3)	1996	G 2.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y3)	1996	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y3)	1996	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		
US	SONATA(Y3)	1996	G 3.0 SOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y3)	1996	G 3.0 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y3)	1996	G 3.0 SOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y3)	1996	G 3.0 SOHC	IMMO [Immobilizer]		x	x	x		
US	SONATA(Y3)	1995	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y3)	1995	G 2.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y3)	1995	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y3)	1995	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		
US	SONATA(Y3)	1995	G 3.0 SOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y3)	1995	G 3.0 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y3)	1995	G 3.0 SOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y3)	1995	G 3.0 SOHC	IMMO [Immobilizer]		x	x	x		
US	SONATA(Y3)	1994	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y3)	1994	G 2.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y3)	1994	G 2.0 DOHC	AIRBAG [Airbag Control]		x	x	x		
US	SONATA(Y3)	1994	G 2.0 DOHC	IMMO [Immobilizer]		x	x	x		
US	SONATA(Y3)	1994	G 3.0 SOHC	TCS [Traction Control System]		x	x	x	x	
US	SONATA(Y3)	1994	G 3.0 SOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	SONATA(Y3)	1994	G 3.0 SOHC	AIRBAG [Airbag Control]		x	x	x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(Y3)	1994	G 3.0 SOHC	IMMO [Immobilizer]		x	x	x		
US	SONATA(YFA)	2014	G 2.0 T-GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0097, 0109, 0113, 0143
US	SONATA(YFA)	2014	G 2.0 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SONATA(YFA)	2014	G 2.0 T-GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0010
US	SONATA(YFA)	2014	G 2.0 T-GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	SONATA(YFA)	2014	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(YFA)	2014	G 2.0 T-GDI	ODS [Weight Classification System]	x	x	x	x		0141
US	SONATA(YFA)	2014	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA(YFA)	2014	G 2.0 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(YFA)	2014	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA(YFA)	2014	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SONATA(YFA)	2014	G 2.0 T-GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	SONATA(YFA)	2014	G 2.0 T-GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SONATA(YFA)	2014	G 2.0 T-GDI	SMKCODE [Smart Key Code Saving]				x		
US	SONATA(YFA)	2014	G 2.0 T-GDI	PDM [Power Distribution Module]	x	x	x	x	x	
US	SONATA(YFA)	2014	G 2.0 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	SONATA(YFA)	2014	G 2.0 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	SONATA(YFA)	2014	G 2.0 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(YFA)	2014	G 2.0 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(YFA)	2014	G 2.0 T-GDI	TMU [Telematics Unit]	x	x	x			
US	SONATA(YFA)	2014	G 2.0 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	SONATA(YFA)	2014	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0097, 0109, 0113, 0143
US	SONATA(YFA)	2014	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SONATA(YFA)	2014	G 2.4 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0010
US	SONATA(YFA)	2014	G 2.4 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	SONATA(YFA)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(YFA)	2014	G 2.4 GDI	ODS [Weight Classification System]	x	x	x	x		0141
US	SONATA(YFA)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA(YFA)	2014	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(YFA)	2014	G 2.4 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA(YFA)	2014	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SONATA(YFA)	2014	G 2.4 GDI	BSD [Blind Spot Detection]	x	x	x	x	x	
US	SONATA(YFA)	2014	G 2.4 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(YFA)	2014	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				x		
US	SONATA(YFA)	2014	G 2.4 GDI	PDM [Power Distribution Module]	x	x	x	x	x	
US	SONATA(YFA)	2014	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	SONATA(YFA)	2014	G 2.4 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	SONATA(YFA)	2014	G 2.4 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(YFA)	2014	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(YFA)	2014	G 2.4 GDI	TMU [Telematics Unit]	x	x	x			
US	SONATA(YFA)	2014	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
US	SONATA(YFA)	2013	G 2.0 T-GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0097, 0109, 0113, 0143
US	SONATA(YFA)	2013	G 2.0 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SONATA(YFA)	2013	G 2.0 T-GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0010
US	SONATA(YFA)	2013	G 2.0 T-GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	SONATA(YFA)	2013	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(YFA)	2013	G 2.0 T-GDI	ODS [Weight Classification System]	x	x	x	x		0141
US	SONATA(YFA)	2013	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA(YFA)	2013	G 2.0 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(YFA)	2013	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA(YFA)	2013	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SONATA(YFA)	2013	G 2.0 T-GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SONATA(YFA)	2013	G 2.0 T-GDI	SMKCODE [Smart Key Code Saving]				x		
US	SONATA(YFA)	2013	G 2.0 T-GDI	PDM [Power Distribution Module]	x	x	x	x	x	
US	SONATA(YFA)	2013	G 2.0 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	SONATA(YFA)	2013	G 2.0 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	SONATA(YFA)	2013	G 2.0 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(YFA)	2013	G 2.0 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(YFA)	2013	G 2.0 T-GDI	TMU [Telematics Unit]	x	x	x			
US	SONATA(YFA)	2013	G 2.0 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	SONATA(YFA)	2013	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0097, 0109, 0113, 0143
US	SONATA(YFA)	2013	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SONATA(YFA)	2013	G 2.4 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0010
US	SONATA(YFA)	2013	G 2.4 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	SONATA(YFA)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(YFA)	2013	G 2.4 GDI	ODS [Weight Classification System]	x	x	x	x		0141
US	SONATA(YFA)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(YFA)	2013	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(YFA)	2013	G 2.4 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA(YFA)	2013	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SONATA(YFA)	2013	G 2.4 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SONATA(YFA)	2013	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				x		
US	SONATA(YFA)	2013	G 2.4 GDI	PDM [Power Distribution Module]	x	x	x	x	x	
US	SONATA(YFA)	2013	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	SONATA(YFA)	2013	G 2.4 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	SONATA(YFA)	2013	G 2.4 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(YFA)	2013	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(YFA)	2013	G 2.4 GDI	TMU [Telematics Unit]	x	x	x			
US	SONATA(YFA)	2013	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
US	SONATA(YFA)	2012	G 2.0 T-GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0097, 0109, 0113, 0143
US	SONATA(YFA)	2012	G 2.0 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SONATA(YFA)	2012	G 2.0 T-GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0010
US	SONATA(YFA)	2012	G 2.0 T-GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	SONATA(YFA)	2012	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(YFA)	2012	G 2.0 T-GDI	ODS [Weight Classification System]	x	x	x	x		0141
US	SONATA(YFA)	2012	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA(YFA)	2012	G 2.0 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(YFA)	2012	G 2.0 T-GDI	EPS [Motor Driven Power Steering (~September23 / 2011)]	x	x	x	x		0086
US	SONATA(YFA)	2012	G 2.0 T-GDI	EPS [Motor Driven Power Steering (September24 / 2011~)]	x	x	x	x		0086
US	SONATA(YFA)	2012	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SONATA(YFA)	2012	G 2.0 T-GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SONATA(YFA)	2012	G 2.0 T-GDI	SMKCODE [Smart Key Code Saving]				x		
US	SONATA(YFA)	2012	G 2.0 T-GDI	PDM [Power Distribution Module]	x	x	x	x	x	
US	SONATA(YFA)	2012	G 2.0 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	SONATA(YFA)	2012	G 2.0 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	SONATA(YFA)	2012	G 2.0 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(YFA)	2012	G 2.0 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(YFA)	2012	G 2.0 T-GDI	TMU [Telematics Unit]	x	x	x			
US	SONATA(YFA)	2012	G 2.0 T-GDI	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(YFA)	2012	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0097, 0109, 0113, 0143
US	SONATA(YFA)	2012	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SONATA(YFA)	2012	G 2.4 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0010
US	SONATA(YFA)	2012	G 2.4 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	SONATA(YFA)	2012	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(YFA)	2012	G 2.4 GDI	ODS [Weight Classification System]	x	x	x	x		0141
US	SONATA(YFA)	2012	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA(YFA)	2012	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(YFA)	2012	G 2.4 GDI	EPS [Motor Driven Power Steering (~September23 / 2011)]	x	x	x	x		0086
US	SONATA(YFA)	2012	G 2.4 GDI	EPS [Motor Driven Power Steering (September24 / 2011~)]	x	x	x	x		0086
US	SONATA(YFA)	2012	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SONATA(YFA)	2012	G 2.4 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SONATA(YFA)	2012	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				x		
US	SONATA(YFA)	2012	G 2.4 GDI	PDM [Power Distribution Module]	x	x	x	x	x	
US	SONATA(YFA)	2012	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	SONATA(YFA)	2012	G 2.4 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	SONATA(YFA)	2012	G 2.4 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(YFA)	2012	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(YFA)	2012	G 2.4 GDI	TMU [Telematics Unit]	x	x	x			
US	SONATA(YFA)	2012	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
US	SONATA(YFA)	2011	G 2.0 T-GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0097, 0109, 0113, 0143
US	SONATA(YFA)	2011	G 2.0 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SONATA(YFA)	2011	G 2.0 T-GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0010
US	SONATA(YFA)	2011	G 2.0 T-GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	SONATA(YFA)	2011	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(YFA)	2011	G 2.0 T-GDI	ODS [Weight Classification System]	x	x	x	x		0141
US	SONATA(YFA)	2011	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA(YFA)	2011	G 2.0 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(YFA)	2011	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA(YFA)	2011	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SONATA(YFA)	2011	G 2.0 T-GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SONATA(YFA)	2011	G 2.0 T-GDI	PDM [Power Distribution Module]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	SONATA(YFA)	2011	G 2.0 T-GDI	SMKCODE [Smart Key Code Saving]				x		
US	SONATA(YFA)	2011	G 2.0 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	SONATA(YFA)	2011	G 2.0 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	SONATA(YFA)	2011	G 2.0 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(YFA)	2011	G 2.0 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(YFA)	2011	G 2.0 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	SONATA(YFA)	2011	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0097, 0109, 0113, 0143
US	SONATA(YFA)	2011	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	SONATA(YFA)	2011	G 2.4 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0010
US	SONATA(YFA)	2011	G 2.4 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	SONATA(YFA)	2011	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	SONATA(YFA)	2011	G 2.4 GDI	ODS [Weight Classification System]	x	x	x	x		0141
US	SONATA(YFA)	2011	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	SONATA(YFA)	2011	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	SONATA(YFA)	2011	G 2.4 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	SONATA(YFA)	2011	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	SONATA(YFA)	2011	G 2.4 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	SONATA(YFA)	2011	G 2.4 GDI	PDM [Power Distribution Module]	x	x	x	x	x	
US	SONATA(YFA)	2011	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				x		
US	SONATA(YFA)	2011	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	SONATA(YFA)	2011	G 2.4 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	SONATA(YFA)	2011	G 2.4 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	SONATA(YFA)	2011	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	SONATA(YFA)	2011	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
US	TIBURON(GK)	2008	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	TIBURON(GK)	2008	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TIBURON(GK)	2008	G 2.0 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	TIBURON(GK)	2008	G 2.0 DOHC	ABSESC [ABS / ESC]		x	x	x	x	0062
US	TIBURON(GK)	2008	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	TIBURON(GK)	2008	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	TIBURON(GK)	2008	G 2.0 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	TIBURON(GK)	2008	G 2.0 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	TIBURON(GK)	2008	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TIBURON(GK)	2008	G 2.0 DOHC	BCM [Body Control Module]				x	x	
US	TIBURON(GK)	2008	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TIBURON(GK)	2008	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0109, 0113
US	TIBURON(GK)	2008	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	TIBURON(GK)	2008	G 2.7 DOHC	ABSESC [Electronic Stability Control]	x	x	x	x	x	0062
US	TIBURON(GK)	2008	G 2.7 DOHC	ABSESC [Electronic Stability Control]		x	x	x	x	0062
US	TIBURON(GK)	2008	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	TIBURON(GK)	2008	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	TIBURON(GK)	2008	G 2.7 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	TIBURON(GK)	2008	G 2.7 DOHC	IMMO [Immobilizer]		x		x		0094
US	TIBURON(GK)	2008	G 2.7 DOHC	BCM [Body Control Module]				x	x	
US	TIBURON(GK)	2008	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TIBURON(GK)	2007	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	TIBURON(GK)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TIBURON(GK)	2007	G 2.0 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	TIBURON(GK)	2007	G 2.0 DOHC	ABSESC [ABS / ESC]		x	x	x	x	0062
US	TIBURON(GK)	2007	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	TIBURON(GK)	2007	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	TIBURON(GK)	2007	G 2.0 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	TIBURON(GK)	2007	G 2.0 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	TIBURON(GK)	2007	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	TIBURON(GK)	2007	G 2.0 DOHC	BCM [Body Control Module]				x	x	
US	TIBURON(GK)	2007	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TIBURON(GK)	2007	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0109, 0110, 0113
US	TIBURON(GK)	2007	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	TIBURON(GK)	2007	G 2.7 DOHC	ABSESC [Electronic Stability Control]	x	x	x	x	x	0062
US	TIBURON(GK)	2007	G 2.7 DOHC	ABSESC [Electronic Stability Control]		x	x	x	x	0062
US	TIBURON(GK)	2007	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TIBURON(GK)	2007	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	TIBURON(GK)	2007	G 2.7 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	TIBURON(GK)	2007	G 2.7 DOHC	IMMO [Immobilizer]		x		x		0094
US	TIBURON(GK)	2007	G 2.7 DOHC	BCM [Body Control Module]				x	x	
US	TIBURON(GK)	2007	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TIBURON(GK)	2006	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113
US	TIBURON(GK)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	TIBURON(GK)	2006	G 2.0 DOHC	ABSESC [Electronic Stability Control]	x	x	x	x	x	0062
US	TIBURON(GK)	2006	G 2.0 DOHC	ABSESC [Electronic Stability Control]		x	x	x	x	0062
US	TIBURON(GK)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	TIBURON(GK)	2006	G 2.0 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	TIBURON(GK)	2006	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	TIBURON(GK)	2006	G 2.0 DOHC	BCM [Body Control Module]				x	x	
US	TIBURON(GK)	2006	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TIBURON(GK)	2006	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0109, 0110, 0113
US	TIBURON(GK)	2006	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	TIBURON(GK)	2006	G 2.7 DOHC	ABSESC [Electronic Stability Control]	x	x	x	x	x	0062
US	TIBURON(GK)	2006	G 2.7 DOHC	ABSESC [Electronic Stability Control]		x	x	x	x	0062
US	TIBURON(GK)	2006	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	TIBURON(GK)	2006	G 2.7 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	TIBURON(GK)	2006	G 2.7 DOHC	IMMO [Immobilizer]		x		x		0094
US	TIBURON(GK)	2006	G 2.7 DOHC	BCM [Body Control Module]				x	x	
US	TIBURON(GK)	2006	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TIBURON(GK)	2005	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113
US	TIBURON(GK)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	TIBURON(GK)	2005	G 2.0 DOHC	ABSESC [Electronic Stability Control]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TIBURON(GK)	2005	G 2.0 DOHC	ABSESC [Electronic Stability Control]		x	x	x	x	0062
US	TIBURON(GK)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	TIBURON(GK)	2005	G 2.0 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	TIBURON(GK)	2005	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	TIBURON(GK)	2005	G 2.0 DOHC	BCM [Body Control Module]				x	x	
US	TIBURON(GK)	2005	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TIBURON(GK)	2005	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0109, 0110, 0113
US	TIBURON(GK)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	TIBURON(GK)	2005	G 2.7 DOHC	ABSESC [Electronic Stability Control]	x	x	x	x	x	0062
US	TIBURON(GK)	2005	G 2.7 DOHC	ABSESC [Electronic Stability Control]		x	x	x	x	0062
US	TIBURON(GK)	2005	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	TIBURON(GK)	2005	G 2.7 DOHC	AHLS [Automatic Headlamp Leveling System]	x	x	x	x		0083
US	TIBURON(GK)	2005	G 2.7 DOHC	IMMO [Immobilizer]		x		x		0094
US	TIBURON(GK)	2005	G 2.7 DOHC	BCM [Body Control Module]				x	x	
US	TIBURON(GK)	2005	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TIBURON(GK)	2004	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0113
US	TIBURON(GK)	2004	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	TIBURON(GK)	2004	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	TIBURON(GK)	2004	G 2.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	TIBURON(GK)	2004	G 2.0 DOHC	ABSESC [Electronic Stability Control]	x	x	x	x	x	0062
US	TIBURON(GK)	2004	G 2.0 DOHC	ABSESC [Electronic Stability Control]		x	x	x	x	0062
US	TIBURON(GK)	2004	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	TIBURON(GK)	2004	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	TIBURON(GK)	2004	G 2.0 DOHC	BCM [Body Control Module]				x	x	
US	TIBURON(GK)	2004	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TIBURON(GK)	2004	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0110, 0113
US	TIBURON(GK)	2004	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	TIBURON(GK)	2004	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	TIBURON(GK)	2004	G 2.7 DOHC	TCS [Traction Control System]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TIBURON(GK)	2004	G 2.7 DOHC	ABSESC [Electronic Stability Control]	×	×	×	×	×	0062
US	TIBURON(GK)	2004	G 2.7 DOHC	ABSESC [Electronic Stability Control]		×	×	×	×	0062
US	TIBURON(GK)	2004	G 2.7 DOHC	AIRBAG [Airbag Control]	×	×	×			
US	TIBURON(GK)	2004	G 2.7 DOHC	IMMO [Immobilizer]		×		×		0094
US	TIBURON(GK)	2004	G 2.7 DOHC	BCM [Body Control Module]				×	×	
US	TIBURON(GK)	2004	G 2.7 DOHC	CODE [Transmitter Code Saving]				×		0026
US	TIBURON(GK)	2003	G 2.0 DOHC	ENGINE [Engine Control]	×	×	×	×	×	0015, 0053, 0110, 0113
US	TIBURON(GK)	2003	G 2.0 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	
US	TIBURON(GK)	2003	G 2.0 DOHC	AT [Automatic Transaxle]		×	×	×	×	
US	TIBURON(GK)	2003	G 2.0 DOHC	TCS [Traction Control System]		×	×	×	×	
US	TIBURON(GK)	2003	G 2.0 DOHC	ABS [Anti - Lock Brake System]		×	×	×	×	0062
US	TIBURON(GK)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]	×	×	×			
US	TIBURON(GK)	2003	G 2.0 DOHC	IMMO [Immobilizer]				×		0084, 0094, 0105, 0135
US	TIBURON(GK)	2003	G 2.0 DOHC	BCM [Body Control Module]				×	×	
US	TIBURON(GK)	2003	G 2.0 DOHC	CODE [Transmitter Code Saving]				×		0026
US	TIBURON(GK)	2003	G 2.7 DOHC	ENGINE [Engine Control (January1 / 2003~)]		×	×	×	×	0015, 0053, 0110, 0113
US	TIBURON(GK)	2003	G 2.7 DOHC	ENGINE [Engine Control (~January1 / 2003)]	×	×	×	×	×	0015, 0053, 0110, 0113
US	TIBURON(GK)	2003	G 2.7 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	
US	TIBURON(GK)	2003	G 2.7 DOHC	AT [Automatic Transaxle]		×	×	×	×	
US	TIBURON(GK)	2003	G 2.7 DOHC	TCS [Traction Control System]		×	×	×	×	
US	TIBURON(GK)	2003	G 2.7 DOHC	ABS [Anti - Lock Brake System]		×	×	×	×	0062
US	TIBURON(GK)	2003	G 2.7 DOHC	AIRBAG [Airbag Control]	×	×	×			
US	TIBURON(GK)	2003	G 2.7 DOHC	IMMO [Immobilizer]		×		×		0094
US	TIBURON(GK)	2003	G 2.7 DOHC	BCM [Body Control Module]				×	×	
US	TIBURON(GK)	2003	G 2.7 DOHC	CODE [Transmitter Code Saving]				×		0026
US	TIBURON(RC)	2001	G 2.0 DOHC	ENGINE [Engine Control]		×	×	×		
US	TIBURON(RC)	2001	G 2.0 DOHC	AT [Automatic Transaxle]		×	×	×	×	
US	TIBURON(RC)	2001	G 2.0 DOHC	ABS [Anti - Lock Brake System]		×	×	×	×	0062
US	TIBURON(RC)	2001	G 2.0 DOHC	AIRBAG [Airbag Control]	×	×	×			
US	TIBURON(RC)	2001	G 2.0 DOHC	IMMO [Immobilizer]		×	×	×		0071, 0090, 0091, 0094
US	TIBURON(RC)	2000	G 2.0 DOHC	ENGINE [Engine Control]		×	×	×		
US	TIBURON(RC)	2000	G 2.0 DOHC	AT [Automatic Transaxle]		×	×	×	×	
US	TIBURON(RC)	2000	G 2.0 DOHC	ABS [Anti - Lock Brake]		×	×	×	×	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TIBURON(RC)	2000	G 2.0 DOHC	AIRBAG [Airbag Control]	×	×	×			
US	TIBURON(RC)	2000	G 2.0 DOHC	IMMO [Immobilizer]		×	×	×		0071, 0090, 0091, 0094
US	TIBURON(RC)	1999	G 2.0 DOHC	ENGINE [Engine Control]		×	×	×		
US	TIBURON(RC)	1999	G 2.0 DOHC	AT [Automatic Transaxle (June1 / 1999~)]		×	×	×	×	
US	TIBURON(RC)	1999	G 2.0 DOHC	ABS [Anti - Lock Brake System]		×	×	×	×	0062
US	TIBURON(RC)	1999	G 2.0 DOHC	AIRBAG [Airbag Control]		×	×	×		
US	TIBURON(RC)	1999	G 2.0 DOHC	IMMO [Immobilizer]		×	×	×		0071, 0090, 0091, 0094
US	TIBURON(RC)	1998	G 1.8 DOHC	ENGINE [Engine Control]		×	×	×		
US	TIBURON(RC)	1998	G 1.8 DOHC	ABS [Anti - Lock Brake]		×	×	×	×	0062
US	TIBURON(RC)	1998	G 1.8 DOHC	AIRBAG [Airbag Control]		×	×	×		
US	TIBURON(RC)	1998	G 1.8 DOHC	IMMO [Immobilizer]		×	×	×		0071, 0090, 0091, 0094
US	TIBURON(RC)	1998	G 2.0 DOHC	ENGINE [Engine Control]		×	×	×		
US	TIBURON(RC)	1998	G 2.0 DOHC	ABS [Anti - Lock Brake System]		×	×	×	×	0062
US	TIBURON(RC)	1998	G 2.0 DOHC	AIRBAG [Airbag Control]		×	×	×		
US	TIBURON(RC)	1998	G 2.0 DOHC	IMMO [Immobilizer]		×	×	×		0071, 0090, 0091, 0094
US	TIBURON(RC)	1997	G 1.8 DOHC	ENGINE [Engine Control]		×	×	×		
US	TIBURON(RC)	1997	G 1.8 DOHC	ABS [Anti - Lock Brake]		×	×	×	×	0062
US	TIBURON(RC)	1997	G 1.8 DOHC	AIRBAG [Airbag Control]		×	×	×		
US	TIBURON(RC)	1997	G 1.8 DOHC	IMMO [Immobilizer]		×	×	×		0071, 0090, 0091, 0094
US	TIBURON(RC)	1997	G 2.0 DOHC	ENGINE [Engine Control]		×	×	×		
US	TIBURON(RC)	1997	G 2.0 DOHC	ABS [Anti - Lock Brake System]		×	×	×	×	0062
US	TIBURON(RC)	1997	G 2.0 DOHC	AIRBAG [Airbag Control]		×	×	×		
US	TIBURON(RC)	1997	G 2.0 DOHC	IMMO [Immobilizer]		×	×	×		0071, 0090, 0091, 0094
US	TUCSON FCEV(LM FCEV)	2017	100KW	MCU [FCEV Motor Control System]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2017	100KW	BMS [EV Battery System]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2017	100KW	HSCU [Hydrogen Storage System]	×	×	×	×	×	0108
US	TUCSON FCEV(LM FCEV)	2017	100KW	HDC [High DC / DC Convertor]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2017	100KW	LDC [Low DC / DC Converter]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2017	100KW	FPD [Fuel Processing Driver]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2017	100KW	FCU [Fuel Cell System]	×	×	×	×	×	0011, 0045, 0055, 0128, 0130

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TUCSON FCEV(LM FCEV)	2017	100KW	SVM [Stack Volt Monitor]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2017	100KW	BPCU [Blower Pump Control Unit]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2017	100KW	AHB [Active Hydraulic Booster]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2017	100KW	ABSESC [ABS / ESC]	×	×	×	×	×	0062, 0085
US	TUCSON FCEV(LM FCEV)	2017	100KW	AIRBAG [Airbag (Event #1)]	×	×	×			0099
US	TUCSON FCEV(LM FCEV)	2017	100KW	AIRBAG [Airbag (Event #2)]	×	×	×			0099
US	TUCSON FCEV(LM FCEV)	2017	100KW	AIRCON [Air Conditioner]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2017	100KW	EPS [Electronic Power Steering]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2017	100KW	TPMS [Tire Pressure Monitoring]	×	×	×		×	
US	TUCSON FCEV(LM FCEV)	2017	100KW	SMKCODE [Smart Key Code Saving]				×		
US	TUCSON FCEV(LM FCEV)	2017	100KW	PDM [Power Distribution Module]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2017	100KW	SMK [Smart Key Unit]	×	×	×	×	×	0056, 0098, 0118, 0133
US	TUCSON FCEV(LM FCEV)	2017	100KW	SJB [Smart Junction Block]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2017	100KW	BCM [Body Control Module]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2016	100KW	MCU [FCEV Motor Control System]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2016	100KW	BMS [EV Battery System]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2016	100KW	HSCU [Hydrogen Storage System]	×	×	×	×	×	0108
US	TUCSON FCEV(LM FCEV)	2016	100KW	HDC [High DC / DC Convertor]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2016	100KW	LDC [Low DC / DC Converter]	×	×	×	×		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TUCSON FCEV(LM FCEV)	2016	100KW	FPD [Fuel Processing Driver]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2016	100KW	FCU [Fuel Cell System]	×	×	×	×	×	0011, 0045, 0055, 0128, 0130
US	TUCSON FCEV(LM FCEV)	2016	100KW	SVM [Stack Volt Monitor]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2016	100KW	BPCU [Blower Pump Control Unit]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2016	100KW	AHB [Active Hydraulic Booster]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2016	100KW	ABSESC [ABS / ESC]	×	×	×	×	×	0062, 0085
US	TUCSON FCEV(LM FCEV)	2016	100KW	AIRBAG [Airbag (Event #1)]	×	×	×			0099
US	TUCSON FCEV(LM FCEV)	2016	100KW	AIRBAG [Airbag (Event #2)]	×	×	×			0099
US	TUCSON FCEV(LM FCEV)	2016	100KW	AIRCON [Air Conditioner]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2016	100KW	EPS [Electronic Power Steering]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2016	100KW	TPMS [Tire Pressure Monitoring]	×	×	×		×	
US	TUCSON FCEV(LM FCEV)	2016	100KW	SMKCODE [Smart Key Code Saving]				×		
US	TUCSON FCEV(LM FCEV)	2016	100KW	PDM [Power Distribution Module]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2016	100KW	SMK [Smart Key Unit]	×	×	×	×	×	0056, 0098, 0118, 0133
US	TUCSON FCEV(LM FCEV)	2016	100KW	SJB [Smart Junction Block]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2016	100KW	BCM [Body Control Module]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2015	100KW	MCU [FCEV Motor Control System]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2015	100KW	BMS [EV Battery System]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2015	100KW	HSCU [Hydrogen Storage System]	×	×	×	×	×	0108

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TUCSON FCEV(LM FCEV)	2015	100KW	HDC [High DC / DC Convertor]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2015	100KW	LDC [Low DC / DC Converter]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2015	100KW	FPD [Fuel Processing Driver]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2015	100KW	FCU [Fuel Cell System]	×	×	×	×	×	0011, 0045, 0055, 0128, 0130
US	TUCSON FCEV(LM FCEV)	2015	100KW	SVM [Stack Volt Monitor]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2015	100KW	BPCU [Blower Pump Control Unit]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2015	100KW	AHB [Active Hydraulic Booster]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2015	100KW	ABSESC [ABS / ESC]	×	×	×	×	×	0062, 0085
US	TUCSON FCEV(LM FCEV)	2015	100KW	AIRBAG [Airbag (Event #1)]	×	×	×			0099
US	TUCSON FCEV(LM FCEV)	2015	100KW	AIRBAG [Airbag (Event #2)]	×	×	×			0099
US	TUCSON FCEV(LM FCEV)	2015	100KW	AIRCON [Air Conditioner]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2015	100KW	EPS [Electronic Power Steering]	×	×	×	×		
US	TUCSON FCEV(LM FCEV)	2015	100KW	TPMS [Tire Pressure Monitoring]	×	×	×		×	
US	TUCSON FCEV(LM FCEV)	2015	100KW	SMKCODE [Smart Key Code Saving]				×		
US	TUCSON FCEV(LM FCEV)	2015	100KW	PDM [Power Distribution Module]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2015	100KW	SMK [Smart Key Unit]	×	×	×	×	×	0056, 0098, 0118, 0133
US	TUCSON FCEV(LM FCEV)	2015	100KW	SJB [Smart Junction Block]	×	×	×	×	×	
US	TUCSON FCEV(LM FCEV)	2015	100KW	BCM [Body Control Module]	×	×	×	×	×	
US	TUCSON(JM)	2009	G 2.0 DOHC	ENGINE [Engine Control]	×	×	×	×	×	0053, 0109, 0113, 0143
US	TUCSON(JM)	2009	G 2.0 DOHC	AT [Automatic Transaxle]	×	×	×	×	×	0114
US	TUCSON(JM)	2009	G 2.0 DOHC	ABSESC [ABS / ESC (MGH - 40)]	×	×	×	×	×	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TUCSON(JM)	2009	G 2.0 DOHC	ABSESC [ABS / ESC (MGH - 25)]	x	x	x	x	x	0062
US	TUCSON(JM)	2009	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	TUCSON(JM)	2009	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(JM)	2009	G 2.0 DOHC	4WD [4WD Control]		x	x	x		
US	TUCSON(JM)	2009	G 2.0 DOHC	4WD [4WD Control]		x	x			
US	TUCSON(JM)	2009	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	TUCSON(JM)	2009	G 2.0 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	TUCSON(JM)	2009	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	TUCSON(JM)	2009	G 2.0 DOHC	ETACS [ETACS]	x			x	x	
US	TUCSON(JM)	2009	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(JM)	2009	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0109, 0113
US	TUCSON(JM)	2009	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	TUCSON(JM)	2009	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	TUCSON(JM)	2009	G 2.7 DOHC	ABSESC [ABS / ESC (MGH - 40)]	x	x	x	x	x	0062
US	TUCSON(JM)	2009	G 2.7 DOHC	ABSESC [ABS / ESC (MGH - 25)]	x	x	x	x	x	0062
US	TUCSON(JM)	2009	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	TUCSON(JM)	2009	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(JM)	2009	G 2.7 DOHC	4WD [4WD Control]		x	x	x		
US	TUCSON(JM)	2009	G 2.7 DOHC	4WD [4WD Control]		x	x			
US	TUCSON(JM)	2009	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	TUCSON(JM)	2009	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0084, 0094, 0105, 0135
US	TUCSON(JM)	2009	G 2.7 DOHC	ETACS [ETACS]	x			x	x	
US	TUCSON(JM)	2009	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(JM)	2008	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	TUCSON(JM)	2008	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TUCSON(JM)	2008	G 2.0 DOHC	ABSESC [ABS / ESC (MGH - 40)]	x	x	x	x	x	0062
US	TUCSON(JM)	2008	G 2.0 DOHC	ABSESC [ABS / ESC (MGH - 25)]	x	x	x	x	x	0062
US	TUCSON(JM)	2008	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	TUCSON(JM)	2008	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(JM)	2008	G 2.0 DOHC	4WD [4WD Control]		x	x	x		
US	TUCSON(JM)	2008	G 2.0 DOHC	4WD [4WD Control]		x	x			
US	TUCSON(JM)	2008	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	TUCSON(JM)	2008	G 2.0 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TUCSON(JM)	2008	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	TUCSON(JM)	2008	G 2.0 DOHC	ETACS [ETACS]	x			x	x	
US	TUCSON(JM)	2008	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(JM)	2008	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0109, 0113
US	TUCSON(JM)	2008	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	TUCSON(JM)	2008	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	TUCSON(JM)	2008	G 2.7 DOHC	ABSESC [ABS / ESC (MGH - 40)]	x	x	x	x	x	0062
US	TUCSON(JM)	2008	G 2.7 DOHC	ABSESC [ABS / ESC (MGH - 25)]	x	x	x	x	x	0062
US	TUCSON(JM)	2008	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	TUCSON(JM)	2008	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(JM)	2008	G 2.7 DOHC	4WD [4WD Control]		x	x	x		
US	TUCSON(JM)	2008	G 2.7 DOHC	4WD [4WD Control]		x	x			
US	TUCSON(JM)	2008	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	TUCSON(JM)	2008	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0084, 0094, 0105, 0135
US	TUCSON(JM)	2008	G 2.7 DOHC	ETACS [ETACS]	x			x	x	
US	TUCSON(JM)	2008	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(JM)	2007	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109, 0113, 0143
US	TUCSON(JM)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TUCSON(JM)	2007	G 2.0 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	TUCSON(JM)	2007	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	TUCSON(JM)	2007	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(JM)	2007	G 2.0 DOHC	4WD [4WD Control]		x	x	x		
US	TUCSON(JM)	2007	G 2.0 DOHC	4WD [4WD Control]		x	x			
US	TUCSON(JM)	2007	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	TUCSON(JM)	2007	G 2.0 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	TUCSON(JM)	2007	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	TUCSON(JM)	2007	G 2.0 DOHC	ETACS [ETACS]	x			x	x	
US	TUCSON(JM)	2007	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(JM)	2007	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0109, 0110, 0113
US	TUCSON(JM)	2007	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	TUCSON(JM)	2007	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	TUCSON(JM)	2007	G 2.7 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	TUCSON(JM)	2007	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TUCSON(JM)	2007	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(JM)	2007	G 2.7 DOHC	4WD [4WD Control]		x	x	x		
US	TUCSON(JM)	2007	G 2.7 DOHC	4WD [4WD Control]		x	x			
US	TUCSON(JM)	2007	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	TUCSON(JM)	2007	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0084, 0094, 0105, 0135
US	TUCSON(JM)	2007	G 2.7 DOHC	ETACS [ETACS]	x			x	x	
US	TUCSON(JM)	2007	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(JM)	2006	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113
US	TUCSON(JM)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	TUCSON(JM)	2006	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	TUCSON(JM)	2006	G 2.0 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	TUCSON(JM)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	TUCSON(JM)	2006	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(JM)	2006	G 2.0 DOHC	4WD [4WD Control]		x	x			
US	TUCSON(JM)	2006	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	TUCSON(JM)	2006	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	TUCSON(JM)	2006	G 2.0 DOHC	ETACS [ETACS]	x			x	x	
US	TUCSON(JM)	2006	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(JM)	2006	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0109, 0110, 0113
US	TUCSON(JM)	2006	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	TUCSON(JM)	2006	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	TUCSON(JM)	2006	G 2.7 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	TUCSON(JM)	2006	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	TUCSON(JM)	2006	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(JM)	2006	G 2.7 DOHC	4WD [4WD Control]		x	x			
US	TUCSON(JM)	2006	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	TUCSON(JM)	2006	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0084, 0094, 0105, 0135
US	TUCSON(JM)	2006	G 2.7 DOHC	ETACS [ETACS]	x			x	x	
US	TUCSON(JM)	2006	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(JM)	2005	G 2.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0110, 0113
US	TUCSON(JM)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	TUCSON(JM)	2005	G 2.0 DOHC	AT [Automatic Transaxle]		x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TUCSON(JM)	2005	G 2.0 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	TUCSON(JM)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	TUCSON(JM)	2005	G 2.0 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(JM)	2005	G 2.0 DOHC	4WD [4WD Control]		x	x			
US	TUCSON(JM)	2005	G 2.0 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	TUCSON(JM)	2005	G 2.0 DOHC	ETACS [ETACS]	x			x	x	
US	TUCSON(JM)	2005	G 2.0 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(JM)	2005	G 2.7 DOHC	ENGINE [Engine Control]		x	x	x	x	0015, 0053, 0109, 0110, 0113
US	TUCSON(JM)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	TUCSON(JM)	2005	G 2.7 DOHC	AT [Automatic Transaxle]		x	x	x	x	
US	TUCSON(JM)	2005	G 2.7 DOHC	ABSESC [ABS / ESC]	x	x	x	x	x	0062
US	TUCSON(JM)	2005	G 2.7 DOHC	AIRBAG [Airbag Control]	x	x	x			0099, 0102
US	TUCSON(JM)	2005	G 2.7 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(JM)	2005	G 2.7 DOHC	4WD [4WD Control]		x	x			
US	TUCSON(JM)	2005	G 2.7 DOHC	IMMO [Immobilizer]		x	x	x		0084, 0094, 0105, 0135
US	TUCSON(JM)	2005	G 2.7 DOHC	ETACS [ETACS]	x			x	x	
US	TUCSON(JM)	2005	G 2.7 DOHC	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(LM)	2015	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	TUCSON(LM)	2015	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TUCSON(LM)	2015	G 2.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	TUCSON(LM)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	TUCSON(LM)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	TUCSON(LM)	2015	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(LM)	2015	G 2.0 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	TUCSON(LM)	2015	G 2.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	TUCSON(LM)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	TUCSON(LM)	2015	G 2.0 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	TUCSON(LM)	2015	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	TUCSON(LM)	2015	G 2.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	TUCSON(LM)	2015	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	TUCSON(LM)	2015	G 2.0 GDI	TMU [Telematics Unit]	x	x	x			
US	TUCSON(LM)	2015	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(LM)	2015	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TUCSON(LM)	2015	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TUCSON(LM)	2015	G 2.4 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	TUCSON(LM)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	TUCSON(LM)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	TUCSON(LM)	2015	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(LM)	2015	G 2.4 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	TUCSON(LM)	2015	G 2.4 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	TUCSON(LM)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	TUCSON(LM)	2015	G 2.4 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	TUCSON(LM)	2015	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	TUCSON(LM)	2015	G 2.4 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	TUCSON(LM)	2015	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	TUCSON(LM)	2015	G 2.4 GDI	TMU [Telematics Unit]	x	x	x			
US	TUCSON(LM)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(LM)	2014	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	TUCSON(LM)	2014	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TUCSON(LM)	2014	G 2.0 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	TUCSON(LM)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	TUCSON(LM)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	TUCSON(LM)	2014	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(LM)	2014	G 2.0 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	TUCSON(LM)	2014	G 2.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	TUCSON(LM)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	TUCSON(LM)	2014	G 2.0 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	TUCSON(LM)	2014	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	TUCSON(LM)	2014	G 2.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	TUCSON(LM)	2014	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	TUCSON(LM)	2014	G 2.0 GDI	TMU [Telematics Unit]	x	x	x			
US	TUCSON(LM)	2014	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(LM)	2014	G 2.4 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	TUCSON(LM)	2014	G 2.4 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TUCSON(LM)	2014	G 2.4 GDI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	TUCSON(LM)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			0099

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TUCSON(LM)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	TUCSON(LM)	2014	G 2.4 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(LM)	2014	G 2.4 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	TUCSON(LM)	2014	G 2.4 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		0086
US	TUCSON(LM)	2014	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	TUCSON(LM)	2014	G 2.4 GDI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	TUCSON(LM)	2014	G 2.4 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	TUCSON(LM)	2014	G 2.4 GDI	SJB [Smart Junction Block]	x	x	x	x	x	
US	TUCSON(LM)	2014	G 2.4 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	TUCSON(LM)	2014	G 2.4 GDI	TMU [Telematics Unit]	x	x	x			
US	TUCSON(LM)	2014	G 2.4 GDI	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(LM)	2013	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	TUCSON(LM)	2013	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
US	TUCSON(LM)	2013	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TUCSON(LM)	2013	G 2.0 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	TUCSON(LM)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	TUCSON(LM)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	TUCSON(LM)	2013	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(LM)	2013	G 2.0 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
US	TUCSON(LM)	2013	G 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	TUCSON(LM)	2013	G 2.0 MPI	EPS [Power Steering]	x	x	x	x		
US	TUCSON(LM)	2013	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	TUCSON(LM)	2013	G 2.0 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	TUCSON(LM)	2013	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	TUCSON(LM)	2013	G 2.0 MPI	PDM [Power Distribution Module]	x	x	x	x	x	
US	TUCSON(LM)	2013	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				x		
US	TUCSON(LM)	2013	G 2.0 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	TUCSON(LM)	2013	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	TUCSON(LM)	2013	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(LM)	2013	G 2.4 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	TUCSON(LM)	2013	G 2.4 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
US	TUCSON(LM)	2013	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TUCSON(LM)	2013	G 2.4 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	TUCSON(LM)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	TUCSON(LM)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	TUCSON(LM)	2013	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(LM)	2013	G 2.4 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
US	TUCSON(LM)	2013	G 2.4 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	TUCSON(LM)	2013	G 2.4 MPI	EPS [Power Steering]	x	x	x	x		
US	TUCSON(LM)	2013	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	TUCSON(LM)	2013	G 2.4 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	TUCSON(LM)	2013	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	TUCSON(LM)	2013	G 2.4 MPI	PDM [Power Distribution Module]	x	x	x	x	x	
US	TUCSON(LM)	2013	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				x		
US	TUCSON(LM)	2013	G 2.4 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	TUCSON(LM)	2013	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	TUCSON(LM)	2013	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(LM)	2012	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	TUCSON(LM)	2012	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
US	TUCSON(LM)	2012	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TUCSON(LM)	2012	G 2.0 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	TUCSON(LM)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	TUCSON(LM)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	TUCSON(LM)	2012	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(LM)	2012	G 2.0 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
US	TUCSON(LM)	2012	G 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	TUCSON(LM)	2012	G 2.0 MPI	EPS [Power Steering]	x	x	x	x		
US	TUCSON(LM)	2012	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	TUCSON(LM)	2012	G 2.0 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	TUCSON(LM)	2012	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	TUCSON(LM)	2012	G 2.0 MPI	PDM [Power Distribution Module]	x	x	x	x	x	
US	TUCSON(LM)	2012	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				x		
US	TUCSON(LM)	2012	G 2.0 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	TUCSON(LM)	2012	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	TUCSON(LM)	2012	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TUCSON(LM)	2012	G 2.4 MPI	ENGINE [Engine Control]	x	x	x	x		0012, 0015, 0053, 0109, 0113, 0143
US	TUCSON(LM)	2012	G 2.4 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
US	TUCSON(LM)	2012	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TUCSON(LM)	2012	G 2.4 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	TUCSON(LM)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	TUCSON(LM)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	TUCSON(LM)	2012	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(LM)	2012	G 2.4 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
US	TUCSON(LM)	2012	G 2.4 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	TUCSON(LM)	2012	G 2.4 MPI	EPS [Power Steering]	x	x	x	x		
US	TUCSON(LM)	2012	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	TUCSON(LM)	2012	G 2.4 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	TUCSON(LM)	2012	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	TUCSON(LM)	2012	G 2.4 MPI	PDM [Power Distribution Module]	x	x	x	x	x	
US	TUCSON(LM)	2012	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				x		
US	TUCSON(LM)	2012	G 2.4 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	TUCSON(LM)	2012	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	TUCSON(LM)	2012	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(LM)	2011	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
US	TUCSON(LM)	2011	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TUCSON(LM)	2011	G 2.0 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	TUCSON(LM)	2011	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	TUCSON(LM)	2011	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	TUCSON(LM)	2011	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(LM)	2011	G 2.0 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
US	TUCSON(LM)	2011	G 2.0 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	TUCSON(LM)	2011	G 2.0 MPI	EPS [Power Steering]	x	x	x	x		
US	TUCSON(LM)	2011	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	TUCSON(LM)	2011	G 2.0 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	TUCSON(LM)	2011	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	TUCSON(LM)	2011	G 2.0 MPI	PDM [Power Distribution Module]	x	x	x	x	x	
US	TUCSON(LM)	2011	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				x		
US	TUCSON(LM)	2011	G 2.0 MPI	SJB [Smart Junction Block]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TUCSON(LM)	2011	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	TUCSON(LM)	2011	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(LM)	2011	G 2.4 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
US	TUCSON(LM)	2011	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TUCSON(LM)	2011	G 2.4 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	TUCSON(LM)	2011	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	TUCSON(LM)	2011	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	TUCSON(LM)	2011	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(LM)	2011	G 2.4 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
US	TUCSON(LM)	2011	G 2.4 MPI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	TUCSON(LM)	2011	G 2.4 MPI	EPS [Power Steering]	x	x	x	x		
US	TUCSON(LM)	2011	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	TUCSON(LM)	2011	G 2.4 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	TUCSON(LM)	2011	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	TUCSON(LM)	2011	G 2.4 MPI	PDM [Power Distribution Module]	x	x	x	x	x	
US	TUCSON(LM)	2011	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				x		
US	TUCSON(LM)	2011	G 2.4 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	TUCSON(LM)	2011	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	TUCSON(LM)	2011	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(LM)	2010	G 2.0 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
US	TUCSON(LM)	2010	G 2.0 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TUCSON(LM)	2010	G 2.0 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	TUCSON(LM)	2010	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	TUCSON(LM)	2010	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	TUCSON(LM)	2010	G 2.0 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(LM)	2010	G 2.0 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
US	TUCSON(LM)	2010	G 2.0 MPI	EPS [Power Steering]	x	x	x	x		
US	TUCSON(LM)	2010	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	TUCSON(LM)	2010	G 2.0 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	TUCSON(LM)	2010	G 2.0 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	TUCSON(LM)	2010	G 2.0 MPI	PDM [Power Distribution Module]	x	x	x	x	x	
US	TUCSON(LM)	2010	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				x		
US	TUCSON(LM)	2010	G 2.0 MPI	SJB [Smart Junction Block]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TUCSON(LM)	2010	G 2.0 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	TUCSON(LM)	2010	G 2.0 MPI	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(LM)	2010	G 2.4 MPI	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0109, 0113, 0143
US	TUCSON(LM)	2010	G 2.4 MPI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TUCSON(LM)	2010	G 2.4 MPI	ESC [Electronic Stability Control]	x	x	x	x	x	0062, 0085
US	TUCSON(LM)	2010	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	x	x	x			0099
US	TUCSON(LM)	2010	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	x	x	x			0099
US	TUCSON(LM)	2010	G 2.4 MPI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(LM)	2010	G 2.4 MPI	4WD [4WD Control]	x	x	x	x		0009, 0136
US	TUCSON(LM)	2010	G 2.4 MPI	EPS [Power Steering]	x	x	x	x		
US	TUCSON(LM)	2010	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	x	x	x		x	
US	TUCSON(LM)	2010	G 2.4 MPI	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	TUCSON(LM)	2010	G 2.4 MPI	SMK [Smart Key Unit]	x	x	x	x	x	0056, 0098, 0118, 0133
US	TUCSON(LM)	2010	G 2.4 MPI	PDM [Power Distribution Module]	x	x	x	x	x	
US	TUCSON(LM)	2010	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				x		
US	TUCSON(LM)	2010	G 2.4 MPI	SJB [Smart Junction Block]	x	x	x	x	x	
US	TUCSON(LM)	2010	G 2.4 MPI	BCM [Body Control Module]	x	x	x	x	x	
US	TUCSON(LM)	2010	G 2.4 MPI	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(TL)	2017	G 1.6 T-GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	TUCSON(TL)	2017	G 1.6 T-GDI	AT [Dual Clutch Transmission]	x	x	x	x		
US	TUCSON(TL)	2017	G 1.6 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0014, 0018, 0062
US	TUCSON(TL)	2017	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	x	x	x	x		
US	TUCSON(TL)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	TUCSON(TL)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	TUCSON(TL)	2017	G 1.6 T-GDI	OCS [Occupant Classification System]	x	x	x	x		
US	TUCSON(TL)	2017	G 1.6 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(TL)	2017	G 1.6 T-GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	TUCSON(TL)	2017	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		
US	TUCSON(TL)	2017	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	TUCSON(TL)	2017	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	TUCSON(TL)	2017	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TUCSON(TL)	2017	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	x	x	x	x		
US	TUCSON(TL)	2017	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	TUCSON(TL)	2017	G 1.6 T-GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	
US	TUCSON(TL)	2017	G 1.6 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	TUCSON(TL)	2017	G 1.6 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	TUCSON(TL)	2017	G 1.6 T-GDI	AMP [Amplifier]						0005
US	TUCSON(TL)	2017	G 1.6 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	TUCSON(TL)	2017	G 1.6 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	TUCSON(TL)	2017	G 1.6 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	TUCSON(TL)	2017	G 1.6 T-GDI	PTG [Power Tail Gate]	x	x	x	x		0106
US	TUCSON(TL)	2017	G 1.6 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	TUCSON(TL)	2017	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	TUCSON(TL)	2017	G 2.0 GDI	OCS [Occupant Classification System]	x	x	x	x		
US	TUCSON(TL)	2017	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(TL)	2017	G 2.0 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	TUCSON(TL)	2017	G 2.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		
US	TUCSON(TL)	2017	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	TUCSON(TL)	2017	G 2.0 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	TUCSON(TL)	2017	G 2.0 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	TUCSON(TL)	2017	G 2.0 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		
US	TUCSON(TL)	2017	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	TUCSON(TL)	2017	G 2.0 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	
US	TUCSON(TL)	2017	G 2.0 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	TUCSON(TL)	2017	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	TUCSON(TL)	2017	G 2.0 GDI	AMP [Amplifier]						0005
US	TUCSON(TL)	2017	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	TUCSON(TL)	2017	G 2.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	TUCSON(TL)	2017	G 2.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	TUCSON(TL)	2017	G 2.0 GDI	PTG [Power Tail Gate]	x	x	x	x		0106
US	TUCSON(TL)	2017	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TUCSON(TL)	2017	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	TUCSON(TL)	2017	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TUCSON(TL)	2017	G 2.0 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0014, 0018, 0062
US	TUCSON(TL)	2017	G 2.0 GDI	AEB [Autonomous Emergency Braking System]	x	x	x	x		
US	TUCSON(TL)	2017	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	TUCSON(TL)	2016	G 1.6 T-GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	TUCSON(TL)	2016	G 1.6 T-GDI	AT [Dual Clutch Transmission]	x	x	x	x		
US	TUCSON(TL)	2016	G 1.6 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0014, 0018, 0062
US	TUCSON(TL)	2016	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	x	x	x	x		
US	TUCSON(TL)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	TUCSON(TL)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	TUCSON(TL)	2016	G 1.6 T-GDI	OCS [Occupant Classification System]	x	x	x	x		
US	TUCSON(TL)	2016	G 1.6 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(TL)	2016	G 1.6 T-GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	TUCSON(TL)	2016	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	x	x	x	x		
US	TUCSON(TL)	2016	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	TUCSON(TL)	2016	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	TUCSON(TL)	2016	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	TUCSON(TL)	2016	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	x	x	x	x		
US	TUCSON(TL)	2016	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	TUCSON(TL)	2016	G 1.6 T-GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	
US	TUCSON(TL)	2016	G 1.6 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	TUCSON(TL)	2016	G 1.6 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	TUCSON(TL)	2016	G 1.6 T-GDI	AMP [Amplifier]						0005
US	TUCSON(TL)	2016	G 1.6 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	TUCSON(TL)	2016	G 1.6 T-GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	TUCSON(TL)	2016	G 1.6 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	TUCSON(TL)	2016	G 1.6 T-GDI	PTG [Power Tail Gate]	x	x	x	x		0106
US	TUCSON(TL)	2016	G 1.6 T-GDI	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	TUCSON(TL)	2016	G 2.0 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	TUCSON(TL)	2016	G 2.0 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	TUCSON(TL)	2016	G 2.0 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0014, 0018, 0062
US	TUCSON(TL)	2016	G 2.0 GDI	AEB [Autonomous Emergency Braking System]	x	x	x	x		
US	TUCSON(TL)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	TUCSON(TL)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	TUCSON(TL)	2016	G 2.0 GDI	OCS [Occupant Classification System]	x	x	x	x		
US	TUCSON(TL)	2016	G 2.0 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	TUCSON(TL)	2016	G 2.0 GDI	4WD [4WD Control]	x	x	x	x	x	0023, 0024
US	TUCSON(TL)	2016	G 2.0 GDI	EPS [Motor Driven Power Steering]	x	x	x	x		
US	TUCSON(TL)	2016	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	TUCSON(TL)	2016	G 2.0 GDI	BSD - R [Blind Spot Detection - Right]	x	x	x	x	x	0016
US	TUCSON(TL)	2016	G 2.0 GDI	BSD - L [Blind Spot Detection - Left]	x	x	x	x	x	0016
US	TUCSON(TL)	2016	G 2.0 GDI	LDWS [Lane Departure Warning System]	x	x	x	x		
US	TUCSON(TL)	2016	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	x	x	x	x	x	0064
US	TUCSON(TL)	2016	G 2.0 GDI	AFLS [Adaptive Front Lighting System]	x	x	x	x	x	
US	TUCSON(TL)	2016	G 2.0 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	TUCSON(TL)	2016	G 2.0 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	TUCSON(TL)	2016	G 2.0 GDI	AMP [Amplifier]						0005
US	TUCSON(TL)	2016	G 2.0 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	TUCSON(TL)	2016	G 2.0 GDI	SJB [Smart Junction Block]	x	x	x	x	x	0117
US	TUCSON(TL)	2016	G 2.0 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	TUCSON(TL)	2016	G 2.0 GDI	PTG [Power Tail Gate]	x	x	x	x		0106
US	TUCSON(TL)	2016	G 2.0 GDI	CODE [Transmitter Code Saving]				x		0026
US	VELOSTER(FS)	2017	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	VELOSTER(FS)	2017	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	VELOSTER(FS)	2017	G 1.6 GDI	AT [Dual Clutch Transmission]	x	x	x	x	x	0028
US	VELOSTER(FS)	2017	G 1.6 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	VELOSTER(FS)	2017	G 1.6 GDI	ODS [PODS - F]	x	x	x			
US	VELOSTER(FS)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	VELOSTER(FS)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	VELOSTER(FS)	2017	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VELOSTER(FS)	2017	G 1.6 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	VELOSTER(FS)	2017	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	VELOSTER(FS)	2017	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	VELOSTER(FS)	2017	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	VELOSTER(FS)	2017	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	VELOSTER(FS)	2017	G 1.6 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	VELOSTER(FS)	2017	G 1.6 GDI	TMU [Telematics Unit]	x	x	x			
US	VELOSTER(FS)	2017	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
US	VELOSTER(FS)	2017	G 1.6 T-GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	VELOSTER(FS)	2017	G 1.6 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	VELOSTER(FS)	2017	G 1.6 T-GDI	AT [Dual Clutch Transmission]	x	x	x	x		
US	VELOSTER(FS)	2017	G 1.6 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	VELOSTER(FS)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	VELOSTER(FS)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	VELOSTER(FS)	2017	G 1.6 T-GDI	ODS [PODS - F]	x	x	x			
US	VELOSTER(FS)	2017	G 1.6 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VELOSTER(FS)	2017	G 1.6 T-GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	VELOSTER(FS)	2017	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	VELOSTER(FS)	2017	G 1.6 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	VELOSTER(FS)	2017	G 1.6 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	VELOSTER(FS)	2017	G 1.6 T-GDI	SERVICE [Service Reminder]	x					
US	VELOSTER(FS)	2017	G 1.6 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	VELOSTER(FS)	2017	G 1.6 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	VELOSTER(FS)	2017	G 1.6 T-GDI	TMU [Telematics Unit]	x	x	x			
US	VELOSTER(FS)	2017	G 1.6 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	VELOSTER(FS)	2016	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	VELOSTER(FS)	2016	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	VELOSTER(FS)	2016	G 1.6 GDI	AT [Dual Clutch Transmission]	x	x	x	x	x	0028
US	VELOSTER(FS)	2016	G 1.6 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	VELOSTER(FS)	2016	G 1.6 GDI	ODS [PODS - F]	x	x	x			
US	VELOSTER(FS)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	VELOSTER(FS)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	VELOSTER(FS)	2016	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	VELOSTER(FS)	2016	G 1.6 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	VELOSTER(FS)	2016	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	VELOSTER(FS)	2016	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	VELOSTER(FS)	2016	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	VELOSTER(FS)	2016	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	VELOSTER(FS)	2016	G 1.6 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	VELOSTER(FS)	2016	G 1.6 GDI	TMU [Telematics Unit]	x	x	x			
US	VELOSTER(FS)	2016	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
US	VELOSTER(FS)	2016	G 1.6 T-GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	VELOSTER(FS)	2016	G 1.6 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	VELOSTER(FS)	2016	G 1.6 T-GDI	AT [Dual Clutch Transmission]	x	x	x	x		
US	VELOSTER(FS)	2016	G 1.6 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	VELOSTER(FS)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	VELOSTER(FS)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	VELOSTER(FS)	2016	G 1.6 T-GDI	ODS [PODS - F]	x	x	x			
US	VELOSTER(FS)	2016	G 1.6 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VELOSTER(FS)	2016	G 1.6 T-GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	VELOSTER(FS)	2016	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	VELOSTER(FS)	2016	G 1.6 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	VELOSTER(FS)	2016	G 1.6 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	VELOSTER(FS)	2016	G 1.6 T-GDI	SERVICE [Service Reminder]	x					
US	VELOSTER(FS)	2016	G 1.6 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	VELOSTER(FS)	2016	G 1.6 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	VELOSTER(FS)	2016	G 1.6 T-GDI	TMU [Telematics Unit]	x	x	x			
US	VELOSTER(FS)	2016	G 1.6 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	VELOSTER(FS)	2015	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	VELOSTER(FS)	2015	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	VELOSTER(FS)	2015	G 1.6 GDI	AT [Dual Clutch Transmission]	x	x	x	x	x	0028
US	VELOSTER(FS)	2015	G 1.6 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	VELOSTER(FS)	2015	G 1.6 GDI	ODS [PODS - F]	x	x	x			
US	VELOSTER(FS)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	VELOSTER(FS)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	VELOSTER(FS)	2015	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VELOSTER(FS)	2015	G 1.6 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	VELOSTER(FS)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	VELOSTER(FS)	2015	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	VELOSTER(FS)	2015	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	VELOSTER(FS)	2015	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	VELOSTER(FS)	2015	G 1.6 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	VELOSTER(FS)	2015	G 1.6 GDI	TMU [Telematics Unit]	x	x	x			
US	VELOSTER(FS)	2015	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
US	VELOSTER(FS)	2015	G 1.6 T-GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	VELOSTER(FS)	2015	G 1.6 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	VELOSTER(FS)	2015	G 1.6 T-GDI	AT [Dual Clutch Transmission]	x	x	x	x		
US	VELOSTER(FS)	2015	G 1.6 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	VELOSTER(FS)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	VELOSTER(FS)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	VELOSTER(FS)	2015	G 1.6 T-GDI	ODS [PODS - F]	x	x	x			
US	VELOSTER(FS)	2015	G 1.6 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VELOSTER(FS)	2015	G 1.6 T-GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	VELOSTER(FS)	2015	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	VELOSTER(FS)	2015	G 1.6 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	VELOSTER(FS)	2015	G 1.6 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	VELOSTER(FS)	2015	G 1.6 T-GDI	SERVICE [Service Reminder]	x					
US	VELOSTER(FS)	2015	G 1.6 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	VELOSTER(FS)	2015	G 1.6 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	VELOSTER(FS)	2015	G 1.6 T-GDI	TMU [Telematics Unit]	x	x	x			
US	VELOSTER(FS)	2015	G 1.6 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	VELOSTER(FS)	2014	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	VELOSTER(FS)	2014	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	VELOSTER(FS)	2014	G 1.6 GDI	AT [Dual Clutch Transmission]	x	x	x	x	x	0028
US	VELOSTER(FS)	2014	G 1.6 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	VELOSTER(FS)	2014	G 1.6 GDI	ODS [PODS - F]	x	x	x			
US	VELOSTER(FS)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	VELOSTER(FS)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	VELOSTER(FS)	2014	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VELOSTER(FS)	2014	G 1.6 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	VELOSTER(FS)	2014	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	VELOSTER(FS)	2014	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	VELOSTER(FS)	2014	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	VELOSTER(FS)	2014	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	VELOSTER(FS)	2014	G 1.6 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	VELOSTER(FS)	2014	G 1.6 GDI	TMU [Telematics Unit]	x	x	x			
US	VELOSTER(FS)	2014	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
US	VELOSTER(FS)	2014	G 1.6 T-GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	VELOSTER(FS)	2014	G 1.6 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	VELOSTER(FS)	2014	G 1.6 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	VELOSTER(FS)	2014	G 1.6 T-GDI	ODS [PODS - F]	x	x	x			
US	VELOSTER(FS)	2014	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	VELOSTER(FS)	2014	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	VELOSTER(FS)	2014	G 1.6 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VELOSTER(FS)	2014	G 1.6 T-GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	VELOSTER(FS)	2014	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	VELOSTER(FS)	2014	G 1.6 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	VELOSTER(FS)	2014	G 1.6 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	VELOSTER(FS)	2014	G 1.6 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	VELOSTER(FS)	2014	G 1.6 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	VELOSTER(FS)	2014	G 1.6 T-GDI	TMU [Telematics Unit]	x	x	x			
US	VELOSTER(FS)	2014	G 1.6 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	VELOSTER(FS)	2013	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	VELOSTER(FS)	2013	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	VELOSTER(FS)	2013	G 1.6 GDI	AT [Dual Clutch Transmission]	x	x	x	x	x	0028
US	VELOSTER(FS)	2013	G 1.6 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	VELOSTER(FS)	2013	G 1.6 GDI	ODS [PODS - F]	x	x	x			
US	VELOSTER(FS)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	VELOSTER(FS)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	VELOSTER(FS)	2013	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VELOSTER(FS)	2013	G 1.6 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	VELOSTER(FS)	2013	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	VELOSTER(FS)	2013	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	VELOSTER(FS)	2013	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	VELOSTER(FS)	2013	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	VELOSTER(FS)	2013	G 1.6 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	VELOSTER(FS)	2013	G 1.6 GDI	TMU [Telematics Unit]	x	x	x			
US	VELOSTER(FS)	2013	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	VELOSTER(FS)	2013	G 1.6 T-GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	VELOSTER(FS)	2013	G 1.6 T-GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	VELOSTER(FS)	2013	G 1.6 T-GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	VELOSTER(FS)	2013	G 1.6 T-GDI	ODS [PODS - F]	x	x	x			
US	VELOSTER(FS)	2013	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	VELOSTER(FS)	2013	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	VELOSTER(FS)	2013	G 1.6 T-GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VELOSTER(FS)	2013	G 1.6 T-GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	VELOSTER(FS)	2013	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	VELOSTER(FS)	2013	G 1.6 T-GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	VELOSTER(FS)	2013	G 1.6 T-GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	VELOSTER(FS)	2013	G 1.6 T-GDI	CLU [Cluster Module]	x	x	x	x	x	
US	VELOSTER(FS)	2013	G 1.6 T-GDI	BCM [Body Control Module]	x	x	x	x	x	
US	VELOSTER(FS)	2013	G 1.6 T-GDI	TMU [Telematics Unit]	x	x	x			
US	VELOSTER(FS)	2013	G 1.6 T-GDI	CODE [Transmitter Code Saving]				x		0026
US	VELOSTER(FS)	2012	G 1.6 GDI	ENGINE [Engine Control]	x	x	x	x		0012, 0040, 0053, 0069, 0109, 0143
US	VELOSTER(FS)	2012	G 1.6 GDI	AT [Automatic Transaxle]	x	x	x	x	x	0114
US	VELOSTER(FS)	2012	G 1.6 GDI	AT [Dual Clutch Transmission]	x	x	x	x	x	0028
US	VELOSTER(FS)	2012	G 1.6 GDI	ABSESC [ABS / ESC]	x	x	x	x	x	0062, 0085
US	VELOSTER(FS)	2012	G 1.6 GDI	ODS [PODS - F]	x	x	x			
US	VELOSTER(FS)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	x	x	x			
US	VELOSTER(FS)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	x	x	x			
US	VELOSTER(FS)	2012	G 1.6 GDI	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VELOSTER(FS)	2012	G 1.6 GDI	EPS [Motor driven Power Steering]	x	x	x	x		0086
US	VELOSTER(FS)	2012	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	x	x	x			
US	VELOSTER(FS)	2012	G 1.6 GDI	IMMO [Immobilizer]		x	x	x		0081, 0084, 0094, 0105
US	VELOSTER(FS)	2012	G 1.6 GDI	SMK [Smart Key Unit]	x	x	x	x	x	0027, 0056, 0118
US	VELOSTER(FS)	2012	G 1.6 GDI	BCM [Body Control Module]	x	x	x	x	x	
US	VELOSTER(FS)	2012	G 1.6 GDI	CLU [Cluster Module]	x	x	x	x	x	
US	VELOSTER(FS)	2012	G 1.6 GDI	TMU [Telematics Unit]	x	x	x			
US	VELOSTER(FS)	2012	G 1.6 GDI	CODE [Transmitter Code Saving]				x		0026
US	VERACRUZ(EN)	2013	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	VERACRUZ(EN)	2013	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0145
US	VERACRUZ(EN)	2013	G 3.8 DOHC	ESC [Electronic Stability Control]	x	x	x	x	x	0062

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	VERACRUZ(EN)	2013	G 3.8 DOHC	AIRBAG [Airbag (Event #1)]	x	x	x			
US	VERACRUZ(EN)	2013	G 3.8 DOHC	AIRBAG [Airbag (Event #1)]	x	x	x			0102
US	VERACRUZ(EN)	2013	G 3.8 DOHC	ODS [Weight Classification System]	x	x	x	x		0141
US	VERACRUZ(EN)	2013	G 3.8 DOHC	AIRBAG [Airbag (Event #2)]	x	x	x			
US	VERACRUZ(EN)	2013	G 3.8 DOHC	AIRBAG [Airbag (Event #2)]	x	x	x			0102
US	VERACRUZ(EN)	2013	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VERACRUZ(EN)	2013	G 3.8 DOHC	4WD [4WD Control]		x	x	x	x	
US	VERACRUZ(EN)	2013	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	VERACRUZ(EN)	2013	G 3.8 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	VERACRUZ(EN)	2013	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	VERACRUZ(EN)	2013	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				x		
US	VERACRUZ(EN)	2013	G 3.8 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
US	VERACRUZ(EN)	2013	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	VERACRUZ(EN)	2013	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	VERACRUZ(EN)	2013	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	VERACRUZ(EN)	2013	G 3.8 DOHC	OPTION [User Option]				x		
US	VERACRUZ(EN)	2013	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
US	VERACRUZ(EN)	2013	G 3.8 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	VERACRUZ(EN)	2013	G 3.8 DOHC	PTG [Power Tailgate]	x	x	x	x		
US	VERACRUZ(EN)	2013	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		
US	VERACRUZ(EN)	2012	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	VERACRUZ(EN)	2012	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0145
US	VERACRUZ(EN)	2012	G 3.8 DOHC	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	VERACRUZ(EN)	2012	G 3.8 DOHC	AIRBAG [Airbag (Event #1)]	x	x	x			
US	VERACRUZ(EN)	2012	G 3.8 DOHC	AIRBAG [Airbag (Event #1)]	x	x	x			0102
US	VERACRUZ(EN)	2012	G 3.8 DOHC	ODS [Weight Classification System]	x	x	x	x		0141
US	VERACRUZ(EN)	2012	G 3.8 DOHC	AIRBAG [Airbag (Event #2)]	x	x	x			
US	VERACRUZ(EN)	2012	G 3.8 DOHC	AIRBAG [Airbag (Event #2)]	x	x	x			0102
US	VERACRUZ(EN)	2012	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VERACRUZ(EN)	2012	G 3.8 DOHC	4WD [4WD Control]		x	x	x	x	
US	VERACRUZ(EN)	2012	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	VERACRUZ(EN)	2012	G 3.8 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	VERACRUZ(EN)	2012	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	VERACRUZ(EN)	2012	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				x		
US	VERACRUZ(EN)	2012	G 3.8 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
US	VERACRUZ(EN)	2012	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	VERACRUZ(EN)	2012	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	VERACRUZ(EN)	2012	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	VERACRUZ(EN)	2012	G 3.8 DOHC	OPTION [User Option]				x		
US	VERACRUZ(EN)	2012	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
US	VERACRUZ(EN)	2012	G 3.8 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	VERACRUZ(EN)	2012	G 3.8 DOHC	PTG [Power Tailgate]	x	x	x	x		
US	VERACRUZ(EN)	2012	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		
US	VERACRUZ(EN)	2011	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	VERACRUZ(EN)	2011	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0145
US	VERACRUZ(EN)	2011	G 3.8 DOHC	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	VERACRUZ(EN)	2011	G 3.8 DOHC	AIRBAG [Airbag (Event #1)]	x	x	x			
US	VERACRUZ(EN)	2011	G 3.8 DOHC	AIRBAG [Airbag (Event #1)]	x	x	x			0102
US	VERACRUZ(EN)	2011	G 3.8 DOHC	ODS [Weight Classification System]	x	x	x	x		0141
US	VERACRUZ(EN)	2011	G 3.8 DOHC	AIRBAG [Airbag (Event #2)]	x	x	x			
US	VERACRUZ(EN)	2011	G 3.8 DOHC	AIRBAG [Airbag (Event #2)]	x	x	x			0102
US	VERACRUZ(EN)	2011	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VERACRUZ(EN)	2011	G 3.8 DOHC	4WD [4WD Control]		x	x	x	x	
US	VERACRUZ(EN)	2011	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	VERACRUZ(EN)	2011	G 3.8 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	VERACRUZ(EN)	2011	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	VERACRUZ(EN)	2011	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				x		
US	VERACRUZ(EN)	2011	G 3.8 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
US	VERACRUZ(EN)	2011	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	VERACRUZ(EN)	2011	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	VERACRUZ(EN)	2011	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	VERACRUZ(EN)	2011	G 3.8 DOHC	OPTION [User Option]				x		
US	VERACRUZ(EN)	2011	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
US	VERACRUZ(EN)	2011	G 3.8 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	VERACRUZ(EN)	2011	G 3.8 DOHC	PTG [Power Tailgate]	x	x	x	x		
US	VERACRUZ(EN)	2011	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	VERACRUZ(EN)	2010	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	VERACRUZ(EN)	2010	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0145
US	VERACRUZ(EN)	2010	G 3.8 DOHC	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	VERACRUZ(EN)	2010	G 3.8 DOHC	AIRBAG [Airbag (Event #1)]	x	x	x			
US	VERACRUZ(EN)	2010	G 3.8 DOHC	AIRBAG [Airbag (Event #1)]	x	x	x			0102
US	VERACRUZ(EN)	2010	G 3.8 DOHC	ODS [Weight Classification System]	x	x	x	x		0141
US	VERACRUZ(EN)	2010	G 3.8 DOHC	AIRBAG [Airbag (Event #2)]	x	x	x			
US	VERACRUZ(EN)	2010	G 3.8 DOHC	AIRBAG [Airbag (Event #2)]	x	x	x			0102
US	VERACRUZ(EN)	2010	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VERACRUZ(EN)	2010	G 3.8 DOHC	4WD [4WD Control]		x	x	x	x	
US	VERACRUZ(EN)	2010	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	VERACRUZ(EN)	2010	G 3.8 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	VERACRUZ(EN)	2010	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	VERACRUZ(EN)	2010	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				x		
US	VERACRUZ(EN)	2010	G 3.8 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
US	VERACRUZ(EN)	2010	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	VERACRUZ(EN)	2010	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	VERACRUZ(EN)	2010	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	VERACRUZ(EN)	2010	G 3.8 DOHC	OPTION [User Option]				x		
US	VERACRUZ(EN)	2010	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
US	VERACRUZ(EN)	2010	G 3.8 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	VERACRUZ(EN)	2010	G 3.8 DOHC	PTG [Power Tailgate]	x	x	x	x		
US	VERACRUZ(EN)	2010	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		
US	VERACRUZ(EN)	2009	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	VERACRUZ(EN)	2009	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0145
US	VERACRUZ(EN)	2009	G 3.8 DOHC	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	VERACRUZ(EN)	2009	G 3.8 DOHC	ODS [Weight Classification System]	x	x	x	x		0141
US	VERACRUZ(EN)	2009	G 3.8 DOHC	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	VERACRUZ(EN)	2009	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VERACRUZ(EN)	2009	G 3.8 DOHC	4WD [4WD Control]		x	x	x	x	
US	VERACRUZ(EN)	2009	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	VERACRUZ(EN)	2009	G 3.8 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	VERACRUZ(EN)	2009	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	VERACRUZ(EN)	2009	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				x		
US	VERACRUZ(EN)	2009	G 3.8 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
US	VERACRUZ(EN)	2009	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	VERACRUZ(EN)	2009	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	VERACRUZ(EN)	2009	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	VERACRUZ(EN)	2009	G 3.8 DOHC	OPTION [User Option]				x		
US	VERACRUZ(EN)	2009	G 3.8 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	VERACRUZ(EN)	2009	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
US	VERACRUZ(EN)	2009	G 3.8 DOHC	PTG [Power Tailgate]	x	x	x	x		
US	VERACRUZ(EN)	2009	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		
US	VERACRUZ(EN)	2008	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	VERACRUZ(EN)	2008	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0145
US	VERACRUZ(EN)	2008	G 3.8 DOHC	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	VERACRUZ(EN)	2008	G 3.8 DOHC	ODS [Weight Classification System]	x	x	x	x		0141
US	VERACRUZ(EN)	2008	G 3.8 DOHC	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	VERACRUZ(EN)	2008	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VERACRUZ(EN)	2008	G 3.8 DOHC	4WD [4WD Control]		x	x	x	x	
US	VERACRUZ(EN)	2008	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	VERACRUZ(EN)	2008	G 3.8 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	VERACRUZ(EN)	2008	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	VERACRUZ(EN)	2008	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				x		
US	VERACRUZ(EN)	2008	G 3.8 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
US	VERACRUZ(EN)	2008	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	VERACRUZ(EN)	2008	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	VERACRUZ(EN)	2008	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	VERACRUZ(EN)	2008	G 3.8 DOHC	OPTION [User Option]				x		
US	VERACRUZ(EN)	2008	G 3.8 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	VERACRUZ(EN)	2008	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
US	VERACRUZ(EN)	2008	G 3.8 DOHC	PTG [Power Tailgate]	x	x	x	x		
US	VERACRUZ(EN)	2008	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		
US	VERACRUZ(EN)	2007	G 3.8 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0015, 0053, 0092, 0109, 0143
US	VERACRUZ(EN)	2007	G 3.8 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	0114, 0145

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	VERACRUZ(EN)	2007	G 3.8 DOHC	ESC [Electronic Stability Control]	x	x	x	x	x	0062
US	VERACRUZ(EN)	2007	G 3.8 DOHC	ODS [Weight Classification System]	x	x	x	x		0141
US	VERACRUZ(EN)	2007	G 3.8 DOHC	AIRBAG [Airbag Control Unit]	x	x	x			0102
US	VERACRUZ(EN)	2007	G 3.8 DOHC	AIRCON [Air Conditioner]	x	x	x	x	x	
US	VERACRUZ(EN)	2007	G 3.8 DOHC	4WD [4WD Control]		x	x	x	x	
US	VERACRUZ(EN)	2007	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	x	x	x		x	
US	VERACRUZ(EN)	2007	G 3.8 DOHC	IMMO [Immobilizer]				x		0081, 0084, 0094, 0105, 0127
US	VERACRUZ(EN)	2007	G 3.8 DOHC	IMMO [Immobilizer]				x		0084, 0094, 0105, 0135
US	VERACRUZ(EN)	2007	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				x		
US	VERACRUZ(EN)	2007	G 3.8 DOHC	SMK [Smart Key Unit]	x	x	x		x	0089
US	VERACRUZ(EN)	2007	G 3.8 DOHC	DDM [Driver Door Module]	x	x	x	x	x	
US	VERACRUZ(EN)	2007	G 3.8 DOHC	ADM [Assist Door Module]	x	x	x	x	x	
US	VERACRUZ(EN)	2007	G 3.8 DOHC	IMS [Integrated Memory System]	x	x	x	x	x	
US	VERACRUZ(EN)	2007	G 3.8 DOHC	OPTION [User Option]				x		
US	VERACRUZ(EN)	2007	G 3.8 DOHC	TILT [Tilt & Telescope]	x	x	x	x	x	
US	VERACRUZ(EN)	2007	G 3.8 DOHC	BCM [Body Control Module]	x	x	x		x	
US	VERACRUZ(EN)	2007	G 3.8 DOHC	PTG [Power Tailgate]	x	x	x	x		
US	VERACRUZ(EN)	2007	G 3.8 DOHC	CODE [Transmitter Code Saving]				x		
US	XG(XG)	2005	G 3.5 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053, 0109
US	XG(XG)	2005	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	XG(XG)	2005	G 3.5 DOHC	TCS [Traction Control System]		x	x	x	x	
US	XG(XG)	2005	G 3.5 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	XG(XG)	2005	G 3.5 DOHC	AIRBAG [Airbag Control]		x	x			
US	XG(XG)	2005	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	XG(XG)	2004	G 3.5 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	XG(XG)	2004	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	XG(XG)	2004	G 3.5 DOHC	TCS [Traction Control System]		x	x	x	x	
US	XG(XG)	2004	G 3.5 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	XG(XG)	2004	G 3.5 DOHC	AIRBAG [Airbag Control]		x	x			
US	XG(XG)	2004	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	XG(XG)	2003	G 3.5 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	XG(XG)	2003	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	XG(XG)	2003	G 3.5 DOHC	TCS [Traction Control System]		x	x	x	x	
US	XG(XG)	2003	G 3.5 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	XG(XG)	2003	G 3.5 DOHC	AIRBAG [Airbag Control]	x	x	x			

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
US	XG(XG)	2003	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	XG(XG)	2002	G 3.5 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	XG(XG)	2002	G 3.5 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	XG(XG)	2002	G 3.5 DOHC	TCS [Traction Control System]		x	x	x	x	
US	XG(XG)	2002	G 3.5 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	XG(XG)	2002	G 3.5 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	XG(XG)	2002	G 3.5 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094
US	XG(XG)	2001	G 3.0 DOHC	ENGINE [Engine Control]	x	x	x	x	x	0053
US	XG(XG)	2001	G 3.0 DOHC	AT [Automatic Transaxle]	x	x	x	x	x	
US	XG(XG)	2001	G 3.0 DOHC	TCS [Traction Control System]		x	x	x	x	
US	XG(XG)	2001	G 3.0 DOHC	ABS [Anti - Lock Brake System]		x	x	x	x	0062
US	XG(XG)	2001	G 3.0 DOHC	AIRBAG [Airbag Control]	x	x	x			
US	XG(XG)	2001	G 3.0 DOHC	IMMO [Immobilizer]		x	x	x		0071, 0090, 0091, 0094

Special Function Table

0001	12V Current Sensor Offset Correction Function
0002	A / F Learning
0003	A / F Value imposing
0004	AFLS AMING MODE
0005	AMP Operation Test
0006	AT Adaptation Mode
0007	AVM Calibration
0008	AVM Tolerance compensation - Auto
0009	AWD Mode Selection
0010	Air Bleeding Mode
0011	Air Cut Off Valve Open Mode
0012	Alternator TEST
0013	Assembly Check
0014	Assembly Check (ECU replacement)
0015	Auto Detected Configuration Reset
0016	BSD Radar Calibration
0017	BSD variant coding
0018	Break Pad Change Mode
0019	CLEAR CAN Learnable Status
0020	CPF Service Regeneration
0021	Calibration

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
0022	Checking the wear amount of clutch									
0023	Clutch Learning Read									
0024	Clutch Learning Reset									
0025	Clutch compensation value setting									
0026	Code Saving									
0027	Current FOB Key Check									
0028	DCT Learning Function									
0029	DCT Manual Input Function (Transmission Exchange)									
0030	E / C Fluid Pressure Cal.									
0031	ECM Neutralization									
0032	ECU Initialization									
0033	ECU Serial Number									
0034	ECU Tuning Data Confirm									
0035	EMS Neutral Mode									
0036	EOP TEST (Electric Oil Pump Test)									
0037	EPB Variant Coding									
0038	EPCU (MCU) self - diagnosis function									
0039	EPS Type Recognition									
0040	ERM (Engine RPM Monitoring)									
0041	ESCL ENABLE OUTPUT CHECK									
0042	ESCL OPEN STATUS CHECK									
0043	ESCL STATUS INFORMATION									
0044	EVAP INLINE									
0045	EWP Actuating									
0046	Electric Water Pump Control									
0047	Engine Clutch / Motor Resolver Adaptation									
0048	Engine Test Off									
0049	Engine Test On									
0050	Engine coolant filling mode									
0051	Erase Network Configuration									
0052	Evap Leak Test [HEV]									
0053	Evap. Leakage Test									
0054	Evap. Leakage Test (Inline)									
0055	FC Run / Stop									
0056	FOB KEY STATUS INFORMATION									
0057	Fluid Circulation Mode									
0058	Fuel Leakage Test									

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
0059	Fuel line air removal									
0060	G - Sensor Calibration									
0061	Get All S / W Version									
0062	HCU Air Bleeding Mode									
0063	HPCU (MCU / GCU) self - diagnosis function									
0064	Headlamp Levelling									
0065	Headrest Setting									
0066	High Pressure Release Mode									
0067	IFU Neutralization									
0068	IPM Status Information									
0069	ISG TEST (Option)									
0070	Idle CO Adjustment									
0071	Immobilizer Reset									
0072	Initialization of Automatic Resolver Offset Calibration									
0073	Initialization of rear door curtains									
0074	Initialization of the engine clutch inspection line learning and diagnostic information									
0075	Injector Specific Data									
0076	Intelligent Driving Mode Integrated Control									
0077	LATERAL G SENSOR CALIBRATION									
0078	LDC Activation Test									
0079	LDWS Reference Point Calibration									
0080	LDWS Region Code									
0081	LEARNT KEYS									
0082	LONG G SENSOR CALIBRATION (ONLY EPB)									
0083	Level Initialization									
0084	Limp Home Mode									
0085	Longitudinal G Sensor Calibration (HAC / DBC Only)									
0086	MDPS TEST (Motor Driven Power Steering)									
0087	MEC Read (Inline)									
0088	MOBIS MDPS Torque Test									
0089	MSL IMMO Key Status Information									
0090	Master Key Delete									
0091	Master Key Record / Change									
0092	Monitoring Test Results									
0093	Motor / HSG Resolver Calibration									
0094	Neutral Mode									
0095	PAD Change Mode (After Change)									

Area	Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
0096	PAD Change Mode (Before Change)									
0097	PCSV TEST (Option)									
0098	PDM STATUS INFORMATION									
0099	PODS Reset									
0100	PRESSURE SENSOR CALIBRATION									
0101	Pad Change Mode									
0102	Pass.Airbag Realtime Info.									
0103	Pass.Airbag Status with Battery Voltage									
0104	Passenger A / Bag Info.									
0105	Password Teaching / Changing									
0106	Power Tailgate Mode Configuration									
0107	READ VIN INLINE									
0108	Read The Number Of Refueling									
0109	Read VIN									
0110	Readiness Test									
0111	Removal of air from engine clutch hydraulic pressure line									
0112	Request if DVD - Slots are Empty									
0113	Resetting Adaptive Values									
0114	Resetting Auto T / A Values									
0115	Resetting E - CVVT Values									
0116	Ring Break									
0117	SJB TEST									
0118	SMK STATUS INFORMATION									
0119	SOC Calibration									
0120	SPC Calibration									
0121	SPTAC Calibration									
0122	Seat Limit Position Setting									
0123	Seat Limit Position Setting State									
0124	Sensor Initialization									
0125	Serial Communication Line Check									
0126	Smart Key Code Saving									
0127	Smatra Neutral Mode									
0128	Solenoid valve inspection for hydrogen tank									
0129	Stabilization of the engine clutch hardware transfer torque									
0130	Stack Coolant Pump Actuating									
0131	Steering Limit Position Setting									
0132	TCU Sub Rom Reset									

Area		Model	Year	Engine	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
0133	TP STATUS INFORMATION										
0134	TPS Circuit Test										
0135	Teaching										
0136	Torque Coupling Control										
0137	Torque Offset Calibration										
0138	UIP System Identification (Only Brazil)										
0139	Update from CD										
0140	VCM Learning										
0141	WCS Reset										
0142	Wake up Line										
0143	Write VIN										
0144	XdB Test										
0145	[N] Position The Adaptive										