

MAZDA

Table of Contents

1	Vehicle models covered.....	1
2	Vehicle systems covered.....	9
3	Vehicle Special Function Covered.....	13

1 Vehicle models covered

Model	Engine Type	Engine Sub Type	Year
626/626 WAGON/TELSTAR	1.8L	FP	up to 2013
626/626 WAGON/TELSTAR	2.0L	FS	up to 2013
626/626 WAGON/TELSTAR	2.0L	RF_T	up to 2013
626/626 WAGON/TELSTAR	2.5L	KL	up to 2013
ATENZA(JPN)/MAZDA6(General)	2.0L	LF	up to 2013
ATENZA(JPN)/MAZDA6(General)	2.3L	ANY	up to 2013
ATENZA(JPN)/MAZDA6(General)	2.3L	L3	up to 2013
ATENZA(JPN)/MAZDA6(General)	2.3L	L3_T	up to 2013
ATENZA(JPN)/MAZDA6(General)	2.5L	L5	up to 2013
ATENZA(JPN)/MAZDA6(General)	3.7L	CA	up to 2013
ATENZA(JPN)/MAZDA6(General)	ANY	ANY	up to 2013
ATENZA(JPN)/MAZDA6(General)	ANY	L3	up to 2013
ATENZA(JPN)/MAZDA6(General)	ANY	LF	up to 2013
AXELA/MAZDA3	1.5L	ZY	up to 2013
AXELA/MAZDA3	1.6L	Y6	up to 2013
AXELA/MAZDA3	1.6L	Z6	up to 2013
AXELA/MAZDA3	2.0L	LF	up to 2013
AXELA/MAZDA3	2.0L	PE	up to 2013
AXELA/MAZDA3	2.2L	R2_T	up to 2013
AXELA/MAZDA3	2.3L	L3_T	up to 2013
AXELA/MAZDA3	2.5L	L5	up to 2013
AXELA/MAZDA3(Japan/General Specs.)	1.5L	ZY	up to 2013
AXELA/MAZDA3(Japan/General Specs.)	1.6L	Z6	up to 2013
AXELA/MAZDA3(Japan/General Specs.)	2.0L	LF	up to 2013
AXELA/MAZDA3(Japan/General Specs.)	2.3L	L3	up to 2013
AXELA/MAZDA3(Japan/General Specs.)	2.3L	L3_T	up to 2013
AXELA/MAZDA3(Japan/General Specs.)	2.3L	LF	up to 2013
AXELA/MAZDA3(Japan/General Specs.)	ANY	ANY	up to 2013
AZ-WAGON(MJ)	660cc	K6A	up to 2013
AZ-WAGON(MJ)	660cc	K6A-T	up to 2013
Aspire	1.3L	ANY	up to 2013
Aspire	1.3L	Other	up to 2013
Aspire	1.5L	ANY	up to 2013
Aspire	1.5L	Other	up to 2013
B-Series / Bravo / Fighter / Courier / Ranger	2.2L	ANY	up to 2013

Model	Engine Type	Engine Sub Type	Year
/ Everest / Endeavour			
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2.2L	F2	up to 2013
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2.5L	ANY	up to 2013
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2.5L	WL	up to 2013
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2.5L	WL-CD	up to 2013
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2.5L	WL_T	up to 2013
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2.6L	ANY	up to 2013
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2.6L	G6	up to 2013
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2.9L	W9	up to 2013
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	3.0L	WE-CD	up to 2013
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	ANY	ANY	up to 2013
BONGO BRAWNY/ECONOVAN/MAZDA E-SERIES	1.8L	F8	up to 2013
BONGO BRAWNY/ECONOVAN/MAZDA E-SERIES	2.0L	FE	up to 2013
BONGO BRAWNY/ECONOVAN/MAZDA E-SERIES	2.2L	R2	up to 2013
BONGO BRAWNY/ECONOVAN/MAZDA E-SERIES	2.5L	WL	up to 2013
BONGO/BONGO BRAWNY/SPECTRON	1.8L	F8	up to 2013
BONGO/BONGO BRAWNY/SPECTRON	1.8L	L8	up to 2013
BONGO/BONGO BRAWNY/SPECTRON	2.0L	RF_T	up to 2013
BONGO/BONGO BRAWNY/SPECTRON	2.2L	R2	up to 2013
BT-50/Ranger	2.2L	F2	up to 2013
BT-50/Ranger	2.5L	WL	up to 2013
BT-50/Ranger	2.5L	WL-CD	up to 2013
BT-50/Ranger	2.6L	G6	up to 2013
BT-50/Ranger	3.0L	WE-CD	up to 2013
BT-50/Ranger	4.0L	V6 SOHC	up to 2013
BT-50/Ranger	ANY	ANY	up to 2013
CAPELLA/CAPELLA W/TELSTAR/TELSTAR W	1.8L	FP	up to 2013
CAPELLA/CAPELLA W/TELSTAR/TELSTAR W	2.0L	FS	up to 2013
CAPELLA/CAPELLA W/TELSTAR/TELSTAR W	2.0L	RF	up to 2013
CAPELLA/CAPELLA W/TELSTAR/TELSTAR W	2.5L	KL	up to 2013
CX-5	2.0L	PE	up to 2013
CX-5	2.2L	SH	up to 2013
CX-5	2.5L	PY	up to 2013
CX-5	ANY	ANY	up to 2013
CX-7(Europe/General Specs.)	2.2L	R2_T	up to 2013
CX-7(Europe/General Specs.)	2.3L	L3_T	up to 2013
CX-7(Europe/General Specs.)	ANY	ANY	up to 2013
CX-7(Japan/General Specs.)	2.3L	L3_T	up to 2013

Model	Engine Type	Engine Sub Type	Year
CX-7(Japan/General Specs.)	2.5L	L5	up to 2013
CX-7(Japan/General Specs.)	ANY	ANY	up to 2013
CX-7(North America/General Specs.)	2.3L	L3_T	up to 2013
CX-7(North America/General Specs.)	2.5L	L5	up to 2013
CX-7(North America/General Specs.)	ANY	ANY	up to 2013
CX-9(North America / General Specs.)	3.5L	CY	up to 2013
CX-9(North America / General Specs.)	3.7L	CA	up to 2013
CX-9(North America / General Specs.)	ANY	ANY	up to 2013
CX-9(North America / General Specs.)	ANY	CY	up to 2013
DEMIO (JPN)/MAZDA2 (General)	1.3L	ZJ	up to 2013
DEMIO (JPN)/MAZDA2 (General)	1.5L	ZY	up to 2013
DEMIO (JPN)/MAZDA2 (General)	ANY	ANY	up to 2013
DEMIO (JPN)/VERISA(JPN)/MAZDA2(General)	1.3L	ZJ	up to 2013
DEMIO (JPN)/VERISA(JPN)/MAZDA2(General)	1.3L	ZJW	up to 2013
DEMIO (JPN)/VERISA(JPN)/MAZDA2(General)	1.5L	ZY	up to 2013
DEMIO (JPN)/VERISA(JPN)/MAZDA2(General)	1.5L	ZYW	up to 2013
DEMIO (JPN)/VERISA(JPN)/MAZDA2(General)	ANY	ANY	up to 2013
DEMIO (JPN)/VERISA(JPN)/MAZDA2(General)	ANY	ZJ	up to 2013
DEMIO (JPN)/VERISA(JPN)/MAZDA2(General)	ANY	ZY	up to 2013
DEMIO(JPN)/MAZDA2(OTHER)	1.3L	P3	up to 2013
DEMIO(JPN)/MAZDA2(OTHER)	1.3L	ZJ	up to 2013
DEMIO(JPN)/MAZDA2(OTHER)	1.5L	ZY	up to 2013
DEMIO(JPN)/MAZDA2(OTHER)	1.6L	Y6	up to 2013
DEMIO(JPN)/MAZDA2(OTHER)	ANY	ANY	up to 2013
DEMIO/121 DEMIO/121	1.3L	B3	up to 2013
DEMIO/121 DEMIO/121	1.5L	B5	up to 2013
DEMIO/FESTIVA MINI WAGON	1.3L	B3	up to 2013
DEMIO/FESTIVA MINI WAGON	1.5L	B5	up to 2013
FAMILIA VAN(BV*Y12)	1.2L	CR12	up to 2013
FAMILIA VAN(BV*Y12)	1.5L	HR15	up to 2013
FAMILIA VAN(BV*Y12)	1.6L	HR16	up to 2013
FAMILIA VAN(BV*Y12)	1.8L	MR18	up to 2013
FAMILIA VAN(BV*Y12)	ANY	ANY	up to 2013
FAMILIA WAGON/VAN(B*Y11-500000-)	1.3L	QG13	up to 2013
FAMILIA WAGON/VAN(B*Y11-500000-)	1.5L	QG15	up to 2013
FAMILIA WAGON/VAN(B*Y11-500000-)	1.8L	QG18	up to 2013
FAMILIA WAGON/VAN(B*Y11-500000-)	ANY	ANY	up to 2013
FAMILIA/LASER	1.3L	B3	up to 2013
FAMILIA/LASER	1.5L	Z5	up to 2013
FAMILIA/LASER	1.5L	ZL	up to 2013
FAMILIA/LASER	1.6L	B6	up to 2013
FAMILIA/LASER	1.8L	BP	up to 2013
FAMILIA/LASER	1.8L	FP	up to 2013
FAMILIA/LASER	2.0L	FS	up to 2013
FAMILIA/LASER	2.0L	RF	up to 2013
FRIENDEE/FREDA/BONGO FRIENDEE	2.0L	FE	up to 2013

Model	Engine Type	Engine Sub Type	Year
FRIENDEE/FREDA/BONGO FRIENDEE	2.5L	J5	up to 2013
FRIENDEE/FREDA/BONGO FRIENDEE	2.5L	WL_T	up to 2013
Fiesta/Mazda 121/Bantam	1.0L	ANY	up to 2013
Fiesta/Mazda 121/Bantam	1.0L	HCS	up to 2013
Fiesta/Mazda 121/Bantam	1.0L	ZetecRocam	up to 2013
Fiesta/Mazda 121/Bantam	1.1L	I3	up to 2013
Fiesta/Mazda 121/Bantam	1.25L	ANY	up to 2013
Fiesta/Mazda 121/Bantam	1.25L	Zetec	up to 2013
Fiesta/Mazda 121/Bantam	1.25L	Zetec-SE	up to 2013
Fiesta/Mazda 121/Bantam	1.3L	ANY	up to 2013
Fiesta/Mazda 121/Bantam	1.3L	BZ	up to 2013
Fiesta/Mazda 121/Bantam	1.3L	Endura-E	up to 2013
Fiesta/Mazda 121/Bantam	1.3L	ZetecRocam	up to 2013
Fiesta/Mazda 121/Bantam	1.4L	ANY	up to 2013
Fiesta/Mazda 121/Bantam	1.4L	PT-E	up to 2013
Fiesta/Mazda 121/Bantam	1.4L	Zetec-SE	up to 2013
Fiesta/Mazda 121/Bantam	1.6L	ANY	up to 2013
Fiesta/Mazda 121/Bantam	1.6L	BZ	up to 2013
Fiesta/Mazda 121/Bantam	1.6L	Other	up to 2013
Fiesta/Mazda 121/Bantam	1.6L	ZetecRocam	up to 2013
Fiesta/Mazda 121/Bantam	1.6L	Zetec-SE	up to 2013
Fiesta/Mazda 121/Bantam	1.8L	ANY	up to 2013
Fiesta/Mazda 121/Bantam	1.8L	Diesel_NA	up to 2013
Fiesta/Mazda 121/Bantam	1.8L	Endura DI	up to 2013
Fiesta/Mazda 121/Bantam	1.8L	Endura-DE	up to 2013
Fiesta/Mazda 121/Bantam	ANY	ANY	up to 2013
Fiesta/Mazda 121/Bantam	ANY	Endura DI	up to 2013
Fiesta/Mazda 121/Bantam	ANY	Endura-DE	up to 2013
Fiesta/Mazda 121/Bantam	ANY	Endura-E	up to 2013
Fiesta/Mazda 121/Bantam	ANY	HCS	up to 2013
Fiesta/Mazda 121/Bantam	ANY	Zetec	up to 2013
Fiesta/Mazda 121/Bantam	ANY	ZetecRocam	up to 2013
Fiesta/Mazda 121/Bantam	ANY	Zetec-SE	up to 2013
LAPUTA	660cc	F6A-T	up to 2013
LAPUTA	660cc	K6A	up to 2013
LAPUTA	660cc	K6A-T	up to 2013
LASER/323/TIERRA	1.3L	ANY	up to 2013
LASER/323/TIERRA	1.3L	B3	up to 2013
LASER/323/TIERRA	1.3L	Other	up to 2013
LASER/323/TIERRA	1.5L	ANY	up to 2013
LASER/323/TIERRA	1.5L	Other	up to 2013
LASER/323/TIERRA	1.5L	Z5	up to 2013
LASER/323/TIERRA	1.5L	ZL	up to 2013
LASER/323/TIERRA	1.5L	ZM	up to 2013
LASER/323/TIERRA	1.6L	ANY	up to 2013
LASER/323/TIERRA	1.6L	B6	up to 2013
LASER/323/TIERRA	1.6L	FS	up to 2013
LASER/323/TIERRA	1.6L	Other	up to 2013
LASER/323/TIERRA	1.6L	ZM	up to 2013
LASER/323/TIERRA	1.8L	ANY	up to 2013

Model	Engine Type	Engine Sub Type	Year
LASER/323/TIERRA	1.8L	BP	up to 2013
LASER/323/TIERRA	1.8L	FP	up to 2013
LASER/323/TIERRA	1.8L	Other	up to 2013
LASER/323/TIERRA	2.0L	ANY	up to 2013
LASER/323/TIERRA	2.0L	FS	up to 2013
LASER/323/TIERRA	2.0L	Other	up to 2013
LASER/323/TIERRA	2.0L	RF	up to 2013
LASER/323/TIERRA	2.0L	RF_T	up to 2013
MAZDA 929	3.0L	JE	up to 2013
MAZDA RX 7	654x2cc	13B	up to 2013
MAZDA2 (Europe)	1.3L	ZJ	up to 2013
MAZDA2 (Europe)	1.4L	Y4	up to 2013
MAZDA2 (Europe)	1.5L	ZY	up to 2013
MAZDA2 (Europe)	1.6L	Y6	up to 2013
MAZDA2 (Europe)	ANY	ANY	up to 2013
MAZDA2(China)	1.3L	ZJ	up to 2013
MAZDA2(China)	1.5L	ZY	up to 2013
MAZDA2(China)	ANY	ANY	up to 2013
MAZDA2(EURO STG3/4 Specs.)	1.25L	MZI	up to 2013
MAZDA2(EURO STG3/4 Specs.)	1.4L	MZI	up to 2013
MAZDA2(EURO STG3/4 Specs.)	1.4L	MZ_CD DI	up to 2013
MAZDA2(EURO STG3/4 Specs.)	1.6L	MZI	up to 2013
MAZDA2(EURO STG3/4 Specs.)	ANY	ANY	up to 2013
MAZDA2(EURO STG3/4 Specs.)	ANY	MZI	up to 2013
MAZDA2(EURO STG3/4 Specs.)	ANY	MZ_CD DI	up to 2013
MAZDA3 (Europe and General)	1.6L	Y6	up to 2013
MAZDA3 (Europe and General)	1.6L	Z6	up to 2013
MAZDA3 (Europe and General)	2.0L	LF	up to 2013
MAZDA3 (Europe and General)	2.2L	R2_T	up to 2013
MAZDA3 (Europe and General)	2.3L	L3_T	up to 2013
MAZDA3 (Europe and General)	2.5L	L5	up to 2013
MAZDA3 (Europe and General)	ANY	ANY	up to 2013
MAZDA3(China/General)	1.6L	Z6	up to 2013
MAZDA3(China/General)	2.0L	LF	up to 2013
MAZDA3(China/General)	ANY	ANY	up to 2013
MAZDA3(EURO STG3/4/5 and General Specs.)	1.3L	ZJ	up to 2013
MAZDA3(EURO STG3/4/5 and General Specs.)	1.5L	ZY	up to 2013
MAZDA3(EURO STG3/4/5 and General Specs.)	1.6L	Y6	up to 2013
MAZDA3(EURO STG3/4/5 and General Specs.)	1.6L	Z6	up to 2013
MAZDA3(EURO STG3/4/5 and General Specs.)	1.6L	ZJ	up to 2013
MAZDA3(EURO STG3/4/5 and General Specs.)	2.0L	LF	up to 2013
MAZDA3(EURO STG3/4/5 and General Specs.)	2.0L	RF_T	up to 2013
MAZDA3(EURO STG3/4/5 and General Specs.)	2.3L	L3	up to 2013
MAZDA3(EURO STG3/4/5 and General Specs.)	2.3L	L3_T	up to 2013

Model	Engine Type	Engine Sub Type	Year
MAZDA3(EURO STG3/4/5 and General Specs.)	2.3L	LF	up to 2013
MAZDA3(EURO STG3/4/5 and General Specs.)	ANY	ANY	up to 2013
MAZDA3(North America / General)	1.6L	Z6	up to 2013
MAZDA3(North America / General)	2.0L	L3	up to 2013
MAZDA3(North America / General)	2.0L	LF	up to 2013
MAZDA3(North America / General)	2.3L	L3	up to 2013
MAZDA3(North America / General)	2.3L	L3_T	up to 2013
MAZDA3(North America / General)	2.5L	L5	up to 2013
MAZDA3(North America / General)	ANY	ANY	up to 2013
MAZDA3/AXELA	1.5L	P5	up to 2013
MAZDA3/AXELA	1.6L	Z6	up to 2013
MAZDA3/AXELA	2.0L	PE	up to 2013
MAZDA3/AXELA	2.2L	SH	up to 2013
MAZDA3/AXELA	2.5L	PY	up to 2013
MAZDA3/AXELA	ANY	ANY	up to 2013
MAZDA5(EURO STG3/4/5 and General Specs.)/i-MAX	1.8L	L8	up to 2013
MAZDA5(EURO STG3/4/5 and General Specs.)/i-MAX	2.0L	LF	up to 2013
MAZDA5(EURO STG3/4/5 and General Specs.)/i-MAX	2.0L	RF_T	up to 2013
MAZDA5(EURO STG3/4/5 and General Specs.)/i-MAX	ANY	ANY	up to 2013
MAZDA5(EURO STG3/4/5 and General Specs.)/i-MAX	ANY	RF_T	up to 2013
MAZDA5(North America Specs.)	2.3L	L3	up to 2013
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	up to 2013
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	up to 2013
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	up to 2013
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	up to 2013
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	up to 2013
MAZDA6 (GH, After Facelift) / ATENZA	ANY	ANY	up to 2013
MAZDA6 (GH, Before Facelift)	1.8L	L8	up to 2013
MAZDA6 (GH, Before Facelift)	2.0L	LF	up to 2013
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	up to 2013
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	up to 2013
MAZDA6 (GH, Before Facelift)	2.5L	L5	up to 2013
MAZDA6 (GH, Before Facelift)	ANY	ANY	up to 2013
MAZDA6(China)	2.0L	LF	up to 2013
MAZDA6(China)	2.5L	L5	up to 2013
MAZDA6(China)	ANY	ANY	up to 2013
MAZDA6(EURO STG3/4 and General)	1.8L	L8	up to 2013
MAZDA6(EURO STG3/4 and General)	2.0L	LF	up to 2013
MAZDA6(EURO STG3/4 and General)	2.0L	RF_T	up to 2013
MAZDA6(EURO STG3/4 and General)	2.3L	L3	up to 2013
MAZDA6(EURO STG3/4 and General)	2.3L	L3_T	up to 2013
MAZDA6(EURO STG3/4 and General)	2.3L	L8	up to 2013
MAZDA6(EURO STG3/4 and General)	ANY	ANY	up to 2013
MAZDA6(Middle East / General)	2.5L	L5	up to 2013
MAZDA6(Middle East / General)	3.7L	CA	up to 2013
MAZDA6(Middle East / General)	ANY	ANY	up to 2013

Model	Engine Type	Engine Sub Type	Year
MAZDA6(North America / General)	2.5L	L5	up to 2013
MAZDA6(North America / General)	3.7L	CA	up to 2013
MAZDA6(North America / General)	ANY	ANY	up to 2013
MAZDA6(North America/General)	2.3L	L3	up to 2013
MAZDA6(North America/General)	2.3L	L3_T	up to 2013
MAZDA6(North America/General)	3.0L	AJ	up to 2013
MAZDA6(North America/General)	ANY	AJ	up to 2013
MAZDA6(North America/General)	ANY	ANY	up to 2013
MAZDA6(North America/General)	ANY	L3	up to 2013
MAZDA6(North America/General)	ANY	L3_T	up to 2013
MAZDA6/ATENZA	2.0L	PE	up to 2013
MAZDA6/ATENZA	2.2L	SH	up to 2013
MAZDA6/ATENZA	2.5L	PY	up to 2013
MAZDA6/ATENZA	ANY	ANY	up to 2013
MILLENNIA/EUNOS 800	2.0L	KF	up to 2013
MILLENNIA/EUNOS 800	2.3L	KJ	up to 2013
MILLENNIA/EUNOS 800	2.5L	KL	up to 2013
MPV (Europe/General)	2.0L	FS	up to 2013
MPV (Europe/General)	2.0L	RF_T	up to 2013
MPV (Europe/General)	2.3L	L3	up to 2013
MPV (Europe/General)	2.5L	GY	up to 2013
MPV (Europe/General)	2.5L	WL	up to 2013
MPV (Europe/General)	3.0L	AJ	up to 2013
MPV (Europe/General)	3.0L	JE	up to 2013
MPV (Europe/General)	ANY	ANY	up to 2013
MPV(JPN/General)	2.0L	FS	up to 2013
MPV(JPN/General)	2.3L	L3	up to 2013
MPV(JPN/General)	2.5L	GY	up to 2013
MPV(JPN/General)	3.0L	AJ	up to 2013
MPV(JPN/General)	ANY	ANY	up to 2013
MPV(North America/General)	2.0L	FS	up to 2013
MPV(North America/General)	2.5L	GY	up to 2013
MPV(North America/General)	3.0L	AJ	up to 2013
MPV(North America/General)	3.0L	JE	up to 2013
MPV/Mazda8(JPN/General)	2.3L	L3	up to 2013
MPV/Mazda8(JPN/General)	2.3L	L3_T	up to 2013
MPV/Mazda8(JPN/General)	2.5L	L5	up to 2013
MPV/Mazda8(JPN/General)	ANY	ANY	up to 2013
MPV/Mazda8(JPN/General)	ANY	L3	up to 2013
MPV/Mazda8(JPN/General)	ANY	L3_T	up to 2013
MX-5	1.6L	B6	up to 2013
MX-5	1.8L	BP	up to 2013
MX-5 (Europe/General Specs.)	1.8L	L8	up to 2013
MX-5 (Europe/General Specs.)	2.0L	LF	up to 2013
MX-5 (Europe/General Specs.)	ANY	ANY	up to 2013
MX-5 MIATA	1.8L	BP	up to 2013
MX-5 MIATA	1.8L	BP Turbo	up to 2013
MX-5(North America/General Specs.)	2.0L	LF	up to 2013
MX-5(North America/General Specs.)	ANY	ANY	up to 2013
PREMACY	1.8L	FP	up to 2013

Model	Engine Type	Engine Sub Type	Year
PREMACY	2.0L	FS	up to 2013
PREMACY	2.0L	RF_T	up to 2013
PREMACY/IXION	1.8L	FP	up to 2013
PREMACY/IXION	1.8L	FP_DE	up to 2013
PREMACY/IXION	2.0L	FS	up to 2013
PREMACY/IXION	2.0L	RF_T	up to 2013
PREMACY/MAZDA5	1.6L	Y6	up to 2013
PREMACY/MAZDA5	1.8L	L8	up to 2013
PREMACY/MAZDA5	2.0L	LF	up to 2013
PREMACY/MAZDA5	2.0L	PE	up to 2013
PREMACY/MAZDA5	2.5L	L5	up to 2013
PREMACY/MAZDA5	ANY	ANY	up to 2013
PREMACY/MAZDA5 (Japan/General Specs.)	2.0L	LF	up to 2013
PREMACY/MAZDA5 (Japan/General Specs.)	2.3L	L3	up to 2013
PREMACY/MAZDA5 (Japan/General Specs.)	ANY	ANY	up to 2013
PROCEED	2.5L	G5	up to 2013
PROCEED	2.6L	G6	up to 2013
ROADSTER/MX-5	1.6L	B6	up to 2013
ROADSTER/MX-5	1.8L	BP	up to 2013
ROADSTER/MX-5	1.8L	BP Turbo	up to 2013
ROADSTER/MX-5(Japan/General Specs.)	2.0L	LF	up to 2013
ROADSTER/MX-5(Japan/General Specs.)	ANY	ANY	up to 2013
RX-8(Europe/General/JapanSpecs.)	654x2cc	13B	up to 2013
RX-8(Europe/General/JapanSpecs.)	654x2cc	13B-MSP High-Power	up to 2013
RX-8(Europe/General/JapanSpecs.)	654x2cc	13B-MSP Standard-Power	up to 2013
RX-8(Europe/General/JapanSpecs.)	654x2cc	ANY	up to 2013
RX-8(Europe/General/JapanSpecs.)	ANY	ANY	up to 2013
RX-8(North America Specs.)	654x2cc	13B	up to 2013
RX-8(North America Specs.)	654x2cc	13B-MSP High-Power	up to 2013
RX-8(North America Specs.)	654x2cc	13B-MSP Standard-Power	up to 2013
RX-8(North America Specs.)	654x2cc	ANY	up to 2013
RX-8(North America Specs.)	ANY	ANY	up to 2013
Ranger/Courier/Mazda B-Series/Bravo	4.0L	V6 SOHC	up to 2013
Ranger/Mazda B-Series/Courier	2.2L	Duratorq-Turbo Diesel Common Rail Injection	up to 2013
Ranger/Mazda B-Series/Courier	2.3L	ANY	up to 2013
Ranger/Mazda B-Series/Courier	2.3L	DURATEC-HE/I4	up to 2013
Ranger/Mazda B-Series/Courier	2.3L	OHC	up to 2013
Ranger/Mazda B-Series/Courier	2.3L	Other	up to 2013
Ranger/Mazda B-Series/Courier	2.5L	ANY	up to 2013
Ranger/Mazda B-Series/Courier	2.5L	DURATEC-HE/I4	up to 2013
Ranger/Mazda B-Series/Courier	2.5L	Other	up to 2013
Ranger/Mazda B-Series/Courier	2.8L	ANY	up to 2013
Ranger/Mazda B-Series/Courier	2.8L	Other	up to 2013
Ranger/Mazda B-Series/Courier	3.0L	ANY	up to 2013

Model	Engine Type	Engine Sub Type	Year
Ranger/Mazda B-Series/Courier	3.0L	Direct Injection - Turbo	up to 2013
Ranger/Mazda B-Series/Courier	3.0L	FFV	up to 2013
Ranger/Mazda B-Series/Courier	3.0L	Other	up to 2013
Ranger/Mazda B-Series/Courier	3.2L	Duratorq-Turbo Diesel Common Rail Injection	up to 2013
Ranger/Mazda B-Series/Courier	4.0L	ANY	up to 2013
Ranger/Mazda B-Series/Courier	4.0L	Other	up to 2013
Ranger/Mazda B-Series/Courier	4.0L	V6 SOHC	up to 2013
Ranger/Mazda B-Series/Courier	ANY	ANY	up to 2013
Ranger/Mazda B-Series/Courier	ANY	Duratorq-Turbo Diesel Common Rail Injection	up to 2013
Ranger/Mazda B-Series/Courier	ANY	FFV	up to 2013
Ranger/Mazda B-Series/Courier	ANY	OHC	up to 2013
SENTIA	3.0L	JE	up to 2013
SENTIA	3.0L	JE_HO	up to 2013
TITAN DASH	2.0L	FE	up to 2013
TITAN DASH	2.0L	FE_LPG	up to 2013
TITAN DASH	2.5L	WL	up to 2013
XEDOS9	2.0L	KF	up to 2013
XEDOS9	2.3L	KJ	up to 2013
XEDOS9	2.5L	KL	up to 2013

2 Vehicle systems covered

System	DTC	Data List	Active Test
4X4M - 4X4 Control Module	X	X	X
A-STOP - A-STOP System No Idling System	X	X	X
ABS - ABS	X	X	X
ABS - Anti-Lock Brake / Traction Control Module	X	X	X
ABS - Anti-Lock Brake System	X	X	X
ABS - Antilock braking system	X	X	X
ACCM - Air Conditioning Control Module	X	X	X
ACM - Audio Control Module	X	X	X
ACN - ACN	X	X	X
ACU - Audio Control Unit	X	X	X
AFCM_PCM - Alternative Fuel Control Module	X	X	X
AFS - Adaptive Front Lighting System	X	X	X
AFS/ALM - Adaptive Front Lighting System / Auto Leveling Module	X	X	X
AHCM - Auxiliary Heater Control Module	X	X	X
AIM - Audio Interface Module	X	X	X
ALM - Auto Leveling Module	X	X	X
AM - Amplifier Module	X	X	X
APIM - Accessory Protocol Interface Module	X	X	X
ATCM - All Terrain Control Module	X	X	X
AWD - All Wheel Drive	X	X	X
AWD - All Wheel Drive Module	X	X	X
BCCM - Battery Charger Control Module	X	X	X
BCM - Battery Control Module	X	X	X

System	DTC	Data List	Active Test
BCMB - Body Control Module B	X	X	X
BCMM - Body Control Module	X	X	X
BCM_MZ - Body Control Module / Generic Electronic Module	X	X	X
BCMii - Body Control Module	X	X	X
BECM - Battery Energy Control Module	X	X	X
BEM - Body Electronic Module	X	X	X
BPM - Bluetooth Phone Module	X	X	X
BSML - Blind Spot Monitoring Left	X	X	X
BSMR - Blind Spot Monitoring Right	X	X	X
BdyCM - Body Control Module	X	X	X
C-CM - Cruise-Control Module	X	X	X
CC - Air Conditioning	X	X	X
CC - Electronic Air Temperature Controller	X	X	X
CC - Electronic Automatic Temperature Control	X	X	X
CC - HVAC Integrated Module	X	X	X
CC - Remote Climate Control	X	X	X
CCMii - Cruise Control Module	X	X	X
CDIM - Circuit Deactivation Ignition Module	X	X	X
CDP - Compact Disc Player	X	X	X
CLM - Column Lock Module	X	X	X
CMR - Camera Module Rear	X	X	X
CMU - Connectivity Master Unit	X	X	X
CPM - Cellular Phone Module	X	X	X
CSM - Security module	X	X	X
CTMii - Convergence Telematics Module	X	X	X
DABM - Digital Audio Broadcast Module	X	X	X
DACMC - Digital Audio Control Module C	X	X	X
DCDC - DC to DC Converter Control Module	X	X	X
DSCSM - Driver/Dual Climate-Control Seat Module	X	X	X
DCU - Reductant Control Module	X	X	X
DDM - Driver Door Control Unit	X	X	X
DDM - Driver Front Door Module	X	X	X
DDM - Drivers Door Module	X	X	X
DHS - Deployable Hood System	X	X	X
DRDM - Rear Left Door Control Unit	X	X	X
DSM - Driver Front Seat Module	X	X	X
DSM - Driver's Seat Module	X	X	X
DSM - Drivers Seat Module	X	X	X
DSP - Audio Digital Signal Processing Module	X	X	X
EBS - Rader Brake Support	X	X	X
ECB - ECB	X	X	X
EMM - Energy Management Module	X	X	X
EPB - Electric Parking Brake	X	X	X
EPB - Park Brake Control Module	X	X	X
EPS - Electronic-Controlled Power Steering	X	X	X
ESOF - Anti-Lock Brake / Traction Control Module	X	X	X
FACM - Fuel Additive Control Module	X	X	X
FCDIM - Front Control/Display Interface Module	X	X	X
FCIM - Front Controls Interface Module	X	X	X
FDIM - Front Display Interface Module	X	X	X

System	DTC	Data List	Active Test
FDSM - Front Distance Sensing Module	X	X	X
FDSP_TXSCP_Protocol - Powertrain Control Module	X	X	X
FFH - Fuel Fired Coolant Heating Module	X	X	X
FICM_GATEWAY - Fuel Injection Control Module	X	X	X
FIM - Fuel Indication Module	X	X	X
FIP - Fuel Injection Pump	X	X	X
FLM - Front Lighting Control Module	X	X	X
FOH - Fuel Operated Heater	X	X	X
FSC - Forward Sensing Camera	X	X	X
FSSM - Fire Suppression System Module	X	X	X
FTCM - Folding Top Control Module	X	X	X
F_BCM - Front Body Control Module	X	X	X
GDM - Generic Display Module	X	X	X
GEM - Central timer module	X	X	X
GEM - Front Electronic Module	X	X	X
GEM - GEM	X	X	X
GEM - Generic Electronic Module	X	X	X
GEM/SJB - Generic Electronic Module / Smart Junction Box	X	X	X
GFM - Generic Function Module	X	X	X
GPCM_GATEWAY - Glow Plug Control Module	X	X	X
GPSM - Global Positioning System Module	X	X	X
GSM - Gear Shift Module	X	X	X
GWM - Gateway Module A	X	X	X
HCM - Headlamp Control Module	X	X	X
HCM2 - Headlamp Control Module 2B	X	X	X
HD_LVL - Headlamp Leveling Module	X	X	X
HSWM - Heated Steering Wheel Module	X	X	X
HUD - Head Up Display	X	X	X
HV - HV-ECU	X	X	X
HVAC - Heating Ventilation Air Conditioning	X	X	X
IC - Hybrid Electronic Cluster	X	X	X
IC - Instrument Cluster	X	X	X
IC - Instrument Panel Control Module	X	X	X
IC - Instrument cluster	X	X	X
IC - Virtual Image Cluster	X	X	X
ICCM - Intelligent Cruise Control Module	X	X	X
ICM - Information Center Module	X	X	X
ICU - injector control unit	X	X	X
IC_MSCAN - Instrument Cluster	X	X	X
ILCM - Interior Lighting Control Module	X	X	X
IPDM - Intelligent Power Distribution Module	X	X	X
IPMA - Image Processing Module A	X	X	X
IPMB - Image Processing Module B	X	X	X
ISU - Central junction box	X	X	X
KVM - Remote Keyless Entry	X	X	X
LCM - Lighting Control Module	X	X	X
LCM - SCIL	X	X	X
LCM - Steering Column/Instrument Panel/Lighting	X	X	X
LHID - Left High Intensity Discharge Lamp	X	X	X
LPSDM - Left Power Sliding Door Module	X	X	X

System	DTC	Data List	Active Test
LTM - Liftgate / Trunk Module	X	X	X
MC - Message Center	X	X	X
MC - Message Center Module	X	X	X
MC - Overhead Trip Computer	X	X	X
MFSW - Multifunction Steering Wheel	X	X	X
MID - Multi-Information Display	X	X	X
MPM - Motor Pretensioner Module	X	X	X
NAV - Navigation	X	X	X
NAV - Navigation Controller	X	X	X
NAV - Navigation System	X	X	X
NGSC - Next Generation Speed Control Module	X	X	X
NoX11_GATEWAY - Nitrogen Oxides Module - Feedgas	X	X	X
NoX12_GATEWAY - Nitrogen Oxides Module - Tailpipe	X	X	X
NoX_GATEWAY - Hot\$NOx	X	X	X
OBD - Battery Control Module	X	X	X
OBD - Fuel Injection Control Module	X	X	X
OCS - Occupant Classification System Module	X	X	X
PAM - Parking Aid Module	X	X	X
PATS - Passive Anti-Theft System	X	X	X
PCM - PCM	X	X	X
PCM - Powertrain Control Module	X	X	X
PCM - VR6	X	X	X
PCSM - Passenger Climate-Control Seat Module	X	X	X
PCSM2 - Passenger Climate-Control Seat Module 2 rear	X	X	X
PDM - Passenger Front Door Module	X	X	X
PDM - Passengers Door Control Unit	X	X	X
PLK - PLK	X	X	X
PRB - Power Running Board	X	X	X
PRDM - Rear Right Door Control Unit	X	X	X
PSCM - Power Steering Control Module	X	X	X
PSM - Passenger Front Seat Module	X	X	X
RACM - Rear Audio Control Module	X	X	X
RADIO - RADIO	X	X	X
RAP - Remote Anti-Theft / Personality Module	X	X	X
RATC - Rear Air Temperature Control	X	X	X
RC - Air Suspension	X	X	X
RC - Automatic Ride Control	X	X	X
RC - MD_Semi_ActiveRideControl	X	X	X
RC - Rear Air Suspension Module	X	X	X
RCM - Electronic Crash Sensor	X	X	X
RCM - Integrated Air Bag Module	X	X	X
RCM - Relay Control Module	X	X	X
RCM - Restraint Control Module	X	X	X
RCM - Restraint Control Module For use with VSTM	X	X	X
RCU - Audio Rear Control Unit	X	X	X
REM - Rear Electronic Module	X	X	X
RESCU - Remote Emergency Satellite Cellular Unit Module	X	X	X
RESCU - Vehicle Emergency Messaging System	X	X	X
RETM - Rear Seat Entertainment Module	X	X	X
RFA - Remote Function Actuator	X	X	X

System	DTC	Data List	Active Test
RGTM - Rear Gate/Trunk Module	X	X	X
RHID - Right High Intensity Discharge Lamp	X	X	X
RHT - Retractable Hard Top	X	X	X
RHVAC - Rear Heating Ventilation Air Conditioning	X	X	X
RLCMA - Rear Lighting Control Module A	X	X	X
RPSDM - Right Power Sliding Door Module	X	X	X
RTM - Tire Pressure Monitor	X	X	X
RVM - Rear Vehicle Monitoring	X	X	X
R_BCM - Rear Body Control Module	X	X	X
SASM - Steering Angle Sensor Module	X	X	X
SCCM - Steering Column Control Module	X	X	X
SCLM - Steering Column Locking Module	X	X	X
SCME - Seat Control Module E	X	X	X
SCMG - Seat Control Module G	X	X	X
SCMH - Seat Control Module H	X	X	X
SCR - Selective Catalytic Reduction	X	X	X
SDARS - Satellite Digital Audio Receiver System	X	X	X
SECM - Steering Effort Control Module	X	X	X
SOBDM - Secondary OBD Control Module A	X	X	X
SOBDMC - Secondary OBD Control Module C	X	X	X
SODL - Side Obstacle Detection Control Module - Left	X	X	X
SODR - Side Obstacle Detection Control Module - Right	X	X	X
SRM - Speech Recognition Module	X	X	X
SSU - Smart Start Unit	X	X	X
TBC - Trailer Brake Control Module	X	X	X
TBM - Tracking and Blocking Module	X	X	X
TCCM - Transfer Case Control Module	X	X	X
TCM - TCM	X	X	X
TCM - Transmission Control Module	X	X	X
TCU - Telematic Control Unit Module	X	X	X
TPM - Tire Pressure Monitor	X	X	X
TRCM - Transmission Range Control Module	X	X	X
TRM - Trailer Module	X	X	X
VAPS - Variable Assist Power Steering	X	X	X
VDM - Vehicle Dynamics Module	X	X	X
VSM - Vehicle Security Module	X	X	X

3 Vehicle Special Function Covered

System	Special Function
TPM - Tire Pressure Monitor	TPMS Functions
RGTM - Rear Gate/Trunk Module	Clear Self-learning Data
PSCM - Power Steering Control Module	Steering Wheel Position Sensor Calibration
PSCM - Power Steering Control Module	Calibrate Steering Angle Sensor
PCM - Powertrain Control Module	Reset the oil change indicator
PCM - Powertrain Control Module	Reset the Fuel Injector Learned Values
PCM - Powertrain Control Module	Reset the Fuel Injection Pump Learned Values
PCM - Powertrain Control Module	Reset the Diesel Particulate Filter Learned Values
PCM - Powertrain Control Module	Reset KAM
PCM - Powertrain Control Module	Fuel Injector Pilot Correction Learn

System	Special Function
PCM - Powertrain Control Module	Fuel Injector Correction Factors
PCM - Powertrain Control Module	Fuel Injection Pump Learn
PCM - Powertrain Control Module	DPF Reset
PCM - Powertrain Control Module	DPF
IC - Instrument Cluster	TPMS Functions
GEM - Generic Electronic Module	TPMS Functions
ABS - Anti-Lock Brake / Traction Control Module	TPMS reset after ABS module replacement
ABS - Anti-Lock Brake / Traction Control Module	TPMS reset
ABS - Anti-Lock Brake / Traction Control Module	Steering angle sensor calibration
ABS - Anti-Lock Brake / Traction Control Module	Sensor Initialization
ABS - Anti-Lock Brake / Traction Control Module	G Sensor Calibration