

AUDI

Table of Contents

1	Vehicle models covered.....	1
2	Vehicle systems covered	2
3	Vehicle Special Function covered	5

1 Vehicle models covered

Model	Year
Audi A1 2011>	Up to 2016
Audi A2 2001>	Up to 2006
Audi A3 1997>	Up to 2003
Audi A3 2004>	Up to 2013
Audi A3 2013 >	Up to 2016
Audi A3 USA/CAN 2006>	Up to 2013
Audi A3 USA/CAN 2013>	Up to 2016
Audi A4 1995>	Up to 2002
Audi A4 2001>	Up to 2008
Audi A4 2008>	Up to 2016
Audi A4 2016>	Up to 2016
Audi A4 USA/CAN 1995>	Up to 2002
Audi A4 USA/CAN 2001>	Up to 2008
Audi A4 USA/CAN 2009>	Up to 2016
Audi A4 USA/CAN 2016>	Up to 2017
Audi A5 2008>	Up to 2016
Audi A5 USA/CAN 2008>	Up to 2016
Audi A6 1998>	Up to 2006
Audi A6 2005>	Up to 2012
Audi A6 2011>	Up to 2016
Audi A6 USA/CAN 1998>	Up to 2006
Audi A6 USA/CAN 2005>	Up to 2011
Audi A6 USA/CAN 2011>	Up to 2016
Audi A7 2011>	Up to 2016
Audi A7 USA/CAN 2011>	Up to 2016
Audi A8 1994>	Up to 2002
Audi A8 2003>	Up to 2010
Audi A8 2010>	Up to 2016
Audi A8 USA/CAN 1997>	Up to 2003
Audi A8 USA/CAN 2004>	Up to 2010
Audi A8 USA/CAN 2010>	Up to 2016
Audi Cabriolet 2003>	Up to 2009
Audi Cabriolet USA/CAN 2003>	Up to 2009
Audi Q3 2012>	Up to 2016
Audi Q3 USA/CAN 2012>	Up to 2016

Model	Year
Audi Q5 2009>	Up to 2016
Audi Q5 USA/CAN 2009>	Up to 2016
Audi Q7 2007>	Up to 2016
Audi Q7 2016>	Up to 2016
Audi Q7 USA/CAN 2007>	Up to 2016
Audi Q7 USA/CAN 2016>	Up to 2016
Audi R8 2007>	Up to 2016
Audi R8 2015>	Up to 2016
Audi R8 USA/CAN 2008>	Up to 2016
Audi R8 USA/CAN 2015>	Up to 2016
Audi TT 1999>	Up to 2006
Audi TT 2007>	Up to 2015
Audi TT 2015>	Up to 2016
Audi TT USA/CAN 1999>	Up to 2007
Audi TT USA/CAN 2008>	Up to 2015
Audi TT USA/CAN 2015>	Up to 2016

2 Vehicle systems covered

System	DTC	Data List	Active Test
01-Engine	X	X	
02-Auto Trans	X	X	
03-ABS Brakes	X	X	
04-Steering Angle	X	X	
05-Acc/Start Auth.	X	X	
06-Seat Mem. Pass	X	X	
07-Control Head	X	X	
08-Auto HVAC	X	X	
09-Cent. Elect.	X	X	
0C-Rear Axle Steering 2	X	X	
0D-Slide Door,Left	X	X	
0E-Media Player 1	X	X	
0F-Digital Radio	X	X	
10-Park/Steer Assist	X	X	
11-Engine II	X	X	
13-Auto Dist. Reg	X	X	
14-Susp. Elect.	X	X	
15-Airbags	X	X	
16-Steering Wheel	X	X	
17-Instruments	X	X	
18-Aux. Heat	X	X	
19-CAN Gateway	X	X	
1B-Active Steering	X	X	
1C-Position Sensing	X	X	
1D-Driver Ident.	X	X	
1E-Media Player 2	X	X	
1F-Sat. Tuner	X	X	
20-High Beam Assistant	X	X	

System	DTC	Data List	Active Test
21-Battery Energy Control Module 2	X	X	
22-All Wheel Control	X	X	
23-Brake Booster	X	X	
25-Immobilizer	X	X	
26-Auto Roof	X	X	
27-Ctrl Head,Rear	X	X	
28-HVAC,Rear	X	X	
29-Left Light	X	X	
2B-Steering column lock	X	X	
2D-Intercom	X	X	
2E-Media Player 3	X	X	
2F-Digital TV	X	X	
30-Special function	X	X	
32-Differential Locks	X	X	
34-Level Control	X	X	
36-Seat Mem. Drvr	X	X	
37-Navigation	X	X	
38-Roof Electronics	X	X	
39-Right Light	X	X	
3B-Sensor electronics	X	X	
3C-Lane Change	X	X	
3D-Special Function	X	X	
3E-Media Player 4	X	X	
40-A/C compressor	X	X	
42-Door Elect,Driver	X	X	
44-Steering Assist	X	X	
46-Central Conv.	X	X	
47-Sound System	X	X	
48-Seat,Rear,DS	X	X	
4B-Multifunction module	X	X	
4C-Tire Pressure II	X	X	
4E-Ctrl Head RR	X	X	
4F-Centr.Electr. II	X	X	
51-Electric Drive	X	X	
52-Door Elect,Pass.	X	X	
53-Parking Brake	X	X	
55-Xenon Range	X	X	
56-Radio	X	X	
57-TV Tuner	X	X	
59-Tow protection	X	X	
5B-Passenger side rear seat adjustment	X	X	
5C-Lane Departure Warning System	X	X	
5D-Automatic telephone control unit	X	X	
5E-Ctrl Head LR	X	X	
5F-Information Electr.	X	X	
61-Battery Regul.	X	X	
62-Door,Rear Left	X	X	
63-Entry Assist,D	X	X	
65-Tire Pressure	X	X	
66-Seat,Rear PS	X	X	

System	DTC	Data List	Active Test
67-Voice Control	X	X	
68-Wiper Electr.	X	X	
69-Trailer	X	X	
6B-Aerodynamics control module	X	X	
6C-Back-up Cam.	X	X	
6D-Trunk Elect.	X	X	
6E-Ctrl Head Roof	X	X	
6F-Centr. Conv. II	X	X	
71-Battery Charger	X	X	
72-Door,Rear Right	X	X	
73-Entry Assist,P	X	X	
74-Chassis Control	X	X	
75-Telematics	X	X	
76-Park Assist	X	X	
77-Telephone	X	X	
78-Slide Door,Right	X	X	
7D-Aux. Heat	X	X	
7E-Ctrl Head Dash	X	X	
7F-Inform. Electr. II	X	X	
81-Selector lever	X	X	
82-Head-up-display	X	X	
84-Night-vision system	X	X	
85-Camera control module	X	X	
87-Lane Departure Warning System LT3	X	X	
88-Driver side multicontour seat	X	X	
89-Passenger side multicontour seat	X	X	
8A-Rear driver side multicontour seat	X	X	
8B-Distance regulation 2	X	X	
8C-Hybrid battery management	X	X	
8D-Rear passenger side multicontour seat	X	X	
8E-Image processing control module	X	X	
8F-Front left belt tensioner	X	X	
90-Right front belt tensioner	X	X	
91-Engine Control Module LT3	X	X	
92-Transmission Electronics LT3	X	X	
93-Immobilizer LT3	X	X	
94-Airbag (SRS) LT3	X	X	
95-Electronic Stability Program LT3	X	X	
96-Instrument cluster LT3	X	X	
97-Tachograph LT3	X	X	
98-Tire Pressure Monitoring LT3	X	X	
99-Electronic Ignition Starter Switch LT3	X	X	
9A-Remote Control LT3	X	X	
9B-Door Electronics Driver Side LT3	X	X	
9C-Air Conditioning LT3	X	X	
9D-Auxiliary heater (fuel) LT3	X	X	
9E-Auxiliary heater (electric) LT3	X	X	
9F-Additional heater (water) LT3	X	X	
A0-Radio 'Audio 5' LT3	X	X	
A1-Navigation LT3	X	X	

System	DTC	Data List	Active Test
A2-Compact Disc Changer LT3	X	X	
A3-Telephone LT3	X	X	
A5-Front Sensors Driver Assistance System	X	X	
A6-Microphone control module	X	X	
A7-Infotainment interface	X	X	
A9-Actuator for structure-borne noise	X	X	
AC-Reducing agent metering system	X	X	
AD-Brake system sensor system	X	X	
B0-Roof display/control head (roof control head) LT3	X	X	
B1-Upper Operationg Field LT3	X	X	
B2-Parking Aid LT3	X	X	
B3-Trailer Function LT3	X	X	
B4-Vehicle Electrical System Control Module LT3	X	X	
B5-Programmable Special Module LT3	X	X	
B6-Steering Column Tube Switch Module LT3	X	X	
B7-Access/Start system interface	X	X	
B8-Electrical roof actuation 2	X	X	
B9-Auxiliary Display Control Unit	X	X	
BA-Assembly bearing	X	X	
BB-Door electronics rear driver side	X	X	
BC-Door electronics rear passenger side	X	X	
BD-High-voltage battery charge management	X	X	
BE-Left rear sliding door	X	X	
BF-Right rear sliding door	X	X	
C0-Actuator for outside noise	X	X	
C1-Battery Regulation LT3	X	X	
C2-Gearbox electronics 2	X	X	
C4-Transformer for electric drive	X	X	
C5-Thermal management	X	X	
C6-Battery Charger Control Module	X	X	
CB-Rear Axle Steering	X	X	
D0-Front axis lift system	X	X	
D2-Sliding Door Left LT3	X	X	
D3-Sliding Door Right LT3	X	X	

3 Vehicle Special Function covered

Model	System	Special Function
Audi A1 2011	01-Engine	Adapt Throttle Valve Control Module
Audi A1 2011	17-Instruments	Inspection service every 10,000km - China
Audi A1 2011	17-Instruments	Inspection service every 15,000km - India
Audi A1 2011	17-Instruments	Inspection service every 19,000miles - The Britain
Audi A1 2011	17-Instruments	Inspection service every 30,000km
Audi A1 2011	17-Instruments	Inspection service every 5,000km - China
Audi A1 2011	17-Instruments	Inspection service every 7,500km - diesel engine
Audi A1 2011	17-Instruments	Oil change service
Audi A3 2004	01-Engine	Adapt Throttle Valve Control Module
Audi A3 2004	17-Instruments	Inspection service every 10,000km - China
Audi A3 2004	17-Instruments	Inspection service every 15,000km - India

Model	System	Special Function
Audi A3 2004	17-Instruments	Inspection service every 19,000miles - The Britain
Audi A3 2004	17-Instruments	Inspection service every 30,000km
Audi A3 2004	17-Instruments	Inspection service every 5,000km - China
Audi A3 2004	17-Instruments	Inspection service every 7,500km - diesel engine
Audi A3 2004	17-Instruments	Oil change service
Audi A4 2001	01-Engine	Adapt Throttle Valve Control Module
Audi A4 2008	01-Engine	Adapt Throttle Valve Control Module
Audi A4 2008	17-Instruments	Inspection service every 10,000km - China
Audi A4 2008	17-Instruments	Inspection service every 15,000km - India
Audi A4 2008	17-Instruments	Inspection service every 19,000miles - The Britain
Audi A4 2008	17-Instruments	Inspection service every 30,000km
Audi A4 2008	17-Instruments	Inspection service every 5,000km - China
Audi A4 2008	17-Instruments	Inspection service every 7,500km - diesel engine
Audi A4 2008	17-Instruments	Oil change service
Audi A4 2008	53-Parking Brake	Removing and installing brake pads.
Audi A5 2008	01-Engine	Adapt Throttle Valve Control Module
Audi A5 2008	17-Instruments	Inspection service every 10,000km - China
Audi A5 2008	17-Instruments	Inspection service every 15,000km - India
Audi A5 2008	17-Instruments	Inspection service every 19,000miles - The Britain
Audi A5 2008	17-Instruments	Inspection service every 30,000km
Audi A5 2008	17-Instruments	Inspection service every 5,000km - China
Audi A5 2008	17-Instruments	Inspection service every 7,500km - diesel engine
Audi A5 2008	17-Instruments	Oil change service
Audi A5 2008	53-Parking Brake	Removing and installing brake pads.
Audi A6 2005	01-Engine	Adapt Throttle Valve Control Module
Audi A6 2005	17-Instruments	Inspection service every 10,000km - China
Audi A6 2005	17-Instruments	Inspection service every 15,000km - India
Audi A6 2005	17-Instruments	Inspection service every 19,000miles - The Britain
Audi A6 2005	17-Instruments	Inspection service every 30,000km
Audi A6 2005	17-Instruments	Inspection service every 5,000km - China
Audi A6 2005	17-Instruments	Inspection service every 7,500km - diesel engine
Audi A6 2005	17-Instruments	Oil change service
Audi A6 2005	53-Parking Brake	Removing and installing brake pads.
Audi A6 2011	01-Engine	Adapt Throttle Valve Control Module
Audi A6 2011	17-Instruments	Inspection service every 10,000km - China
Audi A6 2011	17-Instruments	Inspection service every 15,000km - India
Audi A6 2011	17-Instruments	Inspection service every 19,000miles - The Britain
Audi A6 2011	17-Instruments	Inspection service every 30,000km
Audi A6 2011	17-Instruments	Inspection service every 5,000km - China
Audi A6 2011	17-Instruments	Inspection service every 7,500km - diesel engine
Audi A6 2011	17-Instruments	Oil change service
Audi A6 2011	53-Parking Brake	Removing and installing brake pads.
Audi A7 2011	01-Engine	Adapt Throttle Valve Control Module
Audi A7 2011	17-Instruments	Inspection service every 10,000km - China
Audi A7 2011	17-Instruments	Inspection service every 15,000km - India
Audi A7 2011	17-Instruments	Inspection service every 19,000miles - The Britain
Audi A7 2011	17-Instruments	Inspection service every 30,000km
Audi A7 2011	17-Instruments	Inspection service every 5,000km - China
Audi A7 2011	17-Instruments	Inspection service every 7,500km - diesel engine
Audi A7 2011	17-Instruments	Oil change service

Model	System	Special Function
Audi A7 2011	53-Parking Brake	Removing and installing brake pads.
Audi A8 2003	01-Engine	Adapt Throttle Valve Control Module
Audi A8 2003	53-Parking Brake	Removing and installing brake pads.
Audi A8 2010	01-Engine	Adapt Throttle Valve Control Module
Audi A8 2010	17-Instruments	Inspection service every 10,000km - China
Audi A8 2010	17-Instruments	Inspection service every 15,000km - India
Audi A8 2010	17-Instruments	Inspection service every 19,000miles - The Britain
Audi A8 2010	17-Instruments	Inspection service every 30,000km
Audi A8 2010	17-Instruments	Inspection service every 5,000km - China
Audi A8 2010	17-Instruments	Inspection service every 7,500km - diesel engine
Audi A8 2010	17-Instruments	Oil change service
Audi A8 2010	53-Parking Brake	Removing and installing brake pads.
Audi Cabriolet 2003	01-Engine	Adapt Throttle Valve Control Module
Audi Q5 2009	01-Engine	Adapt Throttle Valve Control Module
Audi Q5 2009	17-Instruments	Inspection service every 10,000km - China
Audi Q5 2009	17-Instruments	Inspection service every 15,000km - India
Audi Q5 2009	17-Instruments	Inspection service every 19,000miles - The Britain
Audi Q5 2009	17-Instruments	Inspection service every 30,000km
Audi Q5 2009	17-Instruments	Inspection service every 5,000km - China
Audi Q5 2009	17-Instruments	Inspection service every 7,500km - diesel engine
Audi Q5 2009	17-Instruments	Oil change service
Audi Q5 2009	53-Parking Brake	Removing and installing brake pads.
Audi Q7 2007	01-Engine	Adapt Throttle Valve Control Module
Audi Q7 2007	17-Instruments	Inspection service every 10,000km - China
Audi Q7 2007	17-Instruments	Inspection service every 15,000km - India
Audi Q7 2007	17-Instruments	Inspection service every 19,000miles - The Britain
Audi Q7 2007	17-Instruments	Inspection service every 30,000km
Audi Q7 2007	17-Instruments	Inspection service every 5,000km - China
Audi Q7 2007	17-Instruments	Inspection service every 7,500km - diesel engine
Audi Q7 2007	17-Instruments	Oil change service
Audi R8 2007	01-Engine	Adapt Throttle Valve Control Module
Audi R8 2007	17-Instruments	Inspection service every 10,000km - China
Audi R8 2007	17-Instruments	Inspection service every 15,000km - India
Audi R8 2007	17-Instruments	Inspection service every 19,000miles - The Britain
Audi R8 2007	17-Instruments	Inspection service every 30,000km
Audi R8 2007	17-Instruments	Inspection service every 5,000km - China
Audi R8 2007	17-Instruments	Inspection service every 7,500km - diesel engine
Audi R8 2007	17-Instruments	Oil change service
Audi TT 2007	01-Engine	Adapt Throttle Valve Control Module
Audi TT 2007	17-Instruments	Inspection service every 10,000km - China
Audi TT 2007	17-Instruments	Inspection service every 15,000km - India
Audi TT 2007	17-Instruments	Inspection service every 19,000miles - The Britain
Audi TT 2007	17-Instruments	Inspection service every 30,000km
Audi TT 2007	17-Instruments	Inspection service every 5,000km - China
Audi TT 2007	17-Instruments	Inspection service every 7,500km - diesel engine
Audi TT 2007	17-Instruments	Oil change service