

BMW

Table of Contents

1 Vehicle models covered	2
2 Vehicle systems covered	9
3 Vehicle Special Function covered	49

1 Vehicle models covered

Model	Type	Year
1Series_E81/E82/E87/E88	116d,116i,118d,118i,120d,120i,123d,125i,128i,130i,135i,135is	2004-2016
1 Series_F20	Any	Any
1 Series_F21	Any	Any
2 Series_F22/F23/F45	Any	Any
3 Series_E30	Any	Any
3 Series_E36	316g,316i,318i,318is,318tds,318ti,320i,323i,323ti,325tds,328i,M3	1998-2000
3 Series_E46	316Ci,316i,316ti,318Ci,318d,318i,318td,318ti,320Cd,320Ci,320d,320i,320td,323Ci,323i,325Ci,325i,325ti,325xi,328Ci,328i,330Cd,330Ci,330d,330i,330xd,330xi,M3,M3CSL	1998-2006
3Series_E90/E91/E92/E93	316i,318d,318i,320d,320i,320si,320xd,323i,325d,325i,325xi,328i,328xi,330d,330i,330xd,330xi,335d,335i,335xi,M3	2004-2016
3 Series_F30/F31/F35	Any	Any
3 Series_F34	Any	Any
3 Series_F80	Any	Any
4 Series_F32/F33	Any	Any
4 Series_F36	Any	Any
4 Series_F82/F83	Any	Any
5 Series_E39	520d,520i,523i,525d,525i,525td,525tds,528i,530d,530i,535i,540i,M5	1995-2003
5 Series_E60/E61	520Li,520d,520i,523Li,523i,525Li,525d,525i,525xd,525xi,528i,528xi,530Li,530d,530i,530xd,530xi,535d,535i,535xi,540i,545i,550i,M5	2003-2016

5 Series_F07	Any	Any
5 Series_F10/F11	Any	Any
5 Series_F18	Any	Any
6 Series_E63/E64	630i,635d,645Ci,650i,M6	2003-2016
6 Series_F06	Any	Any
6 Series_F12/F13	Any	Any
7 Series_E38	725tds,728i,728iL,730d,730i,730iL,735i,735iL,740d,740i,740iL,750i,750iL,750iXL	1994-2001
7 Series_E65/E66/E68	730Ld,730Li,730d,730i,735Li,735i,740Li,740d,740i,745Li,745d,745i,750Li,750i,760Li,760i,H7	
7 Series_F01/F02/F04	Any	Any
I Series_I01/I12	Any	Any
X Series_X1_E84	Any	Any
X Series_X3_E83	X3 2.0d,X3 2.0i,X3 2.5i,X3 2.5si,X3 3.0d,X3 3.0i,X3 3.0sd,X33.0si	2003-2016
X Series_X3_F25	Any	Any
X Series_X4_F26	Any	Any
X Series_X5_E53	X5 3.0d,X5 3.0i,X5 4.4i,X5 4.6is,X5 4.8is	1999-2006
X Series_X5_E70	X5 3.0d,X5 3.0sd,X5 3.0si,X5 4.8i,X5 M	2006-2016
X Series_X5_F15	Any	Any
X Series_X5_F85	Any	Any
X Series_X6_E71	X6 3.0si, X6 3.0d, X6 3.0sd, X6 5.0i, X6 M	2008-2016
X Series_X6_E72	Any	Any
X Series_X6_F16	Any	Any
X Series_X6_F86	Any	Any
Z Series_Z4_E89	Z4 Sdrive23i, Z4 Sdrive30i, Z4 Sdrive35i	2009
Z Series_Z3_E36	1.8 M43/TU,2.0 M52/TU,2.2 M54,2.3 M52/TU,2.5 M54,2.8M52/TU,2.8 M52/TU COUPE,3.0 M54,3.0 M54COUPE,M44,M52,M52 COUPE,S50,S50 COUPE,S52,S52COUPE,S54,S54 COUPE	1998-2002

Z Series_Z4_E85/E86	2.0i N46,2.2i M54,2.5i M54,2.5i N52,2.5si N52,3.0i M54,3.0iN52,3.0si N52,3.0si N52 COUPE,S54,S54 COUPE	2002-2008
Z Series_Z8_E52	Z8 S62	2000-2003

2 Vehicle systems covered

System	DTC	Data List	Active Test
ABS/ASC/DSC (Dynamic Stability Control)	X	X	X
ACC Active cruise control	X	X	X
ACC/ACC2 Active Cruise Control	X		
ACSM Crash Safety Module	X	X	X
ACSM/MRS Crash Safety Module	X	X	
AHL Adaptive directional headlights	X	X	X
AHM Trailer module	X	X	X
AL active front steering (AFS70)	X	X	
AL active steering	X	X	X
ALBBF Active backrest width,front passenger	X	X	
ALBFA Active backrest width,driver	X	X	
AMP Amplifier	X	X	X
AMPH Hi-Fi amplifier	X	X	X
AMPT Top Hi-Fi amplifier	X	X	X
ANT Antenna/antenna tuner	X	X	X
ARS Dynamic Drive	X	X	X
ARS Dynamic Drive 2	X	X	X
ASK Audio system controller	X	X	X
BM On-board monitor			
BM/MIR (On-board monitor/Multi-Information Radio)	X	X	X
BZM Control center, center console	X	X	X
CA Comfort Access	X	X	X
CAN / byteflight	X		
CAN communication analysis	X		
CAS Car Access System	X	X	X
CCC-A Applications	X	X	X
CCC-ANT Aerial tuner	X	X	X
CCC-ASK Audio system controller	X	X	X

CCC-BO User interface	X	X	X
CCC-GW Gateway	X	X	X
CD Control Display	X	X	
CD-GW Control Display(Gateway)	X	X	X
CDC CD Changer	X	X	X
CEM Clean Energy Module	X	X	
CHAMP-BO User interface X	X	X	
CHAMP-GW Gateway X	X	X	
CIC User interface	X	X	X
CIC-GW Gateway	X	X	X
CIC/CHAMP Car headunit column	X	X	X
CID Central Information Display	X	X	X
CIM Chassis integration Module	X	X	X
CON Controller	X	X	X
CVM Convertible top module	X	X	X
DAB Digital tuner	X	X	X
DDE Diesel Electronics	X	X	X
DME Digital Engine/Gearbox Electronics 2	X	X	X
DME Digital Motor Electronics	X	X	X
DME Motor Electronics	X	X	X
DME/DDE (Motor/Diesel Electronics)	X	X	X
DME/DDE Motor Electronics	X	X	X
DME2/DME2 Digital motor electronics 2	X	X	X
DSC Dynamic Stability Control	X	X	X
DSC(Bosch)Dynamic Stability Control	X	X	X
DSP Digital Sound Processor			
DVD CD Changer	X	X	
DVD-C DVD changer	X	X	X
DVDC DVD Changer	X	X	X
DWA antitheft alarm system	X	X	X
EDC Damper Control	X	X	X
EDC Electronic Damper Control	X	X	X
EDCSHL Damper satellite, rear left	X	X	X
EDCSHR Damper satellite, rear right	X	X	X
EDCSVL Damper satellite, front left	X	X	X
EDCSVr Damper satellite, front right	X	X	X
EGS 6HPTU transmission control	X	X	X

EGS transmission control	X	X	X
EGS transmission management	X	X	X
EHC Electronic Height Control	X	X	X
EHC Electronic Ride-Height Control	X	X	X
EHC Ride level(Height) Control	X	X	X
EHC/EHC2 (Electronic ride-level control)	X	X	X
EHPS Electro-hydraulic steering assistance	X	X	X
EKP Fuel pump	X	X	X
EKPS Fuel pump	X	X	X
EKPS Fuel-pump control	X	X	X
EMF Parking brake	X	X	X
EML Electronic engine-power control	X		
EPS Electronic Power Steering	X	X	X
EWS Electronic immobilizer	X	X	
EWS Vehicle immobilizer	X	X	
FBI Flexible Bus Interface	X	X	
FBZM Rear compartment,controlcenter,center console	X	X	X
FCON Rear compartment controller	X	X	X
FD Rear-cabin display	X	X	
FD Rear-compartment display	X	X	X
FD2 Rear-compartment display2	X	X	X
FID Read-compartment information display	X		
FKA Rear heater/air conditioning	X	X	X
FKA Rear-cabin automatic A/C	X	X	X
FKA Rear-compartment air conditioning	X	X	X
FLA High Beam Assist	X	X	X
FRM Footwell module	X	X	X
FRM/FRM2 Footwell module	X	X	X
FRM2 Footwell module 2	X	X	X
FZD Function centre,roof	X	X	X
GR Cruise control	X		
GWS Gear selector switch	X	X	X
HKL Rear-lid lift	X	X	X
HKL Rear-lid module X	X	X	

HUD Head-Up Display	X	X	X
ICM Integrated Chassis Management	X	X	X
ICM Integroneic Power Steering	X	X	X
IHKA Heater/automatic A/C control	X	X	X
IHKA Integrated automatic heating/air conditioning	X	X	X
IHKA Integrated heating /air conditioning	X	X	X
IHKA/IHKA Integrated heating/air conditioning	X	X	X
IHKS Integrated heating/air-conditioning control	X	X	X
IHS Heater control	X	X	X
INSTR Instrumint cluster	X	X	X
JBE Junction-box electronics	X	X	X
JBE2 Junction Box electronics 2	X	X	X
JNAV Navigation system,Japan	X	X	X
KBM Body basic module	X	X	X
KGM Body Gateway Module	X	X	X
KHI Headphones interface	X	X	X
KNAV Navigation system,Korea	X	X	X
KOM Instrument cluster	X	X	X
KOM/IKE/IKI/INSTR(Instrument cluster)	X	X	X
KOMBI2 additional Instruments			
LEW Steering-angle sensor	X	X	
LEW/LWS (Steering angle sensor)	X	X	
LM Lights Module	X	X	X
LM Lights module 2	X	X	X
LM2 Lights module 2	X	X	X
LRA Automatic headlight vertical aim control	X		
LRA Headlight vertical aim control	X	X	X
LRR Long Range Radar	X		
LSZ/LCM (Lights switching center)	X	X	X
M-ASK-BO User interface	X	X	X
M-ASK-GW Gateway	X	X	X
M-ASK-NAV Navigation system	X	X	X
MFL Multifunction steering wheel I	X	X	
MID Multi Information Display	X		

MOST system analysis	X		
MPM Micro-power module	X	X	X
MRS Multiple Restraint System	X	X	
MRS/AirBag (Multiple Restraint System)	X		
MRS/AirBag(Multiple Restraint System)	X		
MRS/AirBag/SIM (Multiple Restraint System)	X	X	X
NAV Navigation computer	X	X	
NAV Navigation computer, Europe	X	X	
NAV Navigation system	X	X	X
NVE Night Vision Electronics	X	X	X
NVK Night vision camera	X	X	X
PDC Park Distance Control	X	X	X
PM Power module	X	X	X
QMVHL Lateral-moment distribution,rear axle	X	X	X
RAD Radio	X	X	X
RAD2-BO User interface	X	X	X
RAD2-GW Gateway	X	X	
RAD2-GW Gateway	X	X	X
RDC Tire pressure control	X	X	
RDC/RDW Tyre pressure check	X	X	
RFK Reversing camera	X	X	X
RLS Rain/Light Sensor	X	X	
RLS/AIC (Rain/Light Sensor/Automatic interval Control)	X	X	
RLSS Rain/light solar sensor	X	X	X
RLSS Solar Rain/Light Sensor	X	X	X
RSE Rear Seat Entertainment	X	X	X
RSE Rear seat enterainment	X	X	X
SASL Satellite,A-pillar,left	X	X	
SASR Satellite,A-pillar,right	X	X	
SBSL Satellite,B-pillar,left	X	X	
SBSR Satellite,B-pillar,right	X	X	
SBSR Satellite,B-pillar,right	X	X	X
SDARS Satellite tuner (US)	X	X	X
SEC1 Supplementary control unit 1	X		
SEC2 Supplementary control unit 2	X		

SES Language-input system	X	X	
SFZ Satellite vehicle center	X	X	
SG-FD Control unit,rear-compartment display	X	X	
SG-FD-GW Control unit,rear-compartment display(gateway)	X	X	X
SGM-SIM Safety and Gateway Module(SIM)	X	X	X
SGM-ZGM Safety and Gateway Module(ZGM)	X		
SHD Slide/tilt sunroof 2	X	X	X
SHD Sliding/tilting sunroof	X	X	X
SHD Sliding/tilting sunroof module	X	X	X
SHD Sliding/titing sunroof	X		
SHZH Independent/auxiliary heater	X	X	X
SIM Safety and information module	X	X	X
SINE Siren and tilt sensor	X	X	
SINE Siren with tilt sensor	X	X	X
SMBF Seat module,passenger	X	X	X
SMBFH Seat module,passenger'sside,rear	X	X	X
SMF/SM/SLM (Seat memory,driver)	X	X	X
SMFA Seat module,driver	X	X	X
SMFAH Seat module,driver'sside,rear	X	X	X
SPMBT Mirror memory,passenger	X	X	X
SPMFT Mirror memory,driver	X	X	X
SSBF Satellite,seat,passenger	X	X	
SSFA Satellite,seat,driver	X	X	
SSH Satellite,seat,rear	X	X	X
STH park heating			
STVL Satellite,door,front left	X	X	
STVR Satellite,door,front right	X	X	
SVS Language processing system	X	X	
SVT Servotronic			
SZL Switch center,steering column	X	X	X
SZM Switching center,center console	X	X	X
Short test	X		
TCU Telematic Control Unit	X	X	X

TCU/ULF/TEL/BIT (Telematic Control unit)	X		
TEL Telephone	X	X	
TMBF Door module,front passenger	X	X	X
TMBFH Door module,passenger'sside,rear	X	X	
TMBFT Door module,passenger door	X	X	
TMFA Door module,driver	X	X	X
TMFAH Door module,driver'sside,rear	X	X	
TMFAT Door module,driver's door	X	X	
TR SVC All round view camera	X	X	X
ULF Universal charging and hands-free facility	X	X	X
ULF-SBX-H Interface box High	X	X	X
VDM Vertical Dynamics Management	X	X	X
VID Video module	X		
VM Video Module	X	X	X
VSW Video switch	X	X	X
VTC Valvetronic	X		
VTC2 Valvetronic 2	X		
VTG Transfer case	X	X	X
WIM Wiper module	X	X	X
ZGM Central Gateway Module	X	X	X
ZKE Central body electronics BC 1	X	X	X
ZKE/GM (Central body electronics/GM base module)	X	X	X

3 Vehicle Special Function covered

Function	Type	Special Function
E81_E82_E87_E88\Service function	Maintenance\Transport mode/pre-delivery check	Delete transport mode
E81_E82_E87_E88\Service function	Maintenance\Transport mode/pre-delivery check	Set transport mode
E81_E82_E87_E88\Service function	Maintenance\Transport mode/pre-delivery check	Charging the battery via diagnostic socket
E81_E82_E87_E88\Service function	Maintenance\CBS correction, tester data	CBS correction, tester data
E81_E82_E87_E88\Service function	Maintenance\CBS reset	CBS reset
E81_E82_E87_E88\Service function	Maintenance\CBS reset	CBS functionality, engine oil, disturbed

E81_E82_E87_E88\Service function	Maintenance\CBS correction, vehicle data	CBS correction, vehicle data
E81_E82_E87_E88\Service function	Maintenance	Oil Reset
E81_E82_E87_E88\Service function	Drive	Motor Electronics
E81_E82_E87_E88\Service function	Drive\CAS	CAS reset
E81_E82_E87_E88\Service function	Drive\CAS	Reset internal ELV fault counter
E81_E82_E87_E88\Service function	Drive\CAS	Selector lever test
E81_E82_E87_E88\Service function	Drive\CAS	Remote key test
E81_E82_E87_E88\Service function	Drive	Transmission control
E81_E82_E87_E88\Service function	Drive	Transmission control VTG
E81_E82_E87_E88\Service function	Chassis	Parking brake
E81_E82_E87_E88\Service function	Chassis	Fully electric steering column
E81_E82_E87_E88\Service function	Chassis	Steering-angle sensor
E81_E82_E87_E88\Service function	Chassis	Wheel-slip control system
E81_E82_E87_E88\Service function	Chassis	Dynamic Drive
E81_E82_E87_E88\Service function	Chassis	Electronic Damper Control K
E81_E82_E87_E88\Service function	Chassis	Electromechanical power steering
E81_E82_E87_E88\Service function	Body\Locking and security functions\Sliding/tilting sunroof	Initialize slide/tilt sunroof
E81_E82_E87_E88\Service function	Body\Locking and security	Delivery position
E81_E82_E87_E88\Service function	Body\Locking and security functions	Remote control/key
E81_E82_E87_E88\Service function	Body\Locking and security functions	Power windows
E81_E82_E87_E88\Service function	Body	Power supply(Battery)
E81_E82_E87_E88\Service function	Body	Rain/light sensor
E81_E82_E87_E88\Service function	Body	Heating/air-conditioning system
E81_E82_E87_E88\Service function	Body	Safety system
E81_E82_E87_E88\Service function	Body\Telecommunication	Universal charging and hands-free facility
E81_E82_E87_E88\Service function	Body\Telecommunication	TCU Telematic Control Unit
E81_E82_E87_E88\Service function	Body\Telecommunication	ULF-SBX interface box
E81_E82_E87_E88\Service function	Body\Telecommunication	ULF-SBX-H interface box High
E81_E82_E87_E88\Service function	Body\Telecommunication	Fixed installation
E81_E82_E87_E88\Service function	Body	Navigation
E81_E82_E87_E88\Service function	Body	SBSR Satellite,B-pillar,right
E81_E82_E87_E88\Service function	Body	MOST ring
E81_E82_E87_E88\Service function	Body	Seats
E81_E82_E87_E88\Service function	Body	Headunit
E36\Service function	Maintenance	Reset service interval indicator
E36\Service function	Drive	Electronic car immobilization system
E36\Service function	Drive	Motor Electronics

E36\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
E36\Service function	Body\Instrument cluster	Reset service interval indicator
E36\Service function	Body\Instrument cluster	Sleep mode
E36\Service function	Body\Instrument cluster	System test
E36\Service function	Body\Light Check Module	Read operating data
E36\Service function	Body\Light Check Module	Adaptive directional headlights
E36\Service function	Body	Light switching centre
E36\Service function	Body	Electronic car immobilization system
E46\Service function	Maintenance	Reset service interval indicator
E46\Service function	Drive	Electronic car immobilization system
E46\Service function	Drive	Motor Electronics
E46\Service function	Drive	Transmission control
E46\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
E46\Service function	Body\Instrument cluster	Reset service interval indicator
E46\Service function	Body\Instrument cluster	Sleep mode
E46\Service function	Body\Instrument cluster	System test
E46\Service function	Body\Light Check Module	Read operating data
E46\Service function	Body\Light Check Module	Adaptive directional headlights
E46\Service function	Body	Light switching centre
E46\Service function	Body	Electronic car immobilization system
E46\Service function	Body\Transport mode	Delete transport mode
E46\Service function	Body\Transport mode	Set transport mode
E46\Service function	Body	Automatic Interval Control
E46\Service function	Body	Multiple Restraint System
E46\Service function	Body	Heating/air-conditioning system
E46\Service function	Body	ZKE Central body electrics
90_E91_E92_E93\Service function	Maintenance\Transport mode/pre-delivery check	Delete transport mode
90_E91_E92_E93\Service function	Maintenance\Transport mode/pre-delivery check	Set transport mode
90_E91_E92_E93\Service function	Maintenance\Transport mode/pre-delivery check	Charging the battery via diagnostic socket
90_E91_E92_E93\Service function	Maintenance\CBS correction, tester data	CBS correction, tester data
90_E91_E92_E93\Service function	Maintenance\CBS reset	CBS reset
90_E91_E92_E93\Service function	Maintenance\CBS reset	CBS functionality, engine oil, disturbed
90_E91_E92_E93\Service function	Maintenance\CBS correction, vehicle data	CBS correction, vehicle data
90_E91_E92_E93\Service function	Maintenance	Oil Reset

90_E91_E92_E93\Service function	Drive	Motor Electronics
90_E91_E92_E93\Service function	Drive\CAS	CAS reset
90_E91_E92_E93\Service function	Drive\CAS	Reset internal ELV fault counter
90_E91_E92_E93\Service function	Drive\CAS	Selector lever test
90_E91_E92_E93\Service function	Drive\CAS	Remote key test
90_E91_E92_E93\Service function	Drive	Transmission control
90_E91_E92_E93\Service function	Drive	Transmission control VTG
90_E91_E92_E93\Service function	Chassis	Parking brake
90_E91_E92_E93\Service function	Chassis	Fully electric steering column
90_E91_E92_E93\Service function	Chassis	Steering-angle sensor
90_E91_E92_E93\Service function	Chassis	Wheel-slip control system
90_E91_E92_E93\Service function	Chassis	Dynamic Drive
90_E91_E92_E93\Service function	Chassis	Electronic Damper Control K
90_E91_E92_E93\Service function	Chassis	Electromechanical power steering
90_E91_E92_E93\Service function	Body\Locking and security functions\Sliding/tilting sunroof	Initialize slide/tilt sunroof
90_E91_E92_E93\Service function	Body\Locking and security	Delivery position
90_E91_E92_E93\Service function	Body\Locking and security functions	Remote control/key
90_E91_E92_E93\Service function	Body\Locking and security functions	Power windows
90_E91_E92_E93\Service function	Body\Locking and security functions	Bistable relays
90_E91_E92_E93\Service function	Body	Power supply(Battery)
90_E91_E92_E93\Service function	Body	Rain/light sensor
90_E91_E92_E93\Service function	Body	Heating/air-conditioning system
90_E91_E92_E93\Service function	Body	Safety system
90_E91_E92_E93\Service function	Body\Telecommunication	Universal charging and hands-free facility
90_E91_E92_E93\Service function	Body\Telecommunication	TCU Telematic Control Unit
90_E91_E92_E93\Service function	Body\Telecommunication	ULF-SBX interface box
90_E91_E92_E93\Service function	Body\Telecommunication	ULF-SBX-H interface box High
90_E91_E92_E93\Service function	Body\Telecommunication	Fixed installation
90_E91_E92_E93\Service function	Body	Navigation
90_E91_E92_E93\Service function	Body	SBSR Satellite,B-pillar,right
90_E91_E92_E93\Service function	Body	MOST ring
90_E91_E92_E93\Service function	Body	Seats
90_E91_E92_E93\Service function	Body	Headunit
E39\Service function	Maintenance	Reset service interval indicator
E39\Service function	Drive	Electronic car immobilization system
E39\Service function	Drive	Motor Electronics
E39\Service function	Drive	Transmission control
E39\Service function	Chassis	EHC Electronic Ride-level control

E39\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
E39\Service function	Body\Instrument cluster	Reset service interval indicator
E39\Service function	Body\Instrument cluster	Sleep mode
E39\Service function	Body\Instrument cluster	System test
E39\Service function	Body\Light Check Module	Read operating data
E39\Service function	Body\Light Check Module	Adaptive directional headlights
E39\Service function	Body	Light switching centre
E39\Service function	Body	Electronic car immobilization system
E39\Service function	Body	Automatic Interval Control
E39\Service function	Body\Transport mode	Delete transport mode
E39\Service function	Body\Transport mode	Set transport mode
E39\Service function	Body	Multiple Restraint System
E39\Service function	Body	Heating/air-conditioning system
E39\Service function	Body	Park Distance Control
E39\Service function	Body	ZKE Central body electrics
E60_E61\Service function	Maintenance\Transport mode/pre-delivery check	Delete transport mode
E60_E61\Service function	Maintenance\Transport mode/pre-delivery check	Set transport mode
E60_E61\Service function	Maintenance\Transport mode/pre-delivery check	Charging the battery via diagnostic socket
E60_E61\Service function	Maintenance\CBS correction, tester data	CBS correction, tester data
E60_E61\Service function	Maintenance\CBS reset	CBS reset
E60_E61\Service function	Maintenance\CBS reset	CBS functionality, engine oil, disturbed
E60_E61\Service function	Maintenance\CBS correction, vehicle data	CBS correction, vehicle data
E60_E61\Service function	Maintenance	Oil Reset
E60_E61\Service function	Drive	Motor Electronics
E60_E61\Service function	Drive\CAS	CAS reset
E60_E61\Service function	Drive\CAS	Reset internal ELV fault counter
E60_E61\Service function	Drive\CAS	Selector lever test
E60_E61\Service function	Drive\CAS	Remote key test
E60_E61\Service function	Drive	Transmission control
E60_E61\Service function	Drive	Transmission control VTG
E60_E61\Service function	Chassis	Parking brake
E60_E61\Service function	Chassis	Fully electric steering column
E60_E61\Service function	Chassis	Steering-angle sensor
E60_E61\Service function	Chassis	Wheel-slip control system

E60_E61\Service function	Chassis	Tyre defect indicator
E60_E61\Service function	Chassis	EHC Electronic Ride-level control
E60_E61\Service function	Chassis	Dynamic Drive
E60_E61\Service function	Chassis	Electronic Damper Control K
E60_E61\Service function	Body\Locking and security functions\Sliding/tilting sunroof	Initialize slide/tilt sunroof
E60_E61\Service function	Body\Locking and security	Delivery position
E60_E61\Service function	Body\Locking and security functions	Remote control/key
E60_E61\Service function	Body\Locking and security functions	Power windows
E60_E61\Service function	Body	Power supply(Battery)
E60_E61\Service function	Body	Rain/light sensor
E60_E61\Service function	Body	Heating/air-conditioning system
E60_E61\Service function	Body	Auxiliary and independent-heating function
E60_E61\Service function	Body	Safety system
E60_E61\Service function	Body\Telecommunication	Universal charging and hands-free facility
E60_E61\Service function	Body\Telecommunication	TCU Telematic Control Unit
E60_E61\Service function	Body\Telecommunication	ULF-SBX interface box
E60_E61\Service function	Body\Telecommunication	ULF-SBX-H interface box High
E60_E61\Service function	Body\Telecommunication	Fixed installation
E60_E61\Service function	Body	Navigation
E60_E61\Service function	Body\Night Vision	Night Vision camera
E60_E61\Service function	Body	SBSR Satellite,B-pillar,right
E60_E61\Service function	Body	MOST ring
E60_E61\Service function	Body	Basic body module
E60_E61\Service function	Body	Lights Module
E60_E61\Service function	Body	Seats
E60_E61\Service function	Body	Headunit
E63_E64\Service function	Maintenance\Transport mode/pre-delivery check	Delete transport mode
E63_E64\Service function	Maintenance\Transport mode/pre-delivery check	Set transport mode
E63_E64\Service function	Maintenance\Transport mode/pre-delivery check	Charging the battery via diagnostic socket
E63_E64\Service function	Maintenance\CBS correction, tester data	CBS correction, tester data
E63_E64\Service function	Maintenance\CBS reset	CBS reset
E63_E64\Service function	Maintenance\CBS reset	CBS functionality, engine oil, disturbed
E63_E64\Service function	Maintenance\CBS correction, vehicle data	CBS correction, vehicle data

E63_E64\Service function	Maintenance	Oil Reset
E63_E64\Service function	Drive	Motor Electronics
E63_E64\Service function	Drive\CAS	CAS reset
E63_E64\Service function	Drive\CAS	Reset internal ELV fault counter
E63_E64\Service function	Drive\CAS	Selector lever test
E63_E64\Service function	Drive\CAS	Remote key test
E63_E64\Service function	Drive	Transmission control
E63_E64\Service function	Drive	Transmission control VTG
E63_E64\Service function	Chassis	Parking brake
E63_E64\Service function	Chassis	Fully electric steering column
E63_E64\Service function	Chassis	Steering-angle sensor
E63_E64\Service function	Chassis	Wheel-slip control system
E63_E64\Service function	Chassis	Tyre defect indicator
E63_E64\Service function	Chassis	Dynamic Drive
E63_E64\Service function	Chassis	Electronic Damper Control K
E63_E64\Service function	Body\Locking and security functions\Sliding/tilting sunroof	Initialize slide/tilt sunroof
E63_E64\Service function	Body\Locking and security	Delivery position
E63_E64\Service function	Body\Locking and security functions	Remote control/key
E63_E64\Service function	Body\Locking and security functions	Power windows
E63_E64\Service function	Body	Power supply(Battery)
E63_E64\Service function	Body	Rain/light sensor
E63_E64\Service function	Body	Heating/air-conditioning system
E63_E64\Service function	Body	Auxiliary and independent-heating function
E63_E64\Service function	Body	Safety system
E63_E64\Service function	Body\Telecommunication	Universal charging and hands-free facility
E63_E64\Service function	Body\Telecommunication	TCU Telematic Control Unit
E63_E64\Service function	Body\Telecommunication	ULF-SBX interface box
E63_E64\Service function	Body\Telecommunication	ULF-SBX-H interface box High
E63_E64\Service function	Body\Telecommunication	Fixed installation
E63_E64\Service function	Body	Navigation
E63_E64\Service function	Body\Night Vision	Night Vision camera
E63_E64\Service function	Body	SBSR Satellite,B-pillar,right
E63_E64\Service function	Body	MOST ring
E63_E64\Service function	Body	Seats
E63_E64\Service function	Body	Headunit
E38\Service function	Maintenance	Reset service interval indicator
E38\Service function	Drive	Electronic car immobilization system
E38\Service function	Drive	Motor Electronics

E38\Service function	Drive	Transmission control
E38\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
E38\Service function	Body\Instrument cluster	Reset service interval indicator
E38\Service function	Body\Instrument cluster	Sleep mode
E38\Service function	Body\Instrument cluster	System test
E38\Service function	Body\Light Check Module	Read operating data
E38\Service function	Body\Light Check Module	Adaptive directional headlights
E38\Service function	Body	Light switching centre
E38\Service function	Body	Electronic car immobilization system
E38\Service function	Body	Automatic Interval Control
E38\Service function	Body	Multiple Restraint System
E38\Service function	Body	Heating/air-conditioning system
E38\Service function	Body	ZKE Central body electrics
E38\Service function	Body	Park Distance Control
E65\Service function	Maintenance\Transport mode/pre-delivery check	Delete transport mode
E65\Service function	Maintenance\Transport mode/pre-delivery check	Set transport mode
E65\Service function	Maintenance\Transport mode/pre-delivery check	Charging the battery via diagnostic socket
E65\Service function	Maintenance\CBS correction, tester data	CBS correction, tester data
E65\Service function	Maintenance\CBS reset	CBS reset
E65\Service function	Maintenance\CBS reset	CBS functionality, engine oil, disturbed
E65\Service function	Maintenance\CBS correction, vehicle data	CBS correction, vehicle data
E65\Service function	Maintenance	Oil Reset
E65\Service function	Drive	Motor Electronics
E65\Service function	Drive\CAS	CAS reset
E65\Service function	Drive\CAS	Reset internal ELV fault counter
E65\Service function	Drive\CAS	Selector lever test
E65\Service function	Drive\CAS	Remote key test
E65\Service function	Drive	Transmission control
E65\Service function	Drive	Transmission control VTG
E65\Service function	Chassis	Parking brake
E65\Service function	Chassis	Fully electric steering column
E65\Service function	Chassis	Steering-angle sensor
E65\Service function	Chassis	Wheel-slip control system
E65\Service function	Chassis	EHC Electronic Ride-level control

E65\Service function	Chassis	Dynamic Drive
E65\Service function	Chassis	Electronic Damper Control K
E65\Service function	Body\Locking and security functions\Sliding/tilting sunroof	Initialize slide/tilt sunroof
E65\Service function	Body\Locking and security	Delivery position
E65\Service function	Body\Locking and security functions	Remote control/key
E65\Service function	Body\Locking and security functions	Power windows
E65\Service function	Body	Power supply(Battery)
E65\Service function	Body	Rain/light sensor
E65\Service function	Body	Windscreen wipers
E65\Service function	Body	Heating/air-conditioning system
E65\Service function	Body	Auxiliary and independent-heating function
E65\Service function	Body	Headlight cleaning system
E65\Service function	Body	Safety system
E65\Service function	Body\Telecommunication	Universal charging and hands-free facility
E65\Service function	Body\Telecommunication	TCU Telematic Control Unit
E65\Service function	Body\Telecommunication	ULF-SBX interface box
E65\Service function	Body\Telecommunication	ULF-SBX-H interface box High
E65\Service function	Body\Telecommunication	Fixed installation
E65\Service function	Body	Navigation
E65\Service function	Body\Night Vision	Night Vision camera
E65\Service function	Body	SBSR Satellite,B-pillar,right
E65\Service function	Body	Instrument cluster
E65\Service function	Body	MOST ring
E65\Service function	Body	Lights Module
E65\Service function	Body	Seats
E65\Service function	Body	Headunit
X3_E83\Service function	Drive	Motor Electronics
X3_E83\Service function	Drive	Transmission control
X3_E83\Service function	Drive	Transmission control VTG
X3_E83\Service function	Drive	Electronic car immobilization system
X3_E83\Service function	Chassis	Steering-angle sensor
X3_E83\Service function	Chassis	Wheel-slip control system
X3_E83\Service function	Body\Instrument cluster	Reset service interval indicator
X3_E83\Service function	Body\Instrument cluster	Sleep mode
X3_E83\Service function	Body\Instrument cluster	System test
X3_E83\Service function	Body\Light Check Module	Read operating data
X3_E83\Service function	Body\Light Check Module	Adaptive directional headlights
X3_E83\Service function	Body	Light switching centre

X3_E83\Service function	Body	Electronic car immobilization system
X3_E83\Service function	Body\Transport mode	Delete transport mode
X3_E83\Service function	Body\Transport mode	Set transport mode
X3_E83\Service function	Body	Multiple Restraint System
X3_E83\Service function	Body	Heating/air-conditioning system
X3_E83\Service function	Body	SBSR Satellite,B-pillar,right
X3_E83\Service function	Body	ZKE Central body electrics
X3_E83\Service function	Maintenance	Reset service interval indicator
X5_E53\Service function	Maintenance	Reset service interval indicator
X5_E53\Service function	Drive	Motor Electronics
X5_E53\Service function	Drive	Transmission control
X5_E53\Service function	Drive	Transmission control VTG
X5_E53\Service function	Drive	Electronic car immobilization system
X5_E53\Service function	Chassis	EHC Electronic Ride-level control
X5_E53\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
X5_E53\Service function	Body\Instrument cluster	Reset service interval indicator
X5_E53\Service function	Body\Instrument cluster	Sleep mode
X5_E53\Service function	Body\Instrument cluster	System test
X5_E53\Service function	Body\Light Check Module	Read operating data
X5_E53\Service function	Body\Light Check Module	Adaptive directional headlights
X5_E53\Service function	Body	Light switching centre
X5_E53\Service function	Body	Electronic car immobilization system
X5_E53\Service function	Body\Transport mode	Delete transport mode
X5_E53\Service function	Body\Transport mode	Set transport mode
X5_E53\Service function	Body	Automatic Interval Control
X5_E53\Service function	Body	Multiple Restraint System
X5_E53\Service function	Body	Heating/air-conditioning system
X5_E53\Service function	Body	ZKE Central body electrics
X5_E53\Service function	Body	Park Distance Control
X5_E53\Service function	Body\Sliding/tilting sunroof	Initialize slide/tilt sunroof
X5_E70\Service function	Maintenance\Transport mode/pre-delivery check	Delete transport mode
X5_E70\Service function	Maintenance\Transport mode/pre-delivery check	Set transport mode
X5_E70\Service function	Maintenance\Transport mode/pre-delivery check	Charging the battery via diagnostic socket
X5_E70\Service function	Maintenance\CBS correction, tester data	CBS correction, tester data
X5_E70\Service function	Maintenance\CBS reset	CBS reset

X5_E70\Service function	Maintenance\CBS correction, vehicle data	CBS correction, vehicle data
X5_E70\Service function	Maintenance	Oil Reset
X5_E70\Service function	Drive	Motor Electronics
X5_E70\Service function	Drive\CAS	CAS reset
X5_E70\Service function	Drive\CAS	Reset internal ELV fault counter
X5_E70\Service function	Drive\CAS	Selector lever test
X5_E70\Service function	Drive\CAS	Remote key test
X5_E70\Service function	Drive	Transmission control
X5_E70\Service function	Drive	Transmission control VTG
X5_E70\Service function	Chassis	Parking brake
X5_E70\Service function	Chassis	Fully electric steering column
X5_E70\Service function	Chassis	Steering-angle sensor
X5_E70\Service function	Chassis	Wheel-slip control system
X5_E70\Service function	Chassis	EHC Electronic Ride-level control
X5_E70\Service function	Chassis	Dynamic Drive
X5_E70\Service function	Chassis	Vertical dynamics management
X5_E70\Service function	Body\Locking and security functions\Sliding/tilting sunroof	Initialize slide/tilt sunroof
X5_E70\Service function	Body\Locking and security	Delivery position
X5_E70\Service function	Body\Locking and security functions	Remote control/key
X5_E70\Service function	Body\Locking and security functions	Power windows
X5_E70\Service function	Body	Power supply(Battery)
X5_E70\Service function	Body	Rain/light sensor
X5_E70\Service function	Body	Heating/air-conditioning system
X5_E70\Service function	Body	Safety system
X5_E70\Service function	Body\Telecommunication	Universal charging and hands-free facility
X5_E70\Service function	Body\Telecommunication	TCU Telematic Control Unit
X5_E70\Service function	Body\Telecommunication	ULF-SBX interface box
X5_E70\Service function	Body\Telecommunication	ULF-SBX-H interface box High
X5_E70\Service function	Body\Telecommunication	Fixed installation
X5_E70\Service function	Body	Navigation
X5_E70\Service function	Body	SBSR Satellite,B-pillar,right
X5_E70\Service function	Body	MOST ring
X5_E70\Service function	Body	Seats
X5_E70\Service function	Body	Headunit
X6_E71\Service function	Maintenance\Transport mode/pre-delivery check	Delete transport mode

X6_E71\Service function	Maintenance\Transport mode/pre-delivery check	Set transport mode
X6_E71\Service function	Maintenance\Transport mode/pre-delivery check	Charging the battery via diagnostic socket
X6_E71\Service function	Maintenance\CBS correction, tester data	CBS correction, tester data
X6_E71\Service function	Maintenance\CBS reset	CBS reset
X6_E71\Service function	Maintenance\CBS correction, vehicle data	CBS correction, vehicle data
X6_E71\Service function	Maintenance	Oil Reset
X6_E71\Service function	Drive	Motor Electronics
X6_E71\Service function	Drive\CAS	CAS reset
X6_E71\Service function	Drive\CAS	Reset internal ELV fault counter
X6_E71\Service function	Drive\CAS	Selector lever test
X6_E71\Service function	Drive\CAS	Remote key test
X6_E71\Service function	Drive	Transmission control
X6_E71\Service function	Drive	Transmission control VTG
X6_E71\Service function	Drive	Rolling-moment distribution
X6_E71\Service function	Chassis	Parking brake
X6_E71\Service function	Chassis	Fully electric steering column
X6_E71\Service function	Chassis	Steering-angle sensor
X6_E71\Service function	Chassis	Wheel-slip control system
X6_E71\Service function	Chassis	EHC Electronic Ride-level control
X6_E71\Service function	Chassis	Dynamic Drive
X6_E71\Service function	Chassis	Vertical dynamics management
X6_E71\Service function	Body\Locking and security functions\Sliding/tilting sunroof	Initialize slide/tilt sunroof
X6_E71\Service function	Body\Locking and security	Delivery position
X6_E71\Service function	Body\Locking and security functions	Remote control/key
X6_E71\Service function	Body\Locking and security functions	Power windows
X6_E71\Service function	Body	Power supply(Battery)
X6_E71\Service function	Body	Rain/light sensor
X6_E71\Service function	Body	Heating/air-conditioning system
X6_E71\Service function	Body	Safety system
X6_E71\Service function	Body\Telecommunication	Universal charging and hands-free facility
X6_E71\Service function	Body\Telecommunication	TCU Telematic Control Unit
X6_E71\Service function	Body\Telecommunication	ULF-SBX interface box
X6_E71\Service function	Body\Telecommunication	ULF-SBX-H interface box High
X6_E71\Service function	Body\Telecommunication	Fixed installation

X6_E71\Service function	Body	Navigation
X6_E71\Service function	Body	SBSR Satellite,B-pillar,right
X6_E71\Service function	Body	MOST ring
X6_E71\Service function	Body	Seats
X6_E71\Service function	Body	Headunit
Z3_E36\Service function	Maintenance	Reset service interval indicator
Z3_E36\Service function	Drive	Electronic car immobilization system
Z3_E36\Service function	Drive	Motor Electronics
Z3_E36\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
Z3_E36\Service function	Body\Instrument cluster	Reset service interval indicator
Z3_E36\Service function	Body\Instrument cluster	Sleep mode
Z3_E36\Service function	Body\Instrument cluster	System test
Z3_E36\Service function	Body\Light Check Module	Read operating data
Z3_E36\Service function	Body\Light Check Module	Adaptive directional headlights
Z3_E36\Service function	Body	Light switching centre
Z3_E36\Service function	Body	Electronic car immobilization system
Z3_E36\Service function	Body	Park Distance Control
Z4_E85_E86\Service function	Maintenance	Reset service interval indicator
Z4_E85_E86\Service function	Drive	Electronic car immobilization system
Z4_E85_E86\Service function	Drive	Motor Electronics
Z4_E85_E86\Service function	Chassis	Steering-angle sensor
Z4_E85_E86\Service function	Chassis	Wheel-slip control system MK60
Z4_E85_E86\Service function	Chassis	Electromechanical power steering
Z4_E85_E86\Service function	Body\Instrument cluster	Reset service interval indicator
Z4_E85_E86\Service function	Body\Instrument cluster	Sleep mode
Z4_E85_E86\Service function	Body\Instrument cluster	System test
Z4_E85_E86\Service function	Body\Light Check Module	Read operating data
Z4_E85_E86\Service function	Body\Light Check Module	Adaptive directional headlights
Z4_E85_E86\Service function	Body	Light switching centre
Z4_E85_E86\Service function	Body	Electronic car immobilization system
Z4_E85_E86\Service function	Body\Transport mode	Delete transport mode
Z4_E85_E86\Service function	Body\Transport mode	Set transport mode
Z4_E85_E86\Service function	Body	Safety system
Z4_E85_E86\Service function	Body	SBSR Satellite,B-pillar,right
Z4_E85_E86\Service function	Body	Heating/air-conditioning system
Z4_E85_E86\Service function	Body	ZKE Central body electrics
Z4_E85_E86\Service function	Body	Park Distance Control
Z8_E52\Service function	Maintenance	Reset service interval indicator
Z8_E52\Service function	Drive	Electronic car immobilization system

Z8_E52\Service function	Drive	Motor Electronics
Z8_E52\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
Z8_E52\Service function	Body\Instrument cluster	Reset service interval indicator
Z8_E52\Service function	Body\Instrument cluster	Sleep mode
Z8_E52\Service function	Body\Instrument cluster	System test
Z8_E52\Service function	Body\Light Check Module	Read operating data
Z8_E52\Service function	Body\Light Check Module	Adaptive directional headlights
Z8_E52\Service function	Body	Light switching centre
Z8_E52\Service function	Body	Electronic car immobilization system
Z8_E52\Service function	Body\Transport mode	Delete transport mode
Z8_E52\Service function	Body\Transport mode	Set transport mode
Z8_E52\Service function	Body	Heating/air-conditioning system
Z8_E52\Service function	Body	ZKE Central body electrics
Z8_E52\Service function	Body	Park Distance Control
ZR_E89\Service function	Maintenance\Transport mode/pre-delivery check	Delete transport mode
ZR_E89\Service function	Maintenance\Transport mode/pre-delivery check	Set transport mode
ZR_E89\Service function	Maintenance\Transport mode/pre-delivery check	Charging the battery via diagnostic socket
ZR_E89\Service function	Maintenance\CBS correction, tester data	CBS correction, tester data
ZR_E89\Service function	Maintenance\CBS reset	CBS reset
ZR_E89\Service function	Maintenance\CBS reset	CBS functionality, engine oil, disturbed
ZR_E89\Service function	Maintenance\CBS correction, vehicle data	CBS correction, vehicle data
ZR_E89\Service function	Maintenance	Oil Reset
ZR_E89\Service function	Drive	Motor Electronics
ZR_E89\Service function	Drive\CAS	CAS reset
ZR_E89\Service function	Drive\CAS	Reset internal ELV fault counter
ZR_E89\Service function	Drive\CAS	Selector lever test
ZR_E89\Service function	Drive\CAS	Remote key test
ZR_E89\Service function	Drive\CAS	Resetting starter lock
ZR_E89\Service function	Drive	Transmission control
ZR_E89\Service function	Drive	Transmission control VTG
ZR_E89\Service function	Chassis	Parking brake
ZR_E89\Service function	Chassis	Fully electric steering column
ZR_E89\Service function	Chassis	Steering-angle sensor
ZR_E89\Service function	Chassis	Wheel-slip control system

ZR_E89\Service function	Chassis	Dynamic Drive
ZR_E89\Service function	Chassis	Electronic Damper Control K
ZR_E89\Service function	Body\Locking and security functions\Sliding/tilting sunroof	Initialize slide/tilt sunroof
ZR_E89\Service function	Body\Locking and security	Delivery position
ZR_E89\Service function	Body\Locking and security functions	Remote control/key
ZR_E89\Service function	Body\Locking and security functions	Power windows
ZR_E89\Service function	Body\Locking and security functions	CTM: Rear module emergency access
ZR_E89\Service function	Body	Power supply(Battery)
ZR_E89\Service function	Body	Rain/light sensor
ZR_E89\Service function	Body	Heating/air-conditioning system
ZR_E89\Service function	Body	Navigation
ZR_E89\Service function	Body	SBSR Satellite,B-pillar,right
ZR_E89\Service function	Body	Seats
ZR_E89\Service function	Body	Safety system
ZR_E89\Service function	Body	MOST ring
ZR_E89\Service function	Body	Headunit
F10_F11\Service function	Maintenance	CBS reset
F10_F11\Service function	Maintenance	CBS correction, vehicle data
F10_F11\Service function	Maintenance	Transport mode/pre-delivery check
F10_F11\Service function	Maintenance	Oil Reset
F10_F11\Service function	Drive	CAS KL 15 activation/deactivation
F10_F11\Service function	Drive	FEM_KL 15 activation/deactivation
F10_F11\Service function	Drive	Motor Electronics
F10_F11\Service function	Drive	Engine start
F10_F11\Service function	Drive	Transmission control
F10_F11\Service function	Drive	Transfer box transmission control unit
F10_F11\Service function	Drive	Electric fuel pump
F10_F11\Service function	Chassis	Steering-angle sensor
F10_F11\Service function	Chassis	Electric steering-column adjustment
F10_F11\Service function	Chassis	Electromechanical power steering
F10_F11\Service function	Chassis	Integrated chassis management
F10_F11\Service function	Chassis	Parking brake
F10_F11\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
F10_F11\Service function	Chassis	Vertical dynamics management
F10_F11\Service function	Chassis	Dynamic Drive
F10_F11\Service function	Chassis	Electronic ride height control
F10_F11\Service function	Chassis	Active front steering
F10_F11\Service function	Chassis	Rear-axle slip-angle control

F10_F11\Service function	Body	Heating and air conditioning functions
F10_F11\Service function	Body	Locking and security functions
F10_F11\Service function	Body	Audio
F10_F11\Service function	Body	Safety functions
F10_F11\Service function	Body	Lights
F10_F11\Service function	Body	Power supply(Battery)
F10_F11\Service function	Body	Solar rain/light fogging sensor
F10_F11\Service function	Body	Seats
F10_F11\Service function	Body	Tyre pressure control
F10_F11\Service function	Body	MOST ring
F10_F11\Service function	Body	Central Gateway Module
F10_F11\Service function	Body	Rear seat entertainment system
F10_F11\Service function	Body	Headunit
F10_F11\Service function	Body	All-round vision camera
F10_F11\Service function	Body	Additional functions
F10_F11\Service function	Body	Automatic tailgate actuation
F01_F02_F04\Service function	Maintenance	CBS reset
F01_F02_F04\Service function	Maintenance	CBS correction, vehicle data
F01_F02_F04\Service function	Maintenance	Transport mode/pre-delivery check
F01_F02_F04\Service function	Maintenance	Oil Reset
F01_F02_F04\Service function	Drive	CAS KL 15 activation/deactivation
F01_F02_F04\Service function	Drive	FEM_KL 15 activation/deactivation
F01_F02_F04\Service function	Drive	Motor Electronics
F01_F02_F04\Service function	Drive	Engine start
F01_F02_F04\Service function	Drive	Transmission control
F01_F02_F04\Service function	Drive	Transfer box transmission control unit
F01_F02_F04\Service function	Drive	Electric fuel pump
F01_F02_F04\Service function	Chassis	Steering-angle sensor
F01_F02_F04\Service function	Chassis	Electric steering-column adjustment
F01_F02_F04\Service function	Chassis	Electromechanical power steering
F01_F02_F04\Service function	Chassis	Integrated chassis management
F01_F02_F04\Service function	Chassis	Parking brake
F01_F02_F04\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
F01_F02_F04\Service function	Chassis	Vertical dynamics management
F01_F02_F04\Service function	Chassis	Dynamic Drive
F01_F02_F04\Service function	Chassis	Electronic ride height control
F01_F02_F04\Service function	Chassis	Active front steering
F01_F02_F04\Service function	Chassis	Rear-axle slip-angle control
F01_F02_F04\Service function	Body	Heating and air conditioning functions

F01_F02_F04\Service function	Body	Locking and security functions
F01_F02_F04\Service function	Body	Audio
F01_F02_F04\Service function	Body	Safety functions
F01_F02_F04\Service function	Body	Lights
F01_F02_F04\Service function	Body	Power supply(Battery)
F01_F02_F04\Service function	Body	Solar rain/light fogging sensor
F01_F02_F04\Service function	Body	Seats
F01_F02_F04\Service function	Body	Tyre pressure control
F01_F02_F04\Service function	Body	MOST ring
F01_F02_F04\Service function	Body	Central Gateway Module
F01_F02_F04\Service function	Body	Rear seat entertainment system
F01_F02_F04\Service function	Body	Headunit
F01_F02_F04\Service function	Body	All-round vision camera
F01_F02_F04\Service function	Body	Additional functions
F01_F02_F04\Service function	Body	Automatic tailgate actuation
F20\Service function	Maintenance	CBS reset
F20\Service function	Maintenance	CBS correction, vehicle data
F20\Service function	Maintenance	Transport mode/pre-delivery check
F20\Service function	Maintenance	Oil Reset
F20\Service function	Drive	CAS_KL 15 activation/deactivation
F20\Service function	Drive	FEM_KL 15 activation/deactivation
F20\Service function	Drive	Motor Electronics
F20\Service function	Drive	Engine start
F20\Service function	Drive	Transmission control
F20\Service function	Drive	Transfer box transmission control unit
F20\Service function	Drive	Electric fuel pump
F20\Service function	Chassis	Steering-angle sensor
F20\Service function	Chassis	Electric steering-column adjustment
F20\Service function	Chassis	Electromechanical power steering
F20\Service function	Chassis	Integrated chassis management
F20\Service function	Chassis	Parking brake
F20\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
F20\Service function	Chassis	Vertical dynamics management
F20\Service function	Chassis	Dynamic Drive
F20\Service function	Chassis	Electronic ride height control
F20\Service function	Chassis	Active front steering
F20\Service function	Chassis	Rear-axle slip-angle control
F20\Service function	Body	Heating and air conditioning functions
F20\Service function	Body	Locking and security functions

F20\Service function	Body	Audio
F20\Service function	Body	Safety functions
F20\Service function	Body	Lights
F20\Service function	Body	Power supply(Battery)
F20\Service function	Body	Solar rain/light fogging sensor
F20\Service function	Body	Seats
F20\Service function	Body	Tyre pressure control
F20\Service function	Body	MOST ring
F20\Service function	Body	Central Gateway Module
F20\Service function	Body	Rear seat entertainment system
F20\Service function	Body	Headunit
F20\Service function	Body	All-round vision camera
F20\Service function	Body	Additional functions
F20\Service function	Body	Automatic tailgate actuation
F30\Service function	Maintenance	CBS reset
F30\Service function	Maintenance	CBS correction, vehicle data
F30\Service function	Maintenance	Transport mode/pre-delivery check
F30\Service function	Maintenance	Oil Reset
F30\Service function	Drive	CAS KL 15 activation/deactivation
F30\Service function	Drive	FEM_KL 15 activation/deactivation
F30\Service function	Drive	Motor Electronics
F30\Service function	Drive	Engine start
F30\Service function	Drive	Transmission control
F30\Service function	Drive	Transfer box transmission control unit
F30\Service function	Drive	Electric fuel pump
F30\Service function	Chassis	Steering-angle sensor
F30\Service function	Chassis	Electric steering-column adjustment
F30\Service function	Chassis	Electromechanical power steering
F30\Service function	Chassis	Integrated chassis management
F30\Service function	Chassis	Parking brake
F30\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
F30\Service function	Chassis	Vertical dynamics management
F30\Service function	Chassis	Dynamic Drive
F30\Service function	Chassis	Electronic ride height control
F30\Service function	Chassis	Active front steering
F30\Service function	Chassis	Rear-axle slip-angle control
F30\Service function	Body	Heating and air conditioning functions
F30\Service function	Body	Locking and security functions
F30\Service function	Body	Audio

F30\Service function	Body	Safety functions
F30\Service function	Body	Lights
F30\Service function	Body	Power supply(Battery)
F30\Service function	Body	Solar rain/light fogging sensor
F30\Service function	Body	Seats
F30\Service function	Body	Tyre pressure control
F30\Service function	Body	MOST ring
F30\Service function	Body	Central Gateway Module
F30\Service function	Body	Rear seat entertainment system
F30\Service function	Body	Headunit
F30\Service function	Body	All-round vision camera
F30\Service function	Body	Additional functions
F30\Service function	Body	Automatic tailgate actuation
F07\Service function	Maintenance	CBS reset
F07\Service function	Maintenance	CBS correction, vehicle data
F07\Service function	Maintenance	Transport mode/pre-delivery check
F07\Service function	Maintenance	Oil Reset
F07\Service function	Drive	CAS KL 15 activation/deactivation
F07\Service function	Drive	FEM_KL 15 activation/deactivation
F07\Service function	Drive	Motor Electronics
F07\Service function	Drive	Engine start
F07\Service function	Drive	Transmission control
F07\Service function	Drive	Transfer box transmission control unit
F07\Service function	Drive	Electric fuel pump
F07\Service function	Chassis	Steering-angle sensor
F07\Service function	Chassis	Electric steering-column adjustment
F07\Service function	Chassis	Electromechanical power steering
F07\Service function	Chassis	Integrated chassis management
F07\Service function	Chassis	Parking brake
F07\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
F07\Service function	Chassis	Vertical dynamics management
F07\Service function	Chassis	Dynamic Drive
F07\Service function	Chassis	Electronic ride height control
F07\Service function	Chassis	Active front steering
F07\Service function	Chassis	Rear-axle slip-angle control
F07\Service function	Body	Heating and air conditioning functions
F07\Service function	Body	Locking and security functions
F07\Service function	Body	Audio
F07\Service function	Body	Safety functions

F07\Service function	Body	Lights
F07\Service function	Body	Power supply(Battery)
F07\Service function	Body	Solar rain/light fogging sensor
F07\Service function	Body	Seats
F07\Service function	Body	Tyre pressure control
F07\Service function	Body	MOST ring
F07\Service function	Body	Central Gateway Module
F07\Service function	Body	Rear seat entertainment system
F07\Service function	Body	Headunit
F07\Service function	Body	All-round vision camera
F07\Service function	Body	Additional functions
F07\Service function	Body	Automatic tailgate actuation
F18\Service function	Maintenance	CBS reset
F18\Service function	Maintenance	CBS correction, vehicle data
F18\Service function	Maintenance	Transport mode/pre-delivery check
F18\Service function	Maintenance	Oil Reset
F18\Service function	Drive	CAS KL 15 activation/deactivation
F18\Service function	Drive	FEM_KL 15 activation/deactivation
F18\Service function	Drive	Motor Electronics
F18\Service function	Drive	Engine start
F18\Service function	Drive	Transmission control
F18\Service function	Drive	Transfer box transmission control unit
F18\Service function	Drive	Electric fuel pump
F18\Service function	Chassis	Steering-angle sensor
F18\Service function	Chassis	Electric steering-column adjustment
F18\Service function	Chassis	Electromechanical power steering
F18\Service function	Chassis	Integrated chassis management
F18\Service function	Chassis	Parking brake
F18\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
F18\Service function	Chassis	Vertical dynamics management
F18\Service function	Chassis	Dynamic Drive
F18\Service function	Chassis	Electronic ride height control
F18\Service function	Chassis	Active front steering
F18\Service function	Chassis	Rear-axle slip-angle control
F18\Service function	Body	Heating and air conditioning functions
F18\Service function	Body	Locking and security functions
F18\Service function	Body	Audio
F18\Service function	Body	Safety functions
F18\Service function	Body	Lights

F18\Service function	Body	Power supply(Battery)
F18\Service function	Body	Solar rain/light fogging sensor
F18\Service function	Body	Seats
F18\Service function	Body	Tyre pressure control
F18\Service function	Body	MOST ring
F18\Service function	Body	Central Gateway Module
F18\Service function	Body	Rear seat entertainment system
F18\Service function	Body	Headunit
F18\Service function	Body	All-round vision camera
F18\Service function	Body	Additional functions
F18\Service function	Body	Automatic tailgate actuation
F12_F13\Service function	Maintenance	CBS reset
F12_F13\Service function	Maintenance	CBS correction, vehicle data
F12_F13\Service function	Maintenance	Transport mode/pre-delivery check
F12_F13\Service function	Maintenance	Oil Reset
F12_F13\Service function	Drive	CAS KL 15 activation/deactivation
F12_F13\Service function	Drive	FEM_KL 15 activation/deactivation
F12_F13\Service function	Drive	Motor Electronics
F12_F13\Service function	Drive	Engine start
F12_F13\Service function	Drive	Transmission control
F12_F13\Service function	Drive	Transfer box transmission control unit
F12_F13\Service function	Drive	Electric fuel pump
F12_F13\Service function	Chassis	Steering-angle sensor
F12_F13\Service function	Chassis	Electric steering-column adjustment
F12_F13\Service function	Chassis	Electromechanical power steering
F12_F13\Service function	Chassis	Integrated chassis management
F12_F13\Service function	Chassis	Parking brake
F12_F13\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
F12_F13\Service function	Chassis	Vertical dynamics management
F12_F13\Service function	Chassis	Dynamic Drive
F12_F13\Service function	Chassis	Electronic ride height control
F12_F13\Service function	Chassis	Active front steering
F12_F13\Service function	Chassis	Rear-axle slip-angle control
F12_F13\Service function	Body	Heating and air conditioning functions
F12_F13\Service function	Body	Locking and security functions
F12_F13\Service function	Body	Audio
F12_F13\Service function	Body	Safety functions
F12_F13\Service function	Body	Lights
F12_F13\Service function	Body	Power supply(Battery)

F12_F13\Service function	Body	Solar rain/light fogging sensor
F12_F13\Service function	Body	Seats
F12_F13\Service function	Body	Tyre pressure control
F12_F13\Service function	Body	MOST ring
F12_F13\Service function	Body	Central Gateway Module
F12_F13\Service function	Body	Rear seat entertainment system
F12_F13\Service function	Body	Headunit
F12_F13\Service function	Body	All-round vision camera
F12_F13\Service function	Body	Additional functions
F12_F13\Service function	Body	Automatic tailgate actuation
X3_F25\Service function	Maintenance	CBS reset
X3_F25\Service function	Maintenance	CBS correction, vehicle data
X3_F25\Service function	Maintenance	Transport mode/pre-delivery check
X3_F25\Service function	Maintenance	Oil Reset
X3_F25\Service function	Drive	CAS KL 15 activation/deactivation
X3_F25\Service function	Drive	FEM_KL 15 activation/deactivation
X3_F25\Service function	Drive	Motor Electronics
X3_F25\Service function	Drive	Engine start
X3_F25\Service function	Drive	Transmission control
X3_F25\Service function	Drive	Transfer box transmission control unit
X3_F25\Service function	Drive	Electric fuel pump
X3_F25\Service function	Chassis	Steering-angle sensor
X3_F25\Service function	Chassis	Electric steering-column adjustment
X3_F25\Service function	Chassis	Electromechanical power steering
X3_F25\Service function	Chassis	Integrated chassis management
X3_F25\Service function	Chassis	Parking brake
X3_F25\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
X3_F25\Service function	Chassis	Vertical dynamics management
X3_F25\Service function	Chassis	Dynamic Drive
X3_F25\Service function	Chassis	Electronic ride height control
X3_F25\Service function	Chassis	Active front steering
X3_F25\Service function	Chassis	Rear-axle slip-angle control
X3_F25\Service function	Body	Heating and air conditioning functions
X3_F25\Service function	Body	Locking and security functions
X3_F25\Service function	Body	Audio
X3_F25\Service function	Body	Safety functions
X3_F25\Service function	Body	Lights
X3_F25\Service function	Body	Power supply(Battery)
X3_F25\Service function	Body	Solar rain/light fogging sensor

X3_F25\Service function	Body	Seats
X3_F25\Service function	Body	Tyre pressure control
X3_F25\Service function	Body	MOST ring
X3_F25\Service function	Body	Central Gateway Module
X3_F25\Service function	Body	Rear seat entertainment system
X3_F25\Service function	Body	Headunit
X3_F25\Service function	Body	All-round vision camera
X3_F25\Service function	Body	Additional functions
X3_F25\Service function	Body	Automatic tailgate actuation
X6_E72\Service function	Maintenance\Transport mode/pre-delivery check	Delete transport mode
X6_E72\Service function	Maintenance\Transport mode/pre-delivery check	Set transport mode
X6_E72\Service function	Maintenance\Transport mode/pre-delivery check	Charging the battery via diagnostic socket
X6_E72\Service function	Maintenance\CBS correction, tester data	CBS correction, tester data
X6_E72\Service function	Maintenance\CBS reset	CBS reset
X6_E72\Service function	Maintenance\CBS correction, vehicle data	CBS correction, vehicle data
X6_E72\Service function	Maintenance	Oil Reset
X6_E72\Service function	Drive	Motor Electronics
X6_E72\Service function	Drive\CAS	CAS reset
X6_E72\Service function	Drive\CAS	Reset internal ELV fault counter
X6_E72\Service function	Drive\CAS	Selector lever test
X6_E72\Service function	Drive\CAS	Remote key test
X6_E72\Service function	Drive	Transmission control
X6_E72\Service function	Drive	Transmission control VTG
X6_E72\Service function	Drive	Rolling-moment distribution
X6_E72\Service function	Chassis	Parking brake
X6_E72\Service function	Chassis	Fully electric steering column
X6_E72\Service function	Chassis	Steering-angle sensor
X6_E72\Service function	Chassis	Wheel-slip control system
X6_E72\Service function	Chassis	EHC Electronic Ride-level control
X6_E72\Service function	Chassis	Dynamic Drive
X6_E72\Service function	Chassis	Vertical dynamics management
X6_E72\Service function	Body\Locking and security functions\Sliding/tilting sunroof	Initialize slide/tilt sunroof
X6_E72\Service function	Body\Locking and security	Delivery position

X6_E72\Service function	Body\Locking and security functions	Remote control/key
X6_E72\Service function	Body\Locking and security functions	Power windows
X6_E72\Service function	Body	Power supply(Battery)
X6_E72\Service function	Body	Rain/light sensor
X6_E72\Service function	Body	Heating/air-conditioning system
X6_E72\Service function	Body	Safety system
X6_E72\Service function	Body\Telecommunication	Universal charging and hands-free facility
X6_E72\Service function	Body\Telecommunication	TCU Telematic Control Unit
X6_E72\Service function	Body\Telecommunication	ULF-SBX interface box
X6_E72\Service function	Body\Telecommunication	ULF-SBX-H interface box High
X6_E72\Service function	Body\Telecommunication	Fixed installation
X6_E72\Service function	Body	Navigation
X6_E72\Service function	Body	SBSR Satellite,B-pillar,right
X6_E72\Service function	Body	Seats
X6_E72\Service function	Body	MOST ring
X6_E72\Service function	Body	Headunit
X1_E84\Service function	Maintenance\Transport mode/pre-delivery check	Delete transport mode
X1_E84\Service function	Maintenance\Transport mode/pre-delivery check	Set transport mode
X1_E84\Service function	Maintenance\Transport mode/pre-delivery check	Charging the battery via diagnostic socket
X1_E84\Service function	Maintenance\CBS correction, tester data	CBS correction, tester data
X1_E84\Service function	Maintenance\CBS reset	CBS reset
X1_E84\Service function	Maintenance\CBS correction, vehicle data	CBS correction, vehicle data
X1_E84\Service function	Maintenance	Oil Reset
X1_E84\Service function	Drive	Motor Electronics
X1_E84\Service function	Drive\CAS	CAS reset
X1_E84\Service function	Drive\CAS	Reset internal ELV fault counter
X1_E84\Service function	Drive\CAS	Selector lever test
X1_E84\Service function	Drive\CAS	Remote key test
X1_E84\Service function	Drive	Transmission control
X1_E84\Service function	Drive	Transmission control VTG
X1_E84\Service function	Drive	Rolling-moment distribution
X1_E84\Service function	Chassis	Parking brake
X1_E84\Service function	Chassis	Fully electric steering column
X1_E84\Service function	Chassis	Steering-angle sensor

X1_E84\Service function	Chassis	Wheel-slip control system
X1_E84\Service function	Chassis	EHC Electronic Ride-level control
X1_E84\Service function	Chassis	Dynamic Drive
X1_E84\Service function	Chassis	Vertical dynamics management
X1_E84\Service function	Chassis	Electromechanical power steering
X1_E84\Service function	Body\Locking and security functions\Sliding/tilting sunroof	Initialize slide/tilt sunroof
X1_E84\Service function	Body\Locking and security	Delivery position
X1_E84\Service function	Body\Locking and security functions	Remote control/key
X1_E84\Service function	Body\Locking and security functions	Power windows
X1_E84\Service function	Body	Power supply(Battery)
X1_E84\Service function	Body	Rain/light sensor
X1_E84\Service function	Body	Heating/air-conditioning system
X1_E84\Service function	Body	Safety system
X1_E84\Service function	Body\Telecommunication	Universal charging and hands-free facility
X1_E84\Service function	Body\Telecommunication	TCU Telematic Control Unit
X1_E84\Service function	Body\Telecommunication	ULF-SBX interface box
X1_E84\Service function	Body\Telecommunication	ULF-SBX-H interface box High
X1_E84\Service function	Body\Telecommunication	Fixed installation
X1_E84\Service function	Body	Navigation
X1_E84\Service function	Body	SBSR Satellite,B-pillar,right
X1_E84\Service function	Body	MOST ring
X1_E84\Service function	Body	Seats
X1_E84\Service function	Body	Headunit
F22\Service function	Maintenance	CBS reset
F22\Service function	Maintenance	CBS correction, vehicle data
F22\Service function	Maintenance	Transport mode/pre-delivery check
F22\Service function	Maintenance	Oil Reset
F22\Service function	Drive	CAS KL 15 activation/deactivation
F22\Service function	Drive	FEM_KL 15 activation/deactivation
F22\Service function	Drive	Motor Electronics
F22\Service function	Drive	Engine start
F22\Service function	Drive	Transmission control
F22\Service function	Drive	Transfer box transmission control unit
F22\Service function	Drive	Electric fuel pump
F22\Service function	Chassis	Steering-angle sensor
F22\Service function	Chassis	Electric steering-column adjustment
F22\Service function	Chassis	Electromechanical power steering
F22\Service function	Chassis	Integrated chassis management

F22\Service function	Chassis	Parking brake
F22\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
F22\Service function	Chassis	Vertical dynamics management
F22\Service function	Chassis	Dynamic Drive
F22\Service function	Chassis	Electronic ride height control
F22\Service function	Chassis	Active front steering
F22\Service function	Chassis	Rear-axle slip-angle control
F22\Service function	Body	Heating and air conditioning functions
F22\Service function	Body	Locking and security functions
F22\Service function	Body	Audio
F22\Service function	Body	Safety functions
F22\Service function	Body	Lights
F22\Service function	Body	Power supply(Battery)
F22\Service function	Body	Solar rain/light fogging sensor
F22\Service function	Body	Seats
F22\Service function	Body	Tyre pressure control
F22\Service function	Body	MOST ring
F22\Service function	Body	Central Gateway Module
F22\Service function	Body	Rear seat entertainment system
F22\Service function	Body	Headunit
F22\Service function	Body	All-round vision camera
F22\Service function	Body	Additional functions
F22\Service function	Body	Automatic tailgate actuation
F34\Service function	Maintenance	CBS reset
F34\Service function	Maintenance	CBS correction, vehicle data
F34\Service function	Maintenance	Transport mode/pre-delivery check
F34\Service function	Maintenance	Oil Reset
F34\Service function	Drive	CAS KL 15 activation/deactivation
F34\Service function	Drive	FEM_KL 15 activation/deactivation
F34\Service function	Drive	Motor Electronics
F34\Service function	Drive	Engine start
F34\Service function	Drive	Transmission control
F34\Service function	Drive	Transfer box transmission control unit
F34\Service function	Drive	Electric fuel pump
F34\Service function	Chassis	Steering-angle sensor
F34\Service function	Chassis	Electric steering-column adjustment
F34\Service function	Chassis	Electromechanical power steering
F34\Service function	Chassis	Integrated chassis management
F34\Service function	Chassis	Parking brake

F34\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
F34\Service function	Chassis	Vertical dynamics management
F34\Service function	Chassis	Dynamic Drive
F34\Service function	Chassis	Electronic ride height control
F34\Service function	Chassis	Active front steering
F34\Service function	Chassis	Rear-axle slip-angle control
F34\Service function	Body	Heating and air conditioning functions
F34\Service function	Body	Locking and security functions
F34\Service function	Body	Audio
F34\Service function	Body	Safety functions
F34\Service function	Body	Lights
F34\Service function	Body	Power supply(Battery)
F34\Service function	Body	Solar rain/light fogging sensor
F34\Service function	Body	Seats
F34\Service function	Body	Tyre pressure control
F34\Service function	Body	MOST ring
F34\Service function	Body	Central Gateway Module
F34\Service function	Body	Rear seat entertainment system
F34\Service function	Body	Headunit
F34\Service function	Body	All-round vision camera
F34\Service function	Body	Additional functions
F34\Service function	Body	Automatic tailgate actuation
F32_F33\Service function	Maintenance	CBS reset
F32_F33\Service function	Maintenance	CBS correction, vehicle data
F32_F33\Service function	Maintenance	Transport mode/pre-delivery check
F32_F33\Service function	Maintenance	Oil Reset
F32_F33\Service function	Drive	CAS KL 15 activation/deactivation
F32_F33\Service function	Drive	FEM_KL 15 activation/deactivation
F32_F33\Service function	Drive	Motor Electronics
F32_F33\Service function	Drive	Engine start
F32_F33\Service function	Drive	Transmission control
F32_F33\Service function	Drive	Transfer box transmission control unit
F32_F33\Service function	Drive	Electric fuel pump
F32_F33\Service function	Chassis	Steering-angle sensor
F32_F33\Service function	Chassis	Electric steering-column adjustment
F32_F33\Service function	Chassis	Electromechanical power steering
F32_F33\Service function	Chassis	Integrated chassis management
F32_F33\Service function	Chassis	Parking brake
F32_F33\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control

F32_F33\Service function	Chassis	Vertical dynamics management
F32_F33\Service function	Chassis	Dynamic Drive
F32_F33\Service function	Chassis	Electronic ride height control
F32_F33\Service function	Chassis	Active front steering
F32_F33\Service function	Chassis	Rear-axle slip-angle control
F32_F33\Service function	Body	Heating and air conditioning functions
F32_F33\Service function	Body	Locking and security functions
F32_F33\Service function	Body	Audio
F32_F33\Service function	Body	Safety functions
F32_F33\Service function	Body	Lights
F32_F33\Service function	Body	Power supply(Battery)
F32_F33\Service function	Body	Solar rain/light fogging sensor
F32_F33\Service function	Body	Seats
F32_F33\Service function	Body	Tyre pressure control
F32_F33\Service function	Body	MOST ring
F32_F33\Service function	Body	Central Gateway Module
F32_F33\Service function	Body	Rear seat entertainment system
F32_F33\Service function	Body	Headunit
F32_F33\Service function	Body	All-round vision camera
F32_F33\Service function	Body	Additional functions
F32_F33\Service function	Body	Automatic tailgate actuation
F06\Service function	Maintenance	CBS reset
F06\Service function	Maintenance	CBS correction, vehicle data
F06\Service function	Maintenance	Transport mode/pre-delivery check
F06\Service function	Maintenance	Oil Reset
F06\Service function	Drive	CAS KL 15 activation/deactivation
F06\Service function	Drive	FEM_KL 15 activation/deactivation
F06\Service function	Drive	Motor Electronics
F06\Service function	Drive	Engine start
F06\Service function	Drive	Transmission control
F06\Service function	Drive	Transfer box transmission control unit
F06\Service function	Drive	Electric fuel pump
F06\Service function	Chassis	Steering-angle sensor
F06\Service function	Chassis	Electric steering-column adjustment
F06\Service function	Chassis	Electromechanical power steering
F06\Service function	Chassis	Integrated chassis management
F06\Service function	Chassis	Parking brake
F06\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
F06\Service function	Chassis	Vertical dynamics management

F06\Service function	Chassis	Dynamic Drive
F06\Service function	Chassis	Electronic ride height control
F06\Service function	Chassis	Active front steering
F06\Service function	Chassis	Rear-axle slip-angle control
F06\Service function	Body	Heating and air conditioning functions
F06\Service function	Body	Locking and security functions
F06\Service function	Body	Audio
F06\Service function	Body	Safety functions
F06\Service function	Body	Lights
F06\Service function	Body	Power supply(Battery)
F06\Service function	Body	Solar rain/light fogging sensor
F06\Service function	Body	Seats
F06\Service function	Body	Tyre pressure control
F06\Service function	Body	MOST ring
F06\Service function	Body	Central Gateway Module
F06\Service function	Body	Rear seat entertainment system
F06\Service function	Body	Headunit
F06\Service function	Body	All-round vision camera
F06\Service function	Body	Additional functions
F06\Service function	Body	Automatic tailgate actuation
X5_F15\Service function	Maintenance	CBS reset
X5_F15\Service function	Maintenance	CBS correction, vehicle data
X5_F15\Service function	Maintenance	Transport mode/pre-delivery check
X5_F15\Service function	Maintenance	Oil Reset
X5_F15\Service function	Drive	CAS KL 15 activation/deactivation
X5_F15\Service function	Drive	FEM_KL 15 activation/deactivation
X5_F15\Service function	Drive	Motor Electronics
X5_F15\Service function	Drive	Engine start
X5_F15\Service function	Drive	Transmission control
X5_F15\Service function	Drive	Transfer box transmission control unit
X5_F15\Service function	Drive	Electric fuel pump
X5_F15\Service function	Chassis	Steering-angle sensor
X5_F15\Service function	Chassis	Electric steering-column adjustment
X5_F15\Service function	Chassis	Electromechanical power steering
X5_F15\Service function	Chassis	Integrated chassis management
X5_F15\Service function	Chassis	Parking brake
X5_F15\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
X5_F15\Service function	Chassis	Vertical dynamics management
X5_F15\Service function	Chassis	Dynamic Drive

X5_F15\Service function	Chassis	Electronic ride height control
X5_F15\Service function	Chassis	Active front steering
X5_F15\Service function	Chassis	Rear-axle slip-angle control
X5_F15\Service function	Body	Heating and air conditioning functions
X5_F15\Service function	Body	Locking and security functions
X5_F15\Service function	Body	Audio
X5_F15\Service function	Body	Safety functions
X5_F15\Service function	Body	Lights
X5_F15\Service function	Body	Power supply(Battery)
X5_F15\Service function	Body	Solar rain/light fogging sensor
X5_F15\Service function	Body	Seats
X5_F15\Service function	Body	Tyre pressure control
X5_F15\Service function	Body	MOST ring
X5_F15\Service function	Body	Central Gateway Module
X5_F15\Service function	Body	Rear seat entertainment system
X5_F15\Service function	Body	Headunit
X5_F15\Service function	Body	All-round vision camera
X5_F15\Service function	Body	Additional functions
X5_F15\Service function	Body	Automatic tailgate actuation
I01_I12\Service function	Maintenance	CBS reset
I01_I12\Service function	Maintenance	CBS correction, vehicle data
I01_I12\Service function	Maintenance	Transport mode/pre-delivery check
I01_I12\Service function	Maintenance	Oil Reset
I01_I12\Service function	Drive	CAS KL 15 activation/deactivation
I01_I12\Service function	Drive	FEM_KL 15 activation/deactivation
I01_I12\Service function	Drive	Motor Electronics
I01_I12\Service function	Drive	Engine start
I01_I12\Service function	Drive	Transmission control
I01_I12\Service function	Drive	Transfer box transmission control unit
I01_I12\Service function	Drive	Electric fuel pump
I01_I12\Service function	Chassis	Steering-angle sensor
I01_I12\Service function	Chassis	Electric steering-column adjustment
I01_I12\Service function	Chassis	Electromechanical power steering
I01_I12\Service function	Chassis	Integrated chassis management
I01_I12\Service function	Chassis	Parking brake
I01_I12\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
I01_I12\Service function	Chassis	Vertical dynamics management
I01_I12\Service function	Chassis	Dynamic Drive
I01_I12\Service function	Chassis	Electronic ride height control

I01_I12\Service function	Chassis	Active front steering
I01_I12\Service function	Chassis	Rear-axle slip-angle control
I01_I12\Service function	Body	Heating and air conditioning functions
I01_I12\Service function	Body	Locking and security functions
I01_I12\Service function	Body	Audio
I01_I12\Service function	Body	Safety functions
I01_I12\Service function	Body	Lights
I01_I12\Service function	Body	Power supply(Battery)
I01_I12\Service function	Body	Solar rain/light fogging sensor
I01_I12\Service function	Body	Seats
I01_I12\Service function	Body	Tyre pressure control
I01_I12\Service function	Body	MOST ring
I01_I12\Service function	Body	Central Gateway Module
I01_I12\Service function	Body	Rear seat entertainment system
I01_I12\Service function	Body	Headunit
I01_I12\Service function	Body	All-round vision camera
I01_I12\Service function	Body	Additional functions
I01_I12\Service function	Body	Automatic tailgate actuation
X4_F26\Service function	Maintenance	CBS reset
X4_F26\Service function	Maintenance	CBS correction, vehicle data
X4_F26\Service function	Maintenance	Transport mode/pre-delivery check
X4_F26\Service function	Maintenance	Oil Reset
X4_F26\Service function	Drive	CAS KL 15 activation/deactivation
X4_F26\Service function	Drive	FEM_KL 15 activation/deactivation
X4_F26\Service function	Drive	Motor Electronics
X4_F26\Service function	Drive	Engine start
X4_F26\Service function	Drive	Transmission control
X4_F26\Service function	Drive	Transfer box transmission control unit
X4_F26\Service function	Drive	Electric fuel pump
X4_F26\Service function	Chassis	Steering-angle sensor
X4_F26\Service function	Chassis	Electric steering-column adjustment
X4_F26\Service function	Chassis	Electromechanical power steering
X4_F26\Service function	Chassis	Integrated chassis management
X4_F26\Service function	Chassis	Parking brake
X4_F26\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
X4_F26\Service function	Chassis	Vertical dynamics management
X4_F26\Service function	Chassis	Dynamic Drive
X4_F26\Service function	Chassis	Electronic ride height control
X4_F26\Service function	Chassis	Active front steering

X4_F26\Service function	Chassis	Rear-axle slip-angle control
X4_F26\Service function	Body	Heating and air conditioning functions
X4_F26\Service function	Body	Locking and security functions
X4_F26\Service function	Body	Audio
X4_F26\Service function	Body	Safety functions
X4_F26\Service function	Body	Lights
X4_F26\Service function	Body	Power supply(Battery)
X4_F26\Service function	Body	Solar rain/light fogging sensor
X4_F26\Service function	Body	Seats
X4_F26\Service function	Body	Tyre pressure control
X4_F26\Service function	Body	MOST ring
X4_F26\Service function	Body	Central Gateway Module
X4_F26\Service function	Body	Rear seat entertainment system
X4_F26\Service function	Body	Headunit
X4_F26\Service function	Body	All-round vision camera
X4_F26\Service function	Body	Additional functions
X4_F26\Service function	Body	Automatic tailgate actuation
F36\Service function	Maintenance	CBS reset
F36\Service function	Maintenance	CBS correction, vehicle data
F36\Service function	Maintenance	Transport mode/pre-delivery check
F36\Service function	Maintenance	Oil Reset
F36\Service function	Drive	CAS KL 15 activation/deactivation
F36\Service function	Drive	FEM_KL 15 activation/deactivation
F36\Service function	Drive	Motor Electronics
F36\Service function	Drive	Engine start
F36\Service function	Drive	Transmission control
F36\Service function	Drive	Transfer box transmission control unit
F36\Service function	Drive	Electric fuel pump
F36\Service function	Chassis	Steering-angle sensor
F36\Service function	Chassis	Electric steering-column adjustment
F36\Service function	Chassis	Electromechanical power steering
F36\Service function	Chassis	Integrated chassis management
F36\Service function	Chassis	Parking brake
F36\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
F36\Service function	Chassis	Vertical dynamics management
F36\Service function	Chassis	Dynamic Drive
F36\Service function	Chassis	Electronic ride height control
F36\Service function	Chassis	Active front steering
F36\Service function	Chassis	Rear-axle slip-angle control

F36\Service function	Body	Heating and air conditioning functions
F36\Service function	Body	Locking and security functions
F36\Service function	Body	Audio
F36\Service function	Body	Safety functions
F36\Service function	Body	Lights
F36\Service function	Body	Power supply(Battery)
F36\Service function	Body	Solar rain/light fogging sensor
F36\Service function	Body	Seats
F36\Service function	Body	Tyre pressure control
F36\Service function	Body	MOST ring
F36\Service function	Body	Central Gateway Module
F36\Service function	Body	Rear seat entertainment system
F36\Service function	Body	Headunit
F36\Service function	Body	All-round vision camera
F36\Service function	Body	Additional functions
F36\Service function	Body	Automatic tailgate actuation
F21\Service function	Maintenance	CBS reset
F21\Service function	Maintenance	CBS correction, vehicle data
F21\Service function	Maintenance	Transport mode/pre-delivery check
F21\Service function	Maintenance	Oil Reset
F21\Service function	Drive	CAS_KL 15 activation/deactivation
F21\Service function	Drive	FEM_KL 15 activation/deactivation
F21\Service function	Drive	Motor Electronics
F21\Service function	Drive	Engine start
F21\Service function	Drive	Transmission control
F21\Service function	Drive	Transfer box transmission control unit
F21\Service function	Drive	Electric fuel pump
F21\Service function	Chassis	Steering-angle sensor
F21\Service function	Chassis	Electric steering-column adjustment
F21\Service function	Chassis	Electromechanical power steering
F21\Service function	Chassis	Integrated chassis management
F21\Service function	Chassis	Parking brake
F21\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
F21\Service function	Chassis	Vertical dynamics management
F21\Service function	Chassis	Dynamic Drive
F21\Service function	Chassis	Electronic ride height control
F21\Service function	Chassis	Active front steering
F21\Service function	Chassis	Rear-axle slip-angle control
F21\Service function	Body	Heating and air conditioning functions

F21\Service function	Body	Locking and security functions
F21\Service function	Body	Audio
F21\Service function	Body	Safety functions
F21\Service function	Body	Lights
F21\Service function	Body	Power supply(Battery)
F21\Service function	Body	Solar rain/light fogging sensor
F21\Service function	Body	Seats
F21\Service function	Body	Tyre pressure control
F21\Service function	Body	MOST ring
F21\Service function	Body	Central Gateway Module
F21\Service function	Body	Rear seat entertainment system
F21\Service function	Body	Headunit
F21\Service function	Body	All-round vision camera
F21\Service function	Body	Additional functions
F21\Service function	Body	Automatic tailgate actuation
F23\Service function	Maintenance	CBS reset
F23\Service function	Maintenance	CBS correction, vehicle data
F23\Service function	Maintenance	Transport mode/pre-delivery check
F23\Service function	Maintenance	Oil Reset
F23\Service function	Drive	CAS KL 15 activation/deactivation
F23\Service function	Drive	FEM_KL 15 activation/deactivation
F23\Service function	Drive	Motor Electronics
F23\Service function	Drive	Engine start
F23\Service function	Drive	Transmission control
F23\Service function	Drive	Transfer box transmission control unit
F23\Service function	Drive	Electric fuel pump
F23\Service function	Chassis	Steering-angle sensor
F23\Service function	Chassis	Electric steering-column adjustment
F23\Service function	Chassis	Electromechanical power steering
F23\Service function	Chassis	Integrated chassis management
F23\Service function	Chassis	Parking brake
F23\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
F23\Service function	Chassis	Vertical dynamics management
F23\Service function	Chassis	Dynamic Drive
F23\Service function	Chassis	Electronic ride height control
F23\Service function	Chassis	Active front steering
F23\Service function	Chassis	Rear-axle slip-angle control
F23\Service function	Body	Heating and air conditioning functions
F23\Service function	Body	Locking and security functions

F23\Service function	Body	Audio
F23\Service function	Body	Safety functions
F23\Service function	Body	Lights
F23\Service function	Body	Power supply(Battery)
F23\Service function	Body	Solar rain/light fogging sensor
F23\Service function	Body	Seats
F23\Service function	Body	Tyre pressure control
F23\Service function	Body	MOST ring
F23\Service function	Body	Central Gateway Module
F23\Service function	Body	Rear seat entertainment system
F23\Service function	Body	Headunit
F23\Service function	Body	All-round vision camera
F23\Service function	Body	Additional functions
F23\Service function	Body	Automatic tailgate actuation
F45\Service function	Maintenance	CBS reset
F45\Service function	Maintenance	CBS correction, vehicle data
F45\Service function	Maintenance	Transport mode/pre-delivery check
F45\Service function	Maintenance	Oil Reset
F45\Service function	Drive	CAS KL 15 activation/deactivation
F45\Service function	Drive	FEM_KL 15 activation/deactivation
F45\Service function	Drive	Motor Electronics
F45\Service function	Drive	Engine start
F45\Service function	Drive	Transmission control
F45\Service function	Drive	Transfer box transmission control unit
F45\Service function	Drive	Electric fuel pump
F45\Service function	Chassis	Steering-angle sensor
F45\Service function	Chassis	Electric steering-column adjustment
F45\Service function	Chassis	Electromechanical power steering
F45\Service function	Chassis	Integrated chassis management
F45\Service function	Chassis	Parking brake
F45\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
F45\Service function	Chassis	Vertical dynamics management
F45\Service function	Chassis	Dynamic Drive
F45\Service function	Chassis	Electronic ride height control
F45\Service function	Chassis	Active front steering
F45\Service function	Chassis	Rear-axle slip-angle control
F45\Service function	Body	Heating and air conditioning functions
F45\Service function	Body	Locking and security functions
F45\Service function	Body	Audio

F45\Service function	Body	Safety functions
F45\Service function	Body	Lights
F45\Service function	Body	Power supply(Battery)
F45\Service function	Body	Solar rain/light fogging sensor
F45\Service function	Body	Seats
F45\Service function	Body	Tyre pressure control
F45\Service function	Body	MOST ring
F45\Service function	Body	Central Gateway Module
F45\Service function	Body	Rear seat entertainment system
F45\Service function	Body	Headunit
F45\Service function	Body	All-round vision camera
F45\Service function	Body	Additional functions
F45\Service function	Body	Automatic tailgate actuation
F80\Service function	Maintenance	CBS reset
F80\Service function	Maintenance	CBS correction, vehicle data
F80\Service function	Maintenance	Transport mode/pre-delivery check
F80\Service function	Maintenance	Oil Reset
F80\Service function	Drive	CAS KL 15 activation/deactivation
F80\Service function	Drive	FEM_KL 15 activation/deactivation
F80\Service function	Drive	Motor Electronics
F80\Service function	Drive	Engine start
F80\Service function	Drive	Transmission control
F80\Service function	Drive	Transfer box transmission control unit
F80\Service function	Drive	Electric fuel pump
F80\Service function	Chassis	Steering-angle sensor
F80\Service function	Chassis	Electric steering-column adjustment
F80\Service function	Chassis	Electromechanical power steering
F80\Service function	Chassis	Integrated chassis management
F80\Service function	Chassis	Parking brake
F80\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
F80\Service function	Chassis	Vertical dynamics management
F80\Service function	Chassis	Dynamic Drive
F80\Service function	Chassis	Electronic ride height control
F80\Service function	Chassis	Active front steering
F80\Service function	Chassis	Rear-axle slip-angle control
F80\Service function	Body	Heating and air conditioning functions
F80\Service function	Body	Locking and security functions
F80\Service function	Body	Audio
F80\Service function	Body	Safety functions

F80\Service function	Body	Lights
F80\Service function	Body	Power supply(Battery)
F80\Service function	Body	Solar rain/light fogging sensor
F80\Service function	Body	Seats
F80\Service function	Body	Tyre pressure control
F80\Service function	Body	MOST ring
F80\Service function	Body	Central Gateway Module
F80\Service function	Body	Rear seat entertainment system
F80\Service function	Body	Headunit
F80\Service function	Body	All-round vision camera
F80\Service function	Body	Additional functions
F80\Service function	Body	Automatic tailgate actuation
F82_F83\Service function	Maintenance	CBS reset
F82_F83\Service function	Maintenance	CBS correction, vehicle data
F82_F83\Service function	Maintenance	Transport mode/pre-delivery check
F82_F83\Service function	Maintenance	Oil Reset
F82_F83\Service function	Drive	CAS KL 15 activation/deactivation
F82_F83\Service function	Drive	FEM_KL 15 activation/deactivation
F82_F83\Service function	Drive	Motor Electronics
F82_F83\Service function	Drive	Engine start
F82_F83\Service function	Drive	Transmission control
F82_F83\Service function	Drive	Transfer box transmission control unit
F82_F83\Service function	Drive	Electric fuel pump
F82_F83\Service function	Chassis	Steering-angle sensor
F82_F83\Service function	Chassis	Electric steering-column adjustment
F82_F83\Service function	Chassis	Electromechanical power steering
F82_F83\Service function	Chassis	Integrated chassis management
F82_F83\Service function	Chassis	Parking brake
F82_F83\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
F82_F83\Service function	Chassis	Vertical dynamics management
F82_F83\Service function	Chassis	Dynamic Drive
F82_F83\Service function	Chassis	Electronic ride height control
F82_F83\Service function	Chassis	Active front steering
F82_F83\Service function	Chassis	Rear-axle slip-angle control
F82_F83\Service function	Body	Heating and air conditioning functions
F82_F83\Service function	Body	Locking and security functions
F82_F83\Service function	Body	Audio
F82_F83\Service function	Body	Safety functions
F82_F83\Service function	Body	Lights

F82_F83\Service function	Body	Power supply(Battery)
F82_F83\Service function	Body	Solar rain/light fogging sensor
F82_F83\Service function	Body	Seats
F82_F83\Service function	Body	Tyre pressure control
F82_F83\Service function	Body	MOST ring
F82_F83\Service function	Body	Central Gateway Module
F82_F83\Service function	Body	Rear seat entertainment system
F82_F83\Service function	Body	Headunit
F82_F83\Service function	Body	All-round vision camera
F82_F83\Service function	Body	Additional functions
F82_F83\Service function	Body	Automatic tailgate actuation
X5_F85\Service function	Maintenance	CBS reset
X5_F85\Service function	Maintenance	CBS correction, vehicle data
X5_F85\Service function	Maintenance	Transport mode/pre-delivery check
X5_F85\Service function	Maintenance	Oil Reset
X5_F85\Service function	Drive	CAS KL 15 activation/deactivation
X5_F85\Service function	Drive	FEM_KL 15 activation/deactivation
X5_F85\Service function	Drive	Motor Electronics
X5_F85\Service function	Drive	Engine start
X5_F85\Service function	Drive	Transmission control
X5_F85\Service function	Drive	Transfer box transmission control unit
X5_F85\Service function	Drive	Electric fuel pump
X5_F85\Service function	Chassis	Steering-angle sensor
X5_F85\Service function	Chassis	Electric steering-column adjustment
X5_F85\Service function	Chassis	Electromechanical power steering
X5_F85\Service function	Chassis	Integrated chassis management
X5_F85\Service function	Chassis	Parking brake
X5_F85\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
X5_F85\Service function	Chassis	Vertical dynamics management
X5_F85\Service function	Chassis	Dynamic Drive
X5_F85\Service function	Chassis	Electronic ride height control
X5_F85\Service function	Chassis	Active front steering
X5_F85\Service function	Chassis	Rear-axle slip-angle control
X5_F85\Service function	Body	Heating and air conditioning functions
X5_F85\Service function	Body	Locking and security functions
X5_F85\Service function	Body	Audio
X5_F85\Service function	Body	Safety functions
X5_F85\Service function	Body	Lights
X5_F85\Service function	Body	Power supply(Battery)

X5_F85\Service function	Body	Solar rain/light fogging sensor
X5_F85\Service function	Body	Seats
X5_F85\Service function	Body	Tyre pressure control
X5_F85\Service function	Body	MOST ring
X5_F85\Service function	Body	Central Gateway Module
X5_F85\Service function	Body	Rear seat entertainment system
X5_F85\Service function	Body	Headunit
X5_F85\Service function	Body	All-round vision camera
X5_F85\Service function	Body	Additional functions
X5_F85\Service function	Body	Automatic tailgate actuation
X6_F16\Service function	Maintenance	CBS reset
X6_F16\Service function	Maintenance	CBS correction, vehicle data
X6_F16\Service function	Maintenance	Transport mode/pre-delivery check
X6_F16\Service function	Maintenance	Oil Reset
X6_F16\Service function	Drive	CAS KL 15 activation/deactivation
X6_F16\Service function	Drive	FEM_KL 15 activation/deactivation
X6_F16\Service function	Drive	Motor Electronics
X6_F16\Service function	Drive	Engine start
X6_F16\Service function	Drive	Transmission control
X6_F16\Service function	Drive	Transfer box transmission control unit
X6_F16\Service function	Drive	Electric fuel pump
X6_F16\Service function	Chassis	Steering-angle sensor
X6_F16\Service function	Chassis	Electric steering-column adjustment
X6_F16\Service function	Chassis	Electromechanical power steering
X6_F16\Service function	Chassis	Integrated chassis management
X6_F16\Service function	Chassis	Parking brake
X6_F16\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
X6_F16\Service function	Chassis	Vertical dynamics management
X6_F16\Service function	Chassis	Dynamic Drive
X6_F16\Service function	Chassis	Electronic ride height control
X6_F16\Service function	Chassis	Active front steering
X6_F16\Service function	Chassis	Rear-axle slip-angle control
X6_F16\Service function	Body	Heating and air conditioning functions
X6_F16\Service function	Body	Locking and security functions
X6_F16\Service function	Body	Audio
X6_F16\Service function	Body	Safety functions
X6_F16\Service function	Body	Lights
X6_F16\Service function	Body	Power supply(Battery)
X6_F16\Service function	Body	Solar rain/light fogging sensor

X6_F16\Service function	Body	Seats
X6_F16\Service function	Body	Tyre pressure control
X6_F16\Service function	Body	MOST ring
X6_F16\Service function	Body	Central Gateway Module
X6_F16\Service function	Body	Rear seat entertainment system
X6_F16\Service function	Body	Headunit
X6_F16\Service function	Body	All-round vision camera
X6_F16\Service function	Body	Additional functions
X6_F16\Service function	Body	Automatic tailgate actuation
X6_F86\Service function	Maintenance	CBS reset
X6_F86\Service function	Maintenance	CBS correction, vehicle data
X6_F86\Service function	Maintenance	Transport mode/pre-delivery check
X6_F86\Service function	Maintenance	Oil Reset
X6_F86\Service function	Drive	CAS KL 15 activation/deactivation
X6_F86\Service function	Drive	FEM_KL 15 activation/deactivation
X6_F86\Service function	Drive	Motor Electronics
X6_F86\Service function	Drive	Engine start
X6_F86\Service function	Drive	Transmission control
X6_F86\Service function	Drive	Transfer box transmission control unit
X6_F86\Service function	Drive	Electric fuel pump
X6_F86\Service function	Chassis	Steering-angle sensor
X6_F86\Service function	Chassis	Electric steering-column adjustment
X6_F86\Service function	Chassis	Electromechanical power steering
X6_F86\Service function	Chassis	Integrated chassis management
X6_F86\Service function	Chassis	Parking brake
X6_F86\Service function	Chassis	ABS/ASC/DSC Dynamic Stability Control
X6_F86\Service function	Chassis	Vertical dynamics management
X6_F86\Service function	Chassis	Dynamic Drive
X6_F86\Service function	Chassis	Electronic ride height control
X6_F86\Service function	Chassis	Active front steering
X6_F86\Service function	Chassis	Rear-axle slip-angle control
X6_F86\Service function	Body	Heating and air conditioning functions
X6_F86\Service function	Body	Locking and security functions
X6_F86\Service function	Body	Audio
X6_F86\Service function	Body	Safety functions
X6_F86\Service function	Body	Lights
X6_F86\Service function	Body	Power supply(Battery)
X6_F86\Service function	Body	Solar rain/light fogging sensor
X6_F86\Service function	Body	Seats

X6_F86\	Service function	Body	Tyre pressure control
X6_F86\	Service function	Body	MOST ring
X6_F86\	Service function	Body	Central Gateway Module
X6_F86\	Service function	Body	Rear seat entertainment system
X6_F86\	Service function	Body	Headunit
X6_F86\	Service function	Body	All-round vision camera
X6_F86\	Service function	Body	Additional functions
X6_F86\	Service function	Body	Automatic tailgate actuation