

# CITROEN

## Table of Contents

1	Vehicle models covered.....	1
2	Vehicle systems covered.....	1
3	Vehicle Special Function covered.....	2

### 1 Vehicle models covered

Model	Year
Berlingo	Up to 2013
Berlingo 2	Up to 2013
Berlingo B9	Up to 2013
C-Elysee	Up to 2013
C2	Up to 2013
C2 China	Up to 2013
C3	Up to 2013
C3 06	Up to 2013
C3 PLURIEL	Up to 2013
C3R	Up to 2013
C4	Up to 2013
C4 Picasso	Up to 2013
C4 SEDAN	Up to 2013
C5	Up to 2013
Citroen C3	Up to 2013
Citroen C5	Up to 2013
Citroen C5 05	Up to 2013
ELYSEE	Up to 2013
SAXO	Up to 2013
XANIIA	Up to 2013
XSARA	Up to 2013
XSARA PICASSO	Up to 2013
XSARA2	Up to 2013
ZX	Up to 2013

### 2 Vehicle systems covered

System	DTC	Data List	Active Test	Special Func
A/C	X	X		
ABS	X	X	X	X
ABS + TRACT. CONTROL	X	X	X	X
AC	X	X	X	
AIRBAG	X	X		

System	DTC	Data List	Active Test	Special Func
ALARM SYSTEM	X			
AT	X	X	X	
AUX WARM AIR	X	X		
Air conditioning	X	X		
Airbag	X	X	X	X
Alarm	X	X		
Anti-lock brake system	X	X		
Auto gearbox	X	X		
Automatic gear-box	X	X		
BSI	X	X		X
CALL OF GENERATION 1	X	X		
CD PLAYER	X	X		
CONTROL PANEL	X	X		
Control panel	X	X		
DRIVE SCHOOL MODULE		X		
Diesel Engine	X	X	X	X
Display modules	X	X		
ENGINE MANAGEMENT	X	X	X	X
Electric power steering ECU	X	X		
Engine	X	X	X	X
GAS ADD		X		
GPRS	X			
ICM	X	X		
IMMO	X	X		
Instrument panel	X	X	X	
MONITOR	X			
Parking assistance	X	X	X	
Petrol Engine	X	X	X	X
RADIO	X			
RE REMOTE		X		
Radio	X	X		
Radio post-equipment	X	X		
Rain sensor/Brightness	X	X		
SERVICE LIGHT RESET				X
SRS	X	X		X
STEERING MODULE UNDER STEERING WHEEL		X		
Steering column module	X	X	X	
Switch module at the steering wheel	X	X		

### 3 Vehicle Special Function covered

System	Special Function
ABS	Bleeding
ABS	Brake air bleed
ABS	Calibration of the Gyrometer/accelerometer sensor or Steering wheel angle sensor
ABS	Configuration for ABS
ABS	Front LH Wheel bleeder
ABS	Front RH Wheel bleeder

System	Special Function
ABS	Rear LH Wheel bleeder
ABS	Rear RH Wheel bleeder
ABS	Steering angle calibration
ABS + TRACT. CONTROL	Front LH Wheel bleeder
ABS + TRACT. CONTROL	Front RH Wheel bleeder
ABS + TRACT. CONTROL	Rear LH Wheel bleeder
ABS + TRACT. CONTROL	Rear RH Wheel bleeder
ABS + TRACT. CONTROL	Steering angle calibration
Airbag	Configuration
Airbag	Configuration (Airbag)
Airbag	UnLocking (Airbag)
BSI	Check of the coded engine immobiliser code in the built-in systems interface
BSI	Programming of keys
BSI	Reset maintenance indicator
BSI	Reset maintenance mileage
BSI	Reset maintenance mileage and number
BSI	Reset maintenance number done
BSI	Resetting to zero of the service mileage
Diesel Engine	EGR SV learning
Diesel Engine	EGR throttle initial. and intake air heat.
Diesel Engine	EGR throttle learning
Diesel Engine	Initializ.FAP filter additive quantity
Diesel Engine	Initialization turbo limit
Diesel Engine	Particle filter regeneration
Diesel Engine	Particle filter replacement
Diesel Engine	Replace metering pump
Diesel Engine	Replace or fill additive tank
Diesel Engine	Tank filling
Diesel Engine	Change of tank and pump
Diesel Engine	Filling of the additive reservoir
Diesel Engine	Injector replacement
Diesel Engine	Particulate filter regeneration
Diesel Engine	Replacement of the particle emission filter
ENGINE MANAGEMENT	Timing correction
Engine	EGR SV learning
Engine	EGR throttle learning
Engine	Initializ.FAP filter additive quantity
Engine	Initialization turbo limit
Engine	Particle filter regeneration
Engine	Particle filter replacement
Engine	Replace metering pump
Engine	Replace or fill additive tank
Engine	Self-adaptation reset
Engine	Tank filling
Engine	Timing correction
Instrument panel	Configuration (Instrument panel)
Petrol Engine	Initializing the auto-adaptive
Petrol Engine	Self-adaptation reset
SERVICE LIGHT RESET	Service Reset
SRS	Configuration

System	Special Function
SRS 2	Configuration