

# JAGUAR V13.0

## Table of Contents

1	Vehicle models covered.....	1
2	Vehicle systems covered.....	1
3	Vehicle special function covered.....	3

## 1 Vehicle models covered

Model	Year
Jaguar F-type X152	2014 - 2016
Jaguar XE X760	2016
Jaguar XF X250	2008 - 2013
New XK X150	2006 - 2010
S-Type X200	1999 - 2001
S-Type X202	2002 - 2006
X-Type X400	2001 - 2004
XJ range X350	2002 - 2008
XJ range X351	2010 - 2016
XJ8 X300	2000 - 2001
XK8 X100	2000 - 2003

## 2 Vehicle systems covered

System	DTC	Data List	Special Func
ABS control module	X	X	X
Accessory protocol interface module	X	X	
Adaptive damping control module	X	X	X
Adaptive damping ride control	X	X	
Adaptive damping system	X	X	
Adaptive speed control booster control module	X	X	
Adaptive speed control control module	X	X	
Adaptive speed control, control module	X	X	
Air suspension module	X	X	
All terrain control module	X	X	
Amplifier	X	X	
Anti-lock braking system	X	X	
Audio amplifier module	X	X	X
Audio front control module	X	X	X
Audio head unit - Low line	X	X	
Audio unit	X	X	
Auxiliary heater control module	X	X	
Auxiliary junction box (body control module B)	X	X	X
Body control module	X	X	X
Body processor module	X	X	

System	DTC	Data List	Special Func
Cellular telephone control module	X	X	
Cellular telephone control module (bluetooth telephone module)	X	X	
Central junction box (body control module)	X	X	X
Chassis control module	X	X	X
Climate control module	X	X	
Column/mirror memory control module	X	X	
Connect and view module	X	X	
Deployable towbar control module	X	X	
Digital audio broadcast module	X	X	
Digital audio control module C	X	X	
Driver side rear door module	X	X	
Driver's (side) rear door module	X	X	
Driver's climate seat module	X	X	
Driver's door module	X	X	
Driver's head restraint module	X	X	
Driver's seat module	X	X	X
Electronic parking brake	X	X	X
Engine control module	X	X	
Folding top control module	X	X	
Folding top control module B	X	X	
Front control/display interface module (high level display front)	X	X	X
Front controls interface module "B" (front audio control panel)	X	X	
Front controls interface module (heating ventilation air conditioning controls)	X	X	
Fuel fired heater module	X	X	
Gateway module	X	X	X
Gear shift module	X	X	
General electronics control module	X	X	
Head up display	X	X	
Head-up display cooling fan module	X	X	
Headlamp control module	X	X	X
Headlamp leveling system	X	X	
Heating ventilation and air conditioning control module	X	X	X
Image processing control module A	X	X	
Image processing module "B"	X	X	
Impact classification system	X	X	X
Infotainment control module	X	X	
Infotainment master controller	X	X	
Infotainment slave controller	X	X	
Instrument cluster control module	X	X	X
Instrument pack	X	X	
Integrated control panel	X	X	
Intrusion sensor module	X	X	
Key transponder module	X	X	
Keyless vehicle module	X	X	X
Left lighting control module	X	X	
Message center control module	X	X	
Navigation control module	X	X	

System	DTC	Data List	Special Func
Parking aid control module	X	X	
Parking assist control module	X	X	
Parking brake control module	X	X	X
Passenger side rear door module	X	X	
Passenger's (side) rear door module	X	X	
Passenger's door module	X	X	X
Passenger's head restraint module	X	X	
Passenger's seat module	X	X	X
Power steering control module	X	X	
Powertrain control module	X	X	X
Rear Heating ventilation and air conditioning control module	X	X	
Rear climate control module	X	X	
Rear climate seat module	X	X	
Rear differential control module	X	X	X
Rear electronic control module	X	X	
Rear entertainment control module	X	X	
Rear gate / trunk module	X	X	X
Rear left - Seat module	X	X	X
Rear right - Seat module	X	X	X
Rear seat control module	X	X	
Restraints control module	X	X	X
Restraints occupant classification system module	X	X	X
Ride level control module	X	X	
Right lighting control module	X	X	
Safety belt pretensioner control module A - drivers side	X	X	X
Safety belt pretensioner control module B - passengers side	X	X	X
Satellite audio unit module	X	X	
Security locking module	X	X	
Security system control module	X	X	
Side object detection control module - Left	X	X	X
Side object detection control module - Right	X	X	X
Speed control module	X	X	X
Steering angle sensor module	X	X	
Steering column lock module	X	X	
Telematic control unit module	X	X	
Television module	X	X	X
Throttle control unit	X	X	
Tire pressure monitor module	X	X	X
Transfer case control module	X	X	
Transmission control module	X	X	X
Vehicle dynamics control module	X	X	
Vehicle emergency control module	X	X	
Vehicle immobilizer control module	X	X	
Voice activation control module	X	X	

### 3 Vehicle special function covered

System	Special Func
--------	--------------

System	Special Func
ABS control module	Brake bleed
ABS control module	Lateral accelerometer calibration
ABS control module	Pressure sensor calibration
ABS control module	Steering angle sensor calibration
ABS control module	Yaw rate sensor calibration
Adaptive damping control module	Build mode
Adaptive damping control module	Calibration learn
Audio amplifier module	Calibrate dynamic volume control
Audio front control module	DVD region counter reset
Audio front control module	Navigation reset
Auxiliary junction box (body control module B)	Battery replacement
Auxiliary junction box (body control module B)	Fuel pump supply - Enable/disable
Auxiliary junction box (body control module B)	Transportation mode
Body control module	Battery replacement
Body control module	Fuel pump supply - Enable/disable
Body control module	Steering column calibration
Body control module	Sunroof calibration
Body control module	Tire pressure monitor confirmation application
Body control module	Tire pressure sensor replacement
Body control module	Transportation mode
Body control module	Valet mode reset
Central junction box (body control module)	Alarm trigger history
Chassis control module	Air suspension deflation
Chassis control module	Air suspension inflation
Chassis control module	Height calibration
Chassis control module	Set/un-set air suspension geometry set-up
Chassis control module	Set/un-set air suspension manufacturing/freeze mode
Chassis control module	Set/un-set air suspension tight tolerance mode (headlamp setting)
Driver's seat module	Driver's seat calibration
Electronic parking brake	Parking brake release to service position
Front control/display interface module (high level display front)	Mirror personalisation features
Gateway module	Battery replacement
Gateway module	Quiescent current control module internal check
Gateway module	Test dual battery system
Gateway module	Verify secondary battery charging
Headlamp control module	Headlamp and axle sensor calibration
Headlamp control module	Headlamp control module system calibration
Heating ventilation and air conditioning control module	Driver's side - Door glass window calibration
Heating ventilation and air conditioning control module	Evaporator and heater test
Heating ventilation and air conditioning control module	Stepper motor initialization
Heating ventilation and air conditioning control module	Vent actuators test
Impact classification system	Pedestrian impact crash status reset
Instrument cluster control module	Erase all existing keys.
Instrument cluster control module	Key programming
Instrument cluster control module	Odometer calibration
Instrument cluster control module	Service interval reset

System	Special Func
Instrument cluster control module	Steering column calibration
Instrument cluster control module	Tire size (rolling circumference)
Instrument cluster control module	Vehicle reset
Instrument cluster control module	Verify keys
Keyless vehicle module	Add additional keys
Keyless vehicle module	Check all antennas
Keyless vehicle module	Check passive keys enabled
Keyless vehicle module	Immobilizer antenna unit functionality check
Keyless vehicle module	Recover programmed keys
Keyless vehicle module	Replace faulty/lost keys
Keyless vehicle module	Verify keys
Parking brake control module	Longitudinal accelerometer sensor calibration
Parking brake control module	Parking brake activation
Parking brake control module	Parking brake pad replacement - Exit maintenance mode application
Parking brake control module	Parking brake release to service position
Passenger's door module	Passenger's side - Door glass window calibration
Passenger's seat module	Passenger's seat calibration
Powertrain control module	Air conditioning system adaption reset
Powertrain control module	Check the engine oil level
Powertrain control module	Diesel fueling adaption re-initialization
Powertrain control module	Diesel particulate filter condition (stored values)
Powertrain control module	Diesel particulate filter differential pressure sensor replacement
Powertrain control module	Diesel particulate filter dynamic regeneration
Powertrain control module	Diesel particulate filter fuel related component replacement
Powertrain control module	Diesel particulate filter replacement
Powertrain control module	Display injector correction factors
Powertrain control module	Engine control module unlock application
Powertrain control module	Exhaust gas recirculation valve
Powertrain control module	Fuel lift pump
Powertrain control module	Fuel prime routine
Powertrain control module	High pressure injection pump replacement
Powertrain control module	Idle speed adjustment
Powertrain control module	Idle speed test
Powertrain control module	Injector replacement
Powertrain control module	Injector valve test
Powertrain control module	OBDII readiness tests
Powertrain control module	Oil service counter reset
Powertrain control module	Oxidation catalyst
Powertrain control module	Oxygen sensor
Powertrain control module	Powertrain control module adaption clear
Powertrain control module	Purge valve self test
Powertrain control module	Reset oil level
Powertrain control module	Reset water in fuel detection
Powertrain control module	Rest of world - Service interval options
Powertrain control module	Service history data
Powertrain control module	Service interval reset
Powertrain control module	Throttle valve actuator
Powertrain control module	Turbine shut-off valve

System	Special Func
Rear differential control module	Control module calibration
Rear gate / trunk module	Tailgate/trunk calibration
Rear left - Seat module	Rear seat calibration - Right
Rear right - Seat module	Rear seat calibration - Left
Restraints control module	Passenger restraint disable switch
Restraints control module	Restraints build mode
Restraints control module	Seat cushion replacement
Restraints occupant classification system module	Seat cushion replacement
Safety belt pretensioner control module A - drivers side	Clear module learn data - SPMA
Safety belt pretensioner control module A - drivers side	Dynamic safety belt retract and release - SPMA
Safety belt pretensioner control module B - passengers side	Clear module learn data - SPMB
Safety belt pretensioner control module B - passengers side	Dynamic safety belt retract and release - SPMB
Side object detection control module - Left	Side object detection configuration - Left
Side object detection control module - Left	Side object detection module history - L
Side object detection control module - Right	Side object detection configuration - Right
Side object detection control module - Right	Side object detection module history - R
Speed control module	Driver's side - Door glass window calibration
Speed control module	Speed control alignment
Speed control module	Speed control internal state
Television module	Front control display interface module - Graphics update
Tire pressure monitor module	Tire pressure monitor confirmation application
Tire pressure monitor module	Tire pressure monitor receiver calibration
Tire pressure monitor module	Tire pressure monitor sensor identification display
Tire pressure monitor module	Tire pressure sensor replacement
Transmission control module	Paddle shift configuration
Transmission control module	Transmission control module adaption clear
ABS control module	Brake bleed
ABS control module	Lateral accelerometer calibration
ABS control module	Pressure sensor calibration
ABS control module	Steering angle sensor calibration
ABS control module	Yaw rate sensor calibration
Adaptive damping control module	Build mode
Adaptive damping control module	Calibration learn
Audio amplifier module	Calibrate dynamic volume control
Audio front control module	DVD region counter reset
Audio front control module	Navigation reset
Auxiliary junction box (body control module B)	Battery replacement
Auxiliary junction box (body control module B)	Fuel pump supply - Enable/disable
Auxiliary junction box (body control module B)	Transportation mode
Body control module	Battery replacement
Body control module	Fuel pump supply - Enable/disable
Body control module	Steering column calibration
Body control module	Sunroof calibration
Body control module	Tire pressure monitor confirmation application
Body control module	Tire pressure sensor replacement
Body control module	Transportation mode

System	Special Func
Body control module	Valet mode reset
Central junction box (body control module)	Alarm trigger history
Chassis control module	Air suspension deflation
Chassis control module	Air suspension inflation
Chassis control module	Height calibration
Chassis control module	Set/un-set air suspension geometry set-up
Chassis control module	Set/un-set air suspension manufacturing/freeze mode
Chassis control module	Set/un-set air suspension tight tolerance mode (headlamp setting)
Driver's seat module	Driver's seat calibration
Electronic parking brake	Parking brake release to service position
Front control/display interface module (high level display front)	Mirror personalisation features
Gateway module	Battery replacement
Gateway module	Quiescent current control module internal check
Gateway module	Test dual battery system
Gateway module	Verify secondary battery charging
Headlamp control module	Headlamp and axle sensor calibration
Headlamp control module	Headlamp control module system calibration
Heating ventilation and air conditioning control module	Driver's side - Door glass window calibration
Heating ventilation and air conditioning control module	Evaporator and heater test
Heating ventilation and air conditioning control module	Stepper motor initialization
Heating ventilation and air conditioning control module	Vent actuators test
Impact classification system	Pedestrian impact crash status reset
Instrument cluster control module	Erase all existing keys.
Instrument cluster control module	Key programming
Instrument cluster control module	Odometer calibration
Instrument cluster control module	Service interval reset
Instrument cluster control module	Steering column calibration
Instrument cluster control module	Tire size (rolling circumference)
Instrument cluster control module	Vehicle reset
Instrument cluster control module	Verify keys
Keyless vehicle module	Add additional keys
Keyless vehicle module	Check all antennas
Keyless vehicle module	Check passive keys enabled
Keyless vehicle module	Immobilizer antenna unit functionality check
Keyless vehicle module	Recover programmed keys
Keyless vehicle module	Replace faulty/lost keys
Keyless vehicle module	Verify keys
Parking brake control module	Longitudinal accelerometer sensor calibration
Parking brake control module	Parking brake activation
Parking brake control module	Parking brake pad replacement - Exit maintenance mode application
Parking brake control module	Parking brake release to service position
Passenger's door module	Passenger's side - Door glass window calibration
Passenger's seat module	Passenger's seat calibration
Powertrain control module	Air conditioning system adaption reset
Powertrain control module	Check the engine oil level

System	Special Func
Powertrain control module	Diesel fueling adaption re-initialization
Powertrain control module	Diesel particulate filter condition (stored values)
Powertrain control module	Diesel particulate filter differential pressure sensor replacement
Powertrain control module	Diesel particulate filter dynamic regeneration
Powertrain control module	Diesel particulate filter fuel related component replacement
Powertrain control module	Diesel particulate filter replacement
Powertrain control module	Display injector correction factors
Powertrain control module	Engine control module unlock application
Powertrain control module	Exhaust gas recirculation valve
Powertrain control module	Fuel lift pump
Powertrain control module	Fuel prime routine
Powertrain control module	High pressure injection pump replacement
Powertrain control module	Idle speed adjustment
Powertrain control module	Idle speed test
Powertrain control module	Injector replacement
Powertrain control module	Injector valve test
Powertrain control module	OBDII readiness tests
Powertrain control module	Oil service counter reset